

## REMOVAL

### 1. REMOVE DRIVE BELTS, FLUID COUPLING AND WATER PUMP PULLEY

(See page CO-7)

### 2. LOOSEN CRANKSHAFT PULLEY

Using SST, loosen the pulley bolt.


SST 09213-58012 (90201-08131, 91111-50845),  
09330-00021

#### NOTICE:

If the timing belt is disengaged, having the crankshaft pulley at the wrong angle can cause the piston head and valve head to come into contact with each other when you remove the camshaft timing pulley causing damage.

### 3. REMOVE TIMING BELT AND TIMING PULLEYS

(See page EM-27)

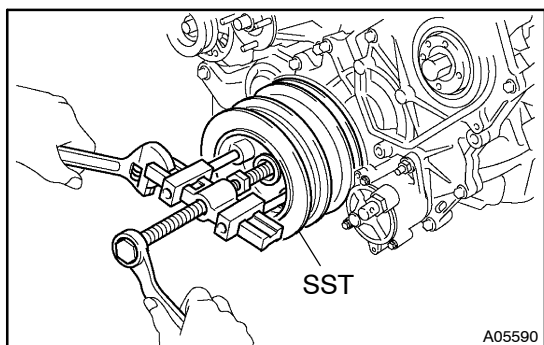

### 4. REMOVE CRANKSHAFT PULLEY

- (a) Remove the pulley bolt and plate washer.

#### NOTICE:

Do not turn the crankshaft pulley. The valve heads will hit against the piston top.


- (b) Using SST, remove the crankshaft pulley. The valve heads will hit against the piston top.

SST 09950-50010 (09951-05010, 09952-05010,  
09953-05010, 09953-05020, 09954-05020)

- (c) Remove the O-ring from the crankshaft pulley.

### 5. REMOVE OIL PIPE

- (a) Remove the 2 union bolts and 4 gaskets.  
(b) Remove the bolt and oil pipe.

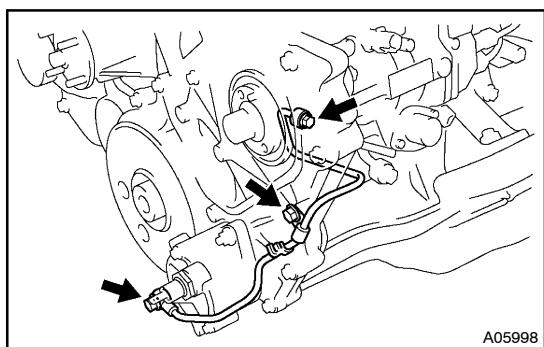

### 6. REMOVE VACUUM PUMP


- (a) Remove the 2 nuts and vacuum pump.  
(b) Remove the O-ring.


### 7. REMOVE CAMSHAFT OIL SEAL RETAINER

1HZ, 1HD-T: (See page EM-63)

1HD-FTE: (See page EM-91)


### 8. REMOVE NO.2 CYLINDER BLOCK INSULATOR

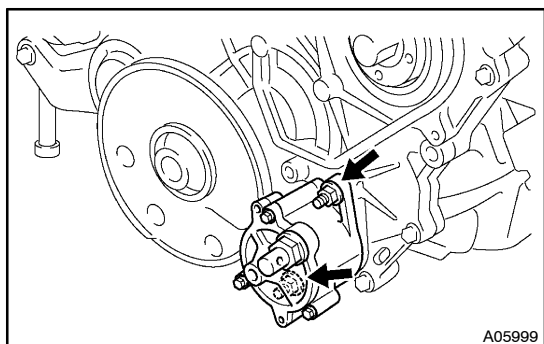

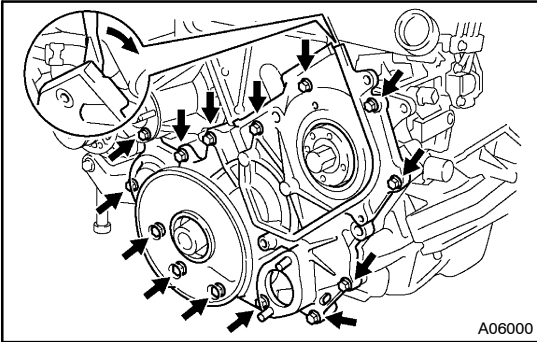

### 9. REMOVE TIMING GEAR COVER


- (a) Remove the 14 bolts.
- (b) Pry out the timing gear cover.

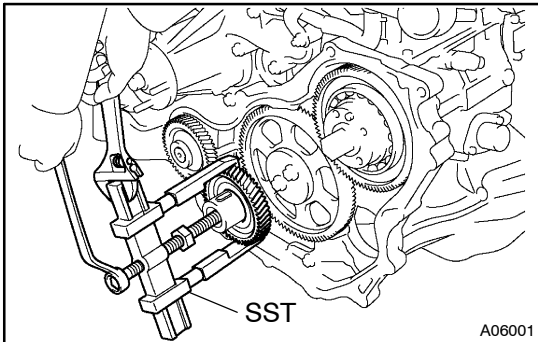

### 10. REMOVE OIL PUMP DRIVE SHAFT GEAR

Using SST, remove the drive shaft gear.

SST 09950 -40010 (09951 -04010, 09952 -04010, 09953 -04010, 09953 -04020, 09954 -04010, 09955 -04060)

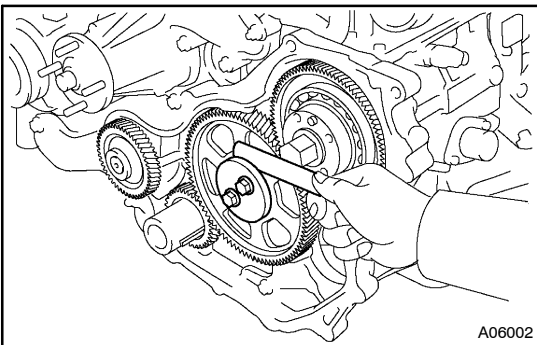

### 11. CHECK THRUST CLEARANCE OF IDLER GEAR

Using a feeler gauge, measure the thrust clearance.


**Standard thrust clearance:**

**0.05 - 0.15 mm (0.0020 - 0.0059 in.)**

**Maximum thrust clearance:**


**0.030 mm (0.0118 in.)**

If the thrust clearance is greater than maximum, replace the thrust plate. If necessary, replace the idler gear and/or idler gear shaft.

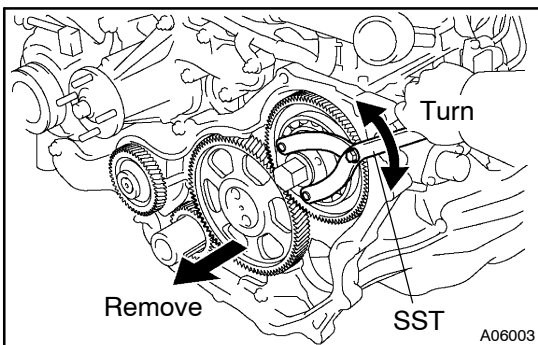


### 12. REMOVE IDLER GEAR

- (a) Remove the 2 bolts and thrust plate.
- (b) Using SST, turn the injection pump drive gear clockwise or counterclockwise and remove the idler gear.  
SST 09960 -10010 (09962 -01000, 09963 -00700)
- (c) Remove the idler gear shaft.

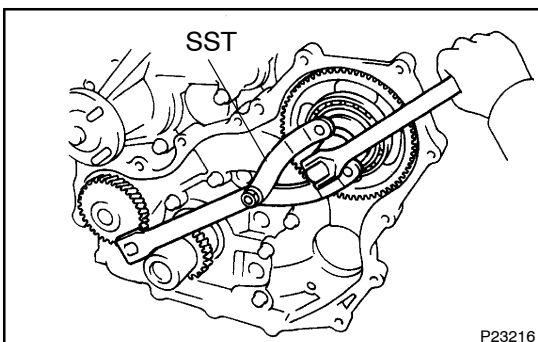


### 13. REMOVE INJECTION PUMP DRIVE GEAR

- (a) Using SST, loosen the gear nut.  
SST 09960 -10010 (09962 -01000, 09963 -00700)
- (b) Remove the gear nut and O-ring.

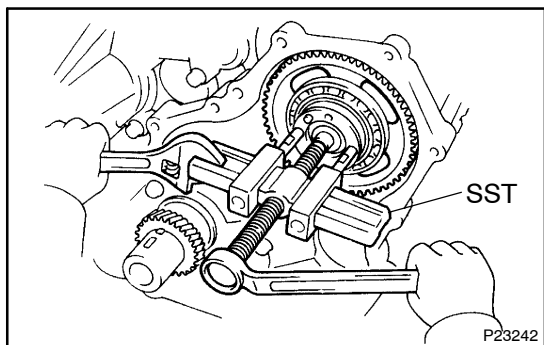

- (c) Using SST, remove the drive gear.  
SST 09950 -50010 (0995 1-05010, 09952 -05010,  
09953-05010, 09954 -05020)

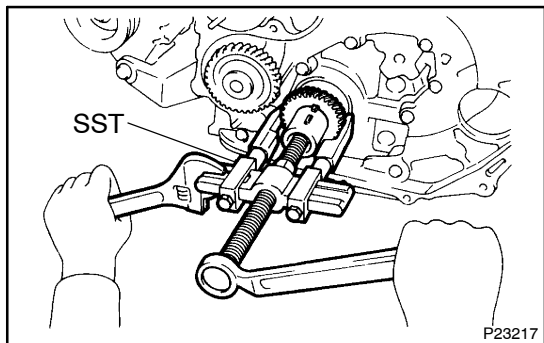

#### 14. REMOVE CRANKSHAFT TIMING GEAR

Using SST, remove the timing gear.

SST 09950 -40010 (0995 1-04010, 09952 -04010,  
09953-04020, 09954 -04010, 09955 -04060)