


## Light control switch circuit


### WIRING DIAGRAM

LHD Models:

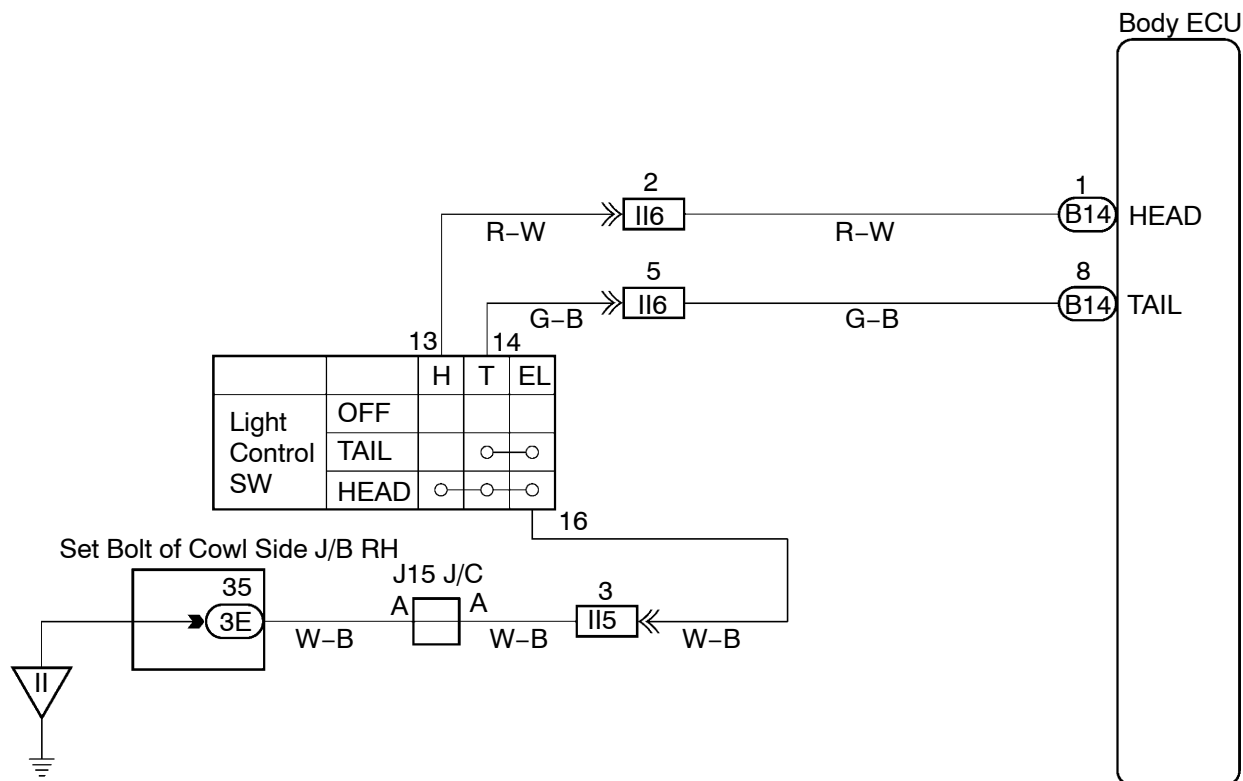

H

I25777

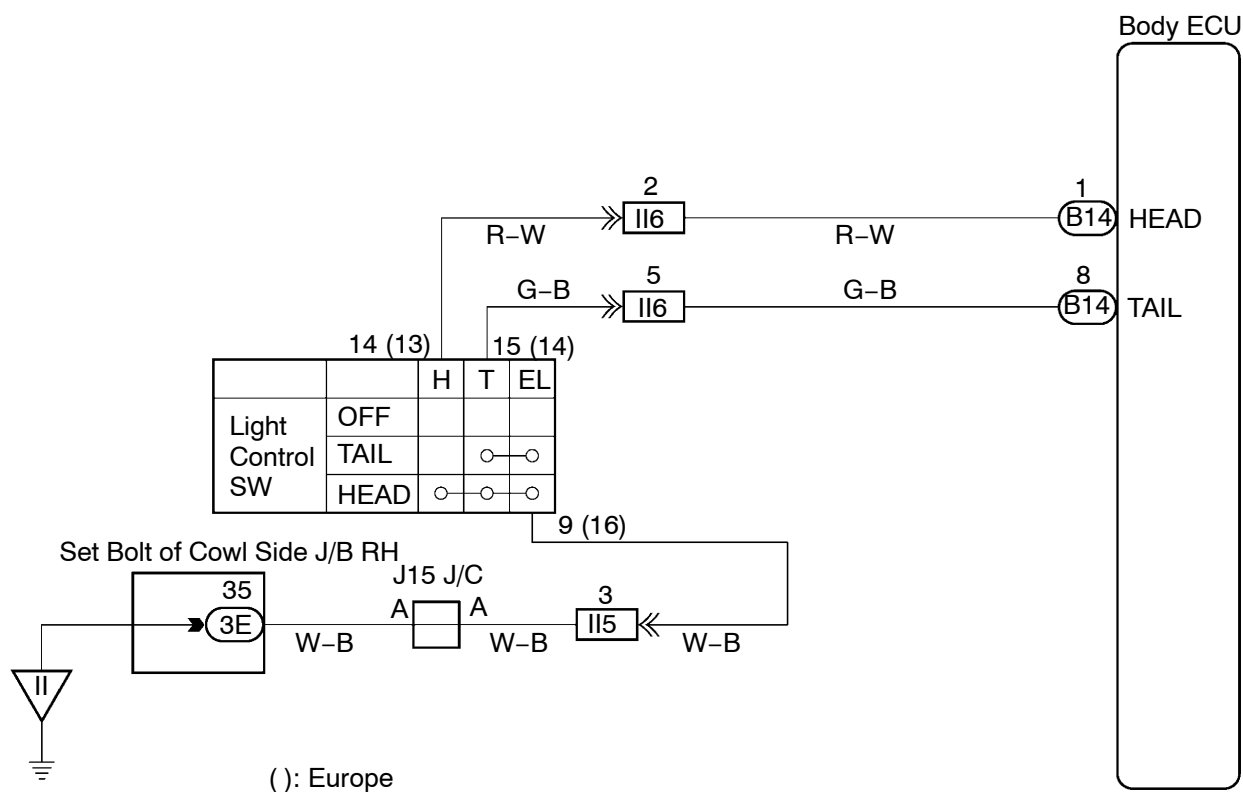**RHD Models:**

H

I25777

**INSPECTION PROCEDURE****HINT:**

In case of using the hand-held tester, start the inspection from step 1 and in case of not using the hand-held tester, start from step 2.

**1 Check light control switch using hand-held tester.**

**PREPARATION:**

Connect the hand-held tester to DLC 3.

**CHECK:**

Check that the light control switch operate in ACTIVE LIST (See page DI-981).

OK

Proceed to next circuit inspection shown on problem symptoms table (See page DI-992).

NG

**2** Check headlight control switch ([See page BE-23](#)).

NG

Replace the headlight control switch.

OK

**3** Check wire harness and connector between headlight control switch and Body ECU ([See page IN-38](#)).

NG

Repair or replace wire harness or connector.

OK

Proceed to next circuit inspection shown on problem symptoms table ([See page DI-992](#)).