


## Jam protection limit / pulse switch circuit on rear left door

### CIRCUIT DESCRIPTION

The rear LH power window switch receives the power window switch signal from the switch to operate the power window motor.

### WIRING DIAGRAM

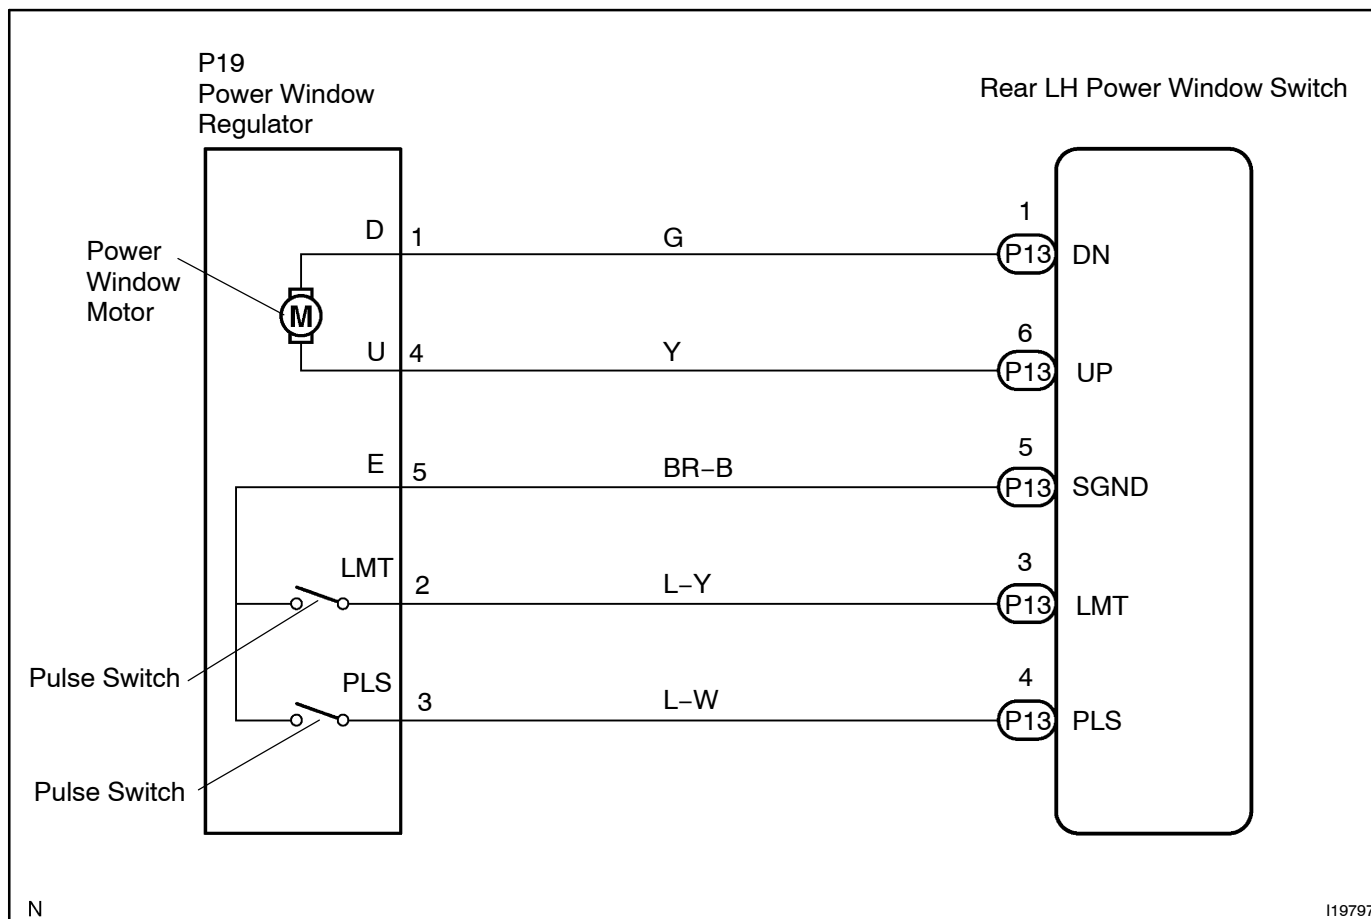

## INSPECTION PROCEDURE

- |   |   |
|---|---|
| 1 | Check jam protection limit / pulse switch ( <a href="#">See page BE-51</a> ). |
|---|---|

NG

Replace power window motor.

OK

- |   |   |
|---|---|
| 2 | Check wire harness and connector between power window motor and power window switch ( <a href="#">See page IN-38</a> ). |
|---|---|

NG

Repair or replace wire harness or connector.

OK

Replace Power window switch.