



DISASSEMBLY

1. REMOVE REAR BALL BEARING

- (a) Using a snap ring expander, remove the snap ring.

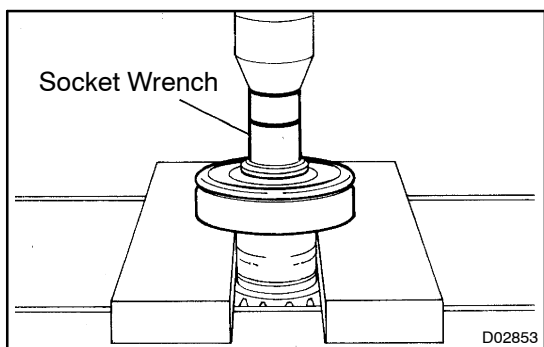

- (b) Using a socket wrench and press, remove the rear ball bearing.

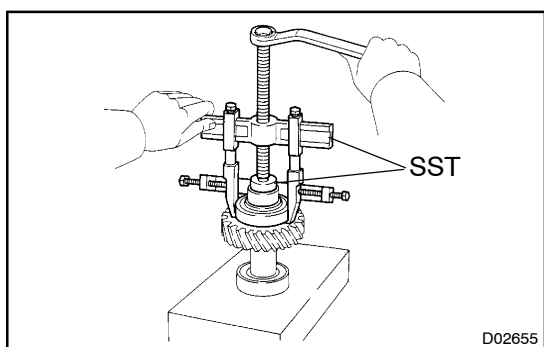

2. REMOVE FRONT BALL BEARING

- (a) Using a snap ring expander, remove the snap ring.
- (b) Using SST, remove the front ball bearing.
 SST 09950 -40011 (09951 -04020, 09952 -04010,
 09953 -04030, 09954 -04010, 09955 -04010,
 09957 -04010, 09958 -04010), 09950 -60010
 (09951 -00400)