


## DRL relay circuit

## WIRING DIAGRAM

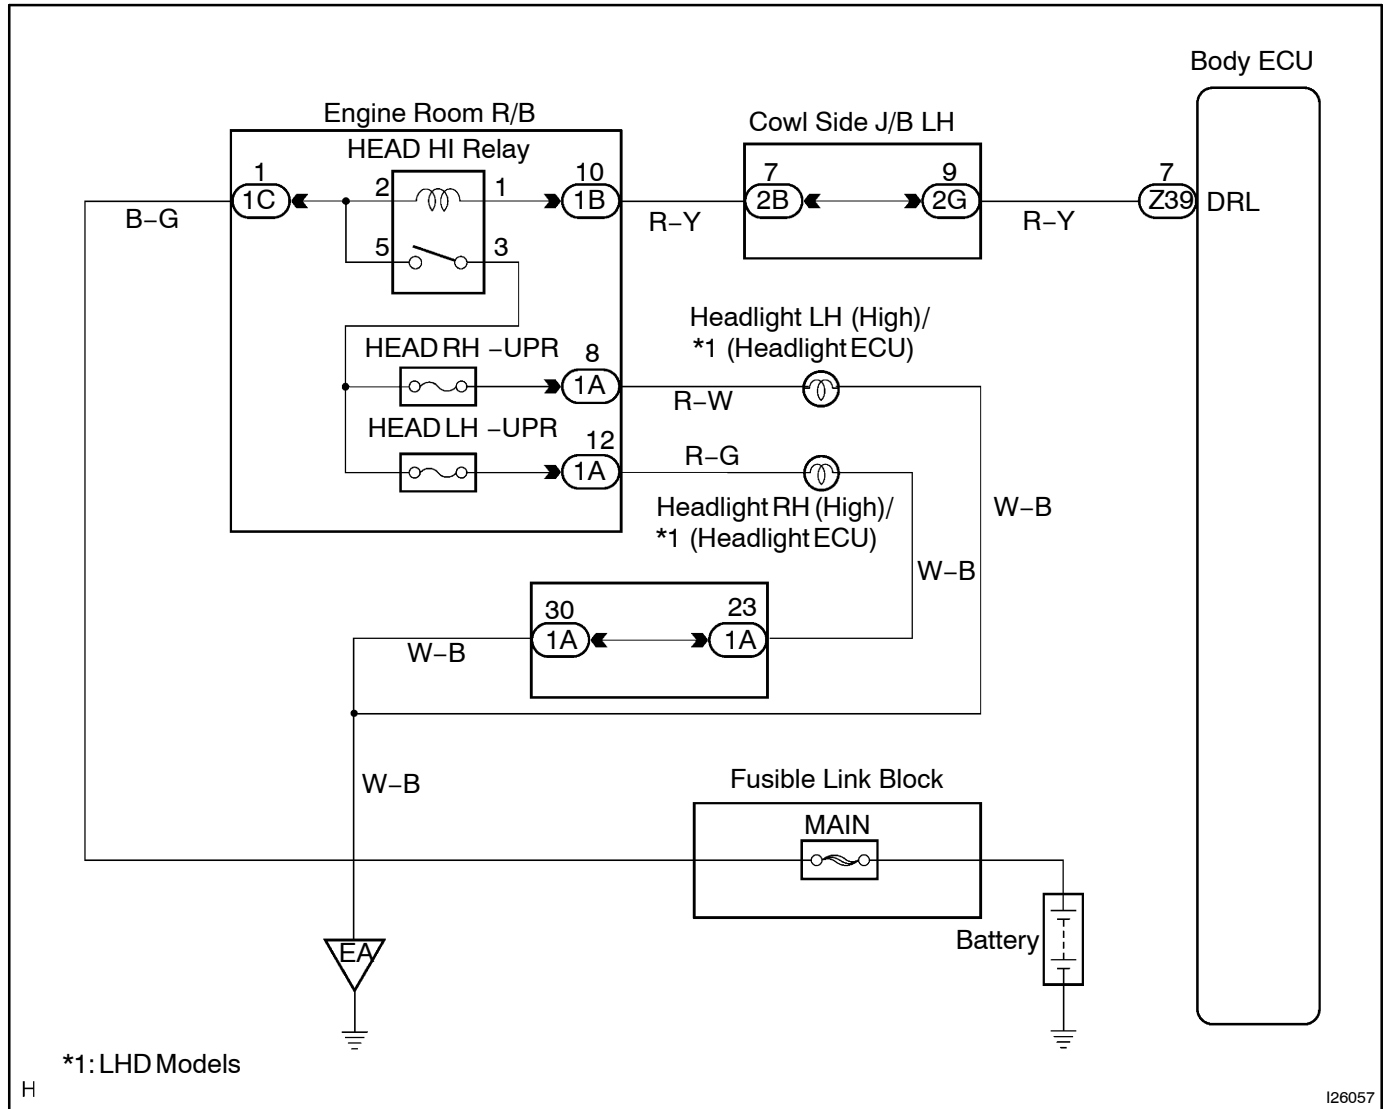

## INSPECTION PROCEDURE

### HINT:

In case of using the hand-held tester, start the inspection from step 1 and in case of not using the hand-held tester, start from step 2.

1	Check DRL relay using hand-held tester.
---	---

### PREPARATION:

Connect the hand-held tester to DLC 3.

### CHECK:

Check that the DRL relay operate in ACTIVE TEST ([See page DI-981](#)).

OK

Proceed to next circuit inspection shown on problem symptoms table ([See page DI-992](#)).

NG

2	Check DRL relay ( <a href="#">See page BE-23</a> ).
---	---

NG

Replace the DRL relay.

OK

3	Check wire harness and connector between DRL relay and Body ECU ( <a href="#">See page IN-38</a> ).
---	---

OK

Repair or replace wire harness or connector.

OK

Proceed to next circuit inspection shown on problem symptoms table ([See page DI-992](#)).