


WIRING DIAGRAM

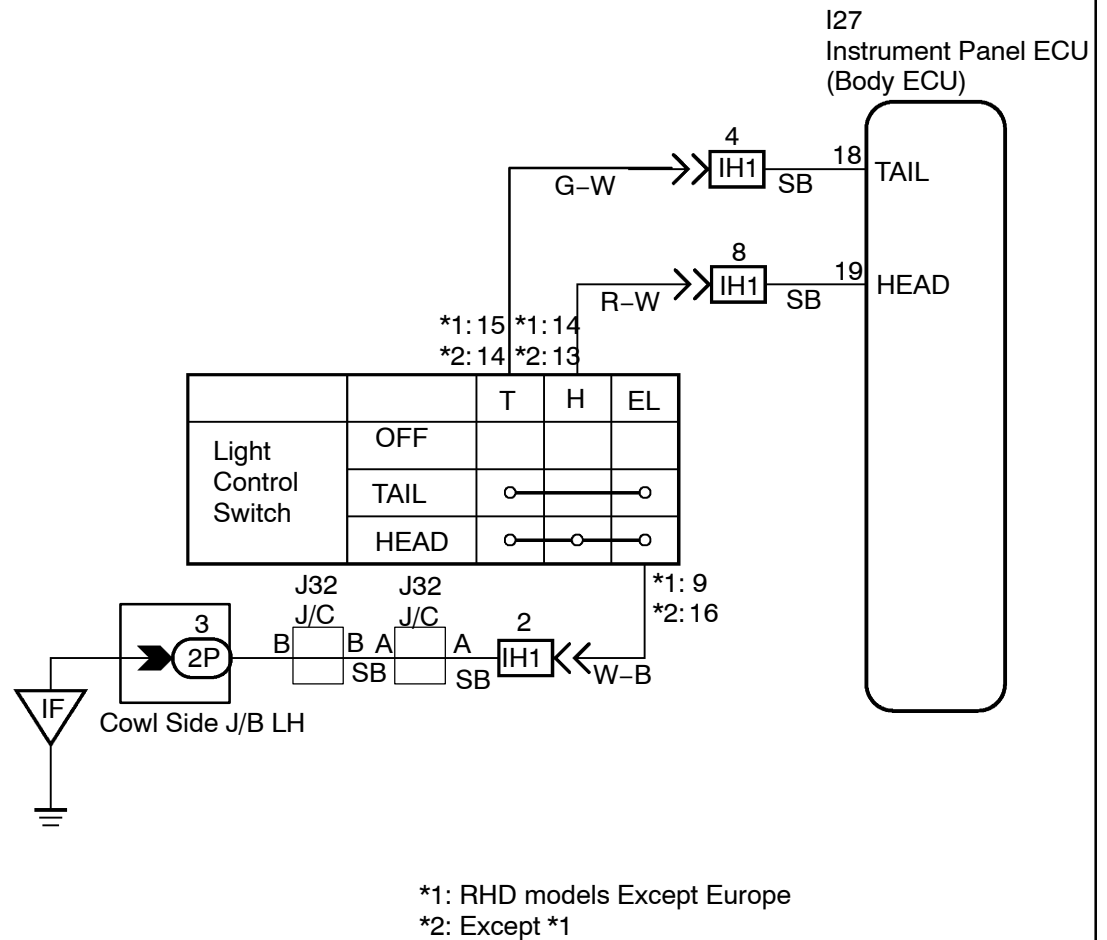

INSPECTION PROCEDURE

- | | |
|---|--|
| 1 | Check headlight control switch (See page BE-26). |
|---|--|

NG

Replace the headlight control switch.

OK

- | | |
|---|--|
| 2 | Check wireharness and connector between headlight control switch and Body ECU. |
|---|--|

NG

Repair or replace wireharness or connector.

OK

Proceed to next circuit inspection shown on problem symptoms table. (See page DI-773)
--