


FUEL TANK AND LINE COMPONENTS


B01XJ-01

w/o Sub -Fuel Tank:

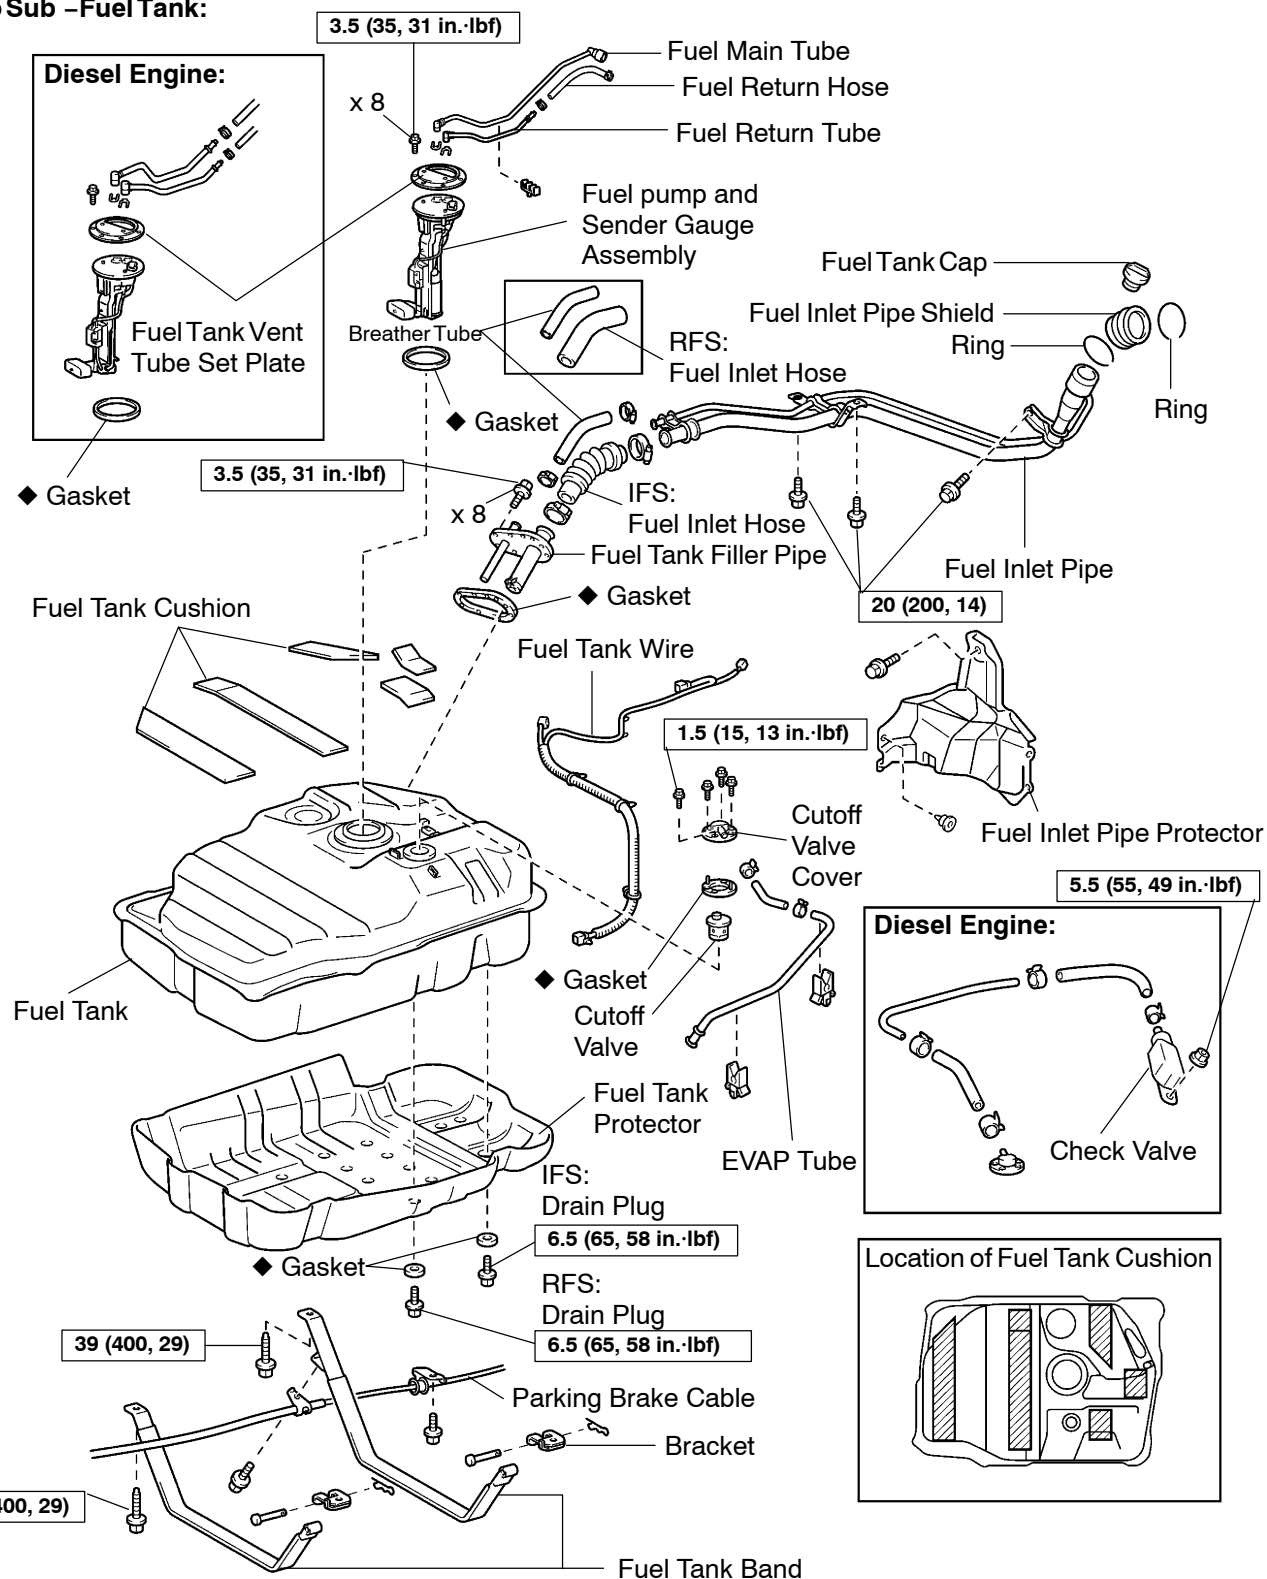

H05711

w/ Sub -Fuel Tank:

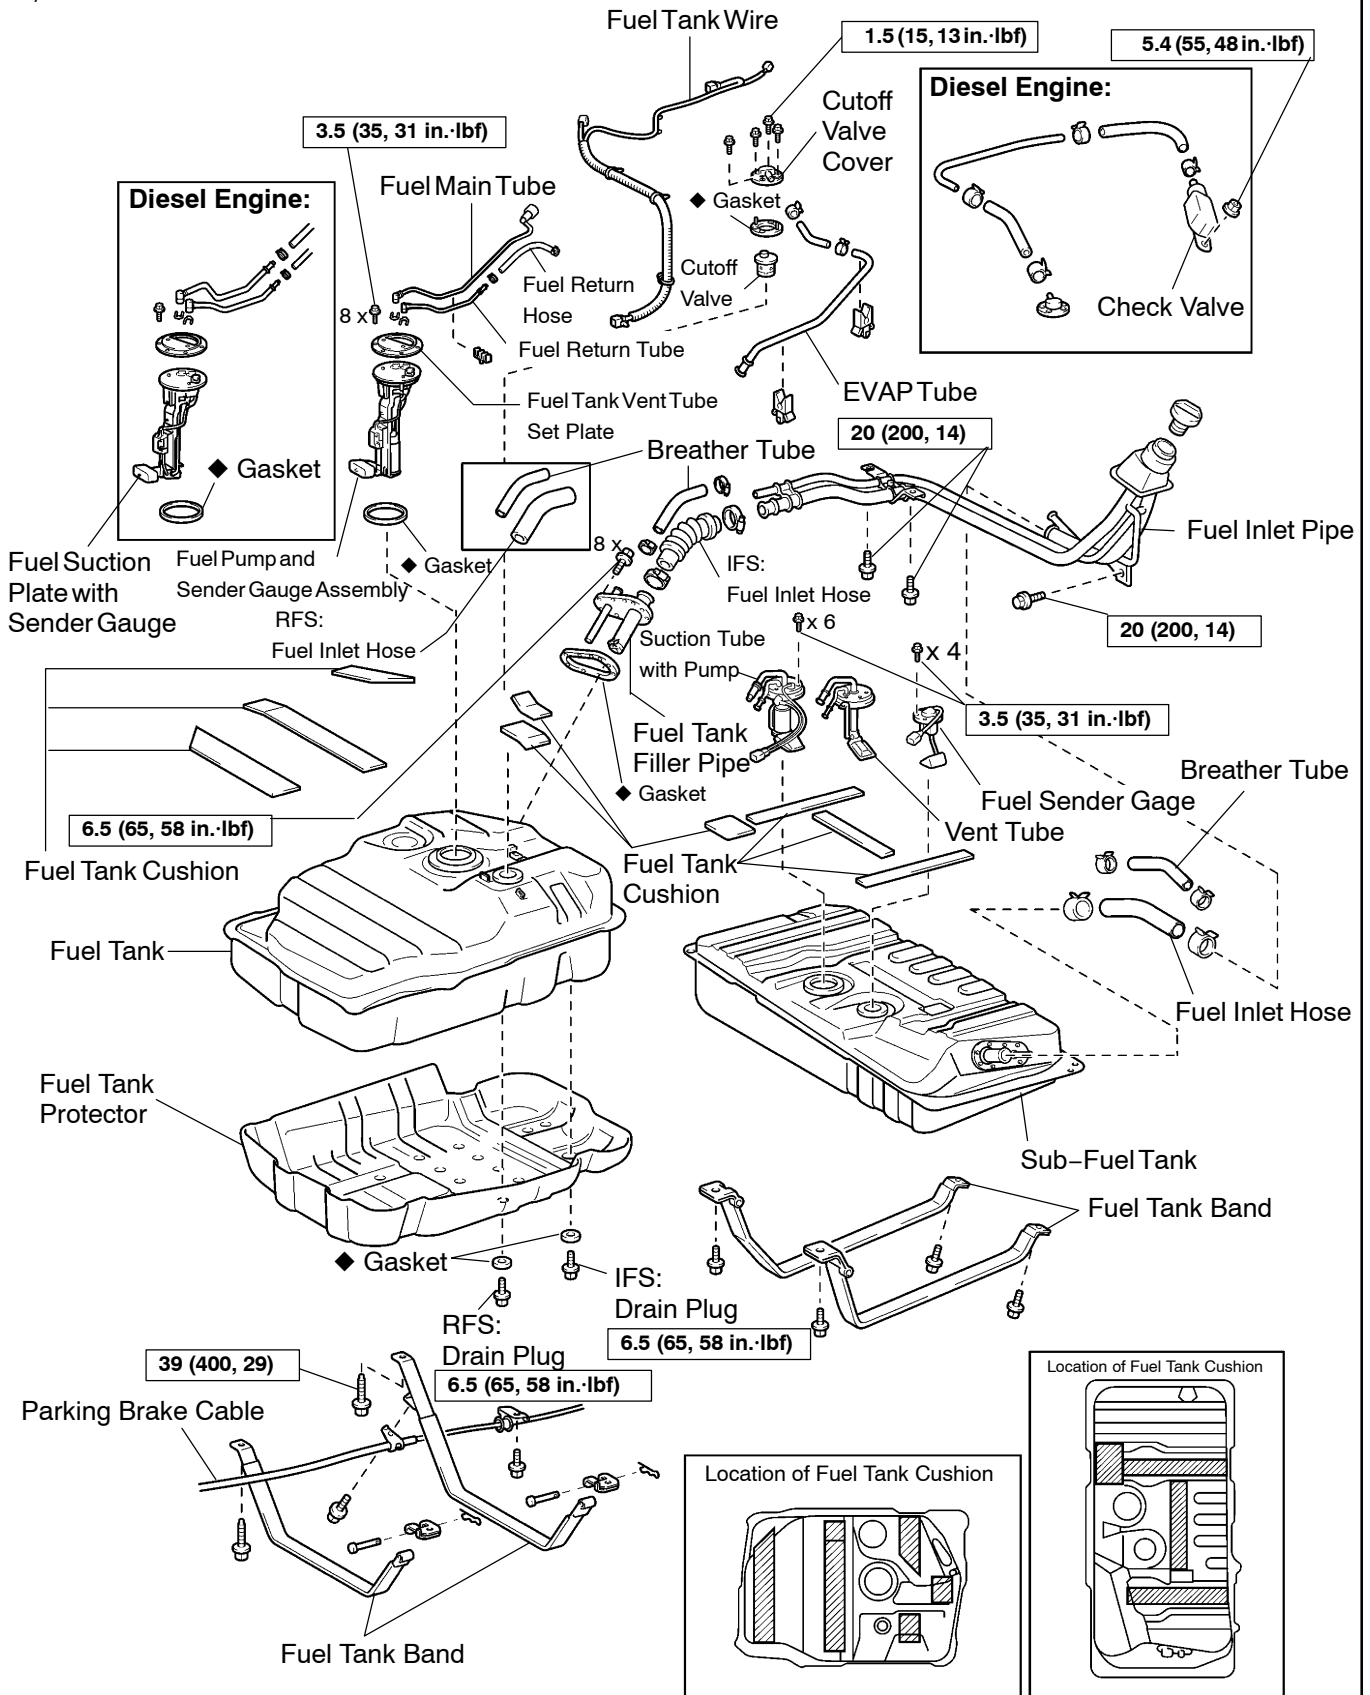

N·m (kgf·cm, ft·lbf) : Specified torque

◆ Non-reusable part