


DTC	B2798/99	Communication malfunction No.2
-----	----------	--------------------------------

CIRCUIT DESCRIPTION

DTC No.	DTC Detecting Condition	Trouble Area
B2798/99	Communication error	<ul style="list-style-type: none">• Key• Transponder Key Coil• Transponder Key Amplifier• Wire harness• Engine and ECT ECU

WIRING DIAGRAM

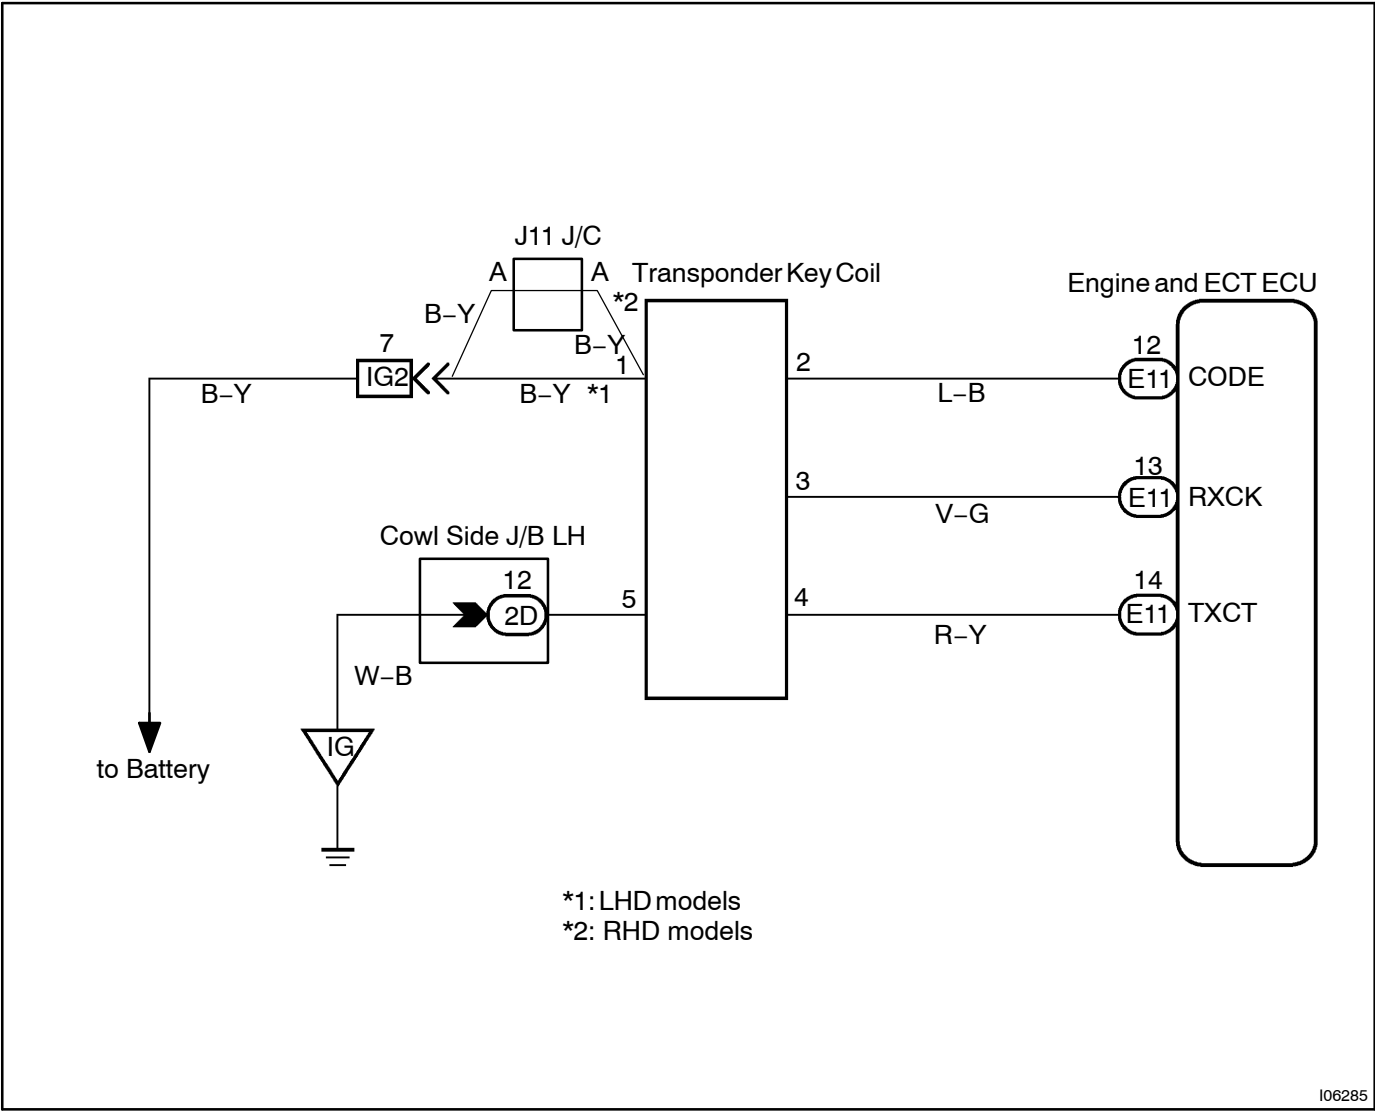

INSPECTION PROCEDURE

1 Check transponder key coil ([See page BE-175](#)).

NG

Replace transponder key coil.

OK

2 Check harness and connector between transponder key amplifier and Engine and ECT ECU.

NG

Repair or replace harness and connector.

OK

3 Does the system operate normally after replacement of transponder key amplifier?

Yes

Replace transponder key amplifier.

No

Replace Engine and ECT ECU.