


## Stop light switch circuit

### CIRCUIT DESCRIPTION

The Body ECU is detecting the condition of the stop light switch.

### WIRING DIAGRAM

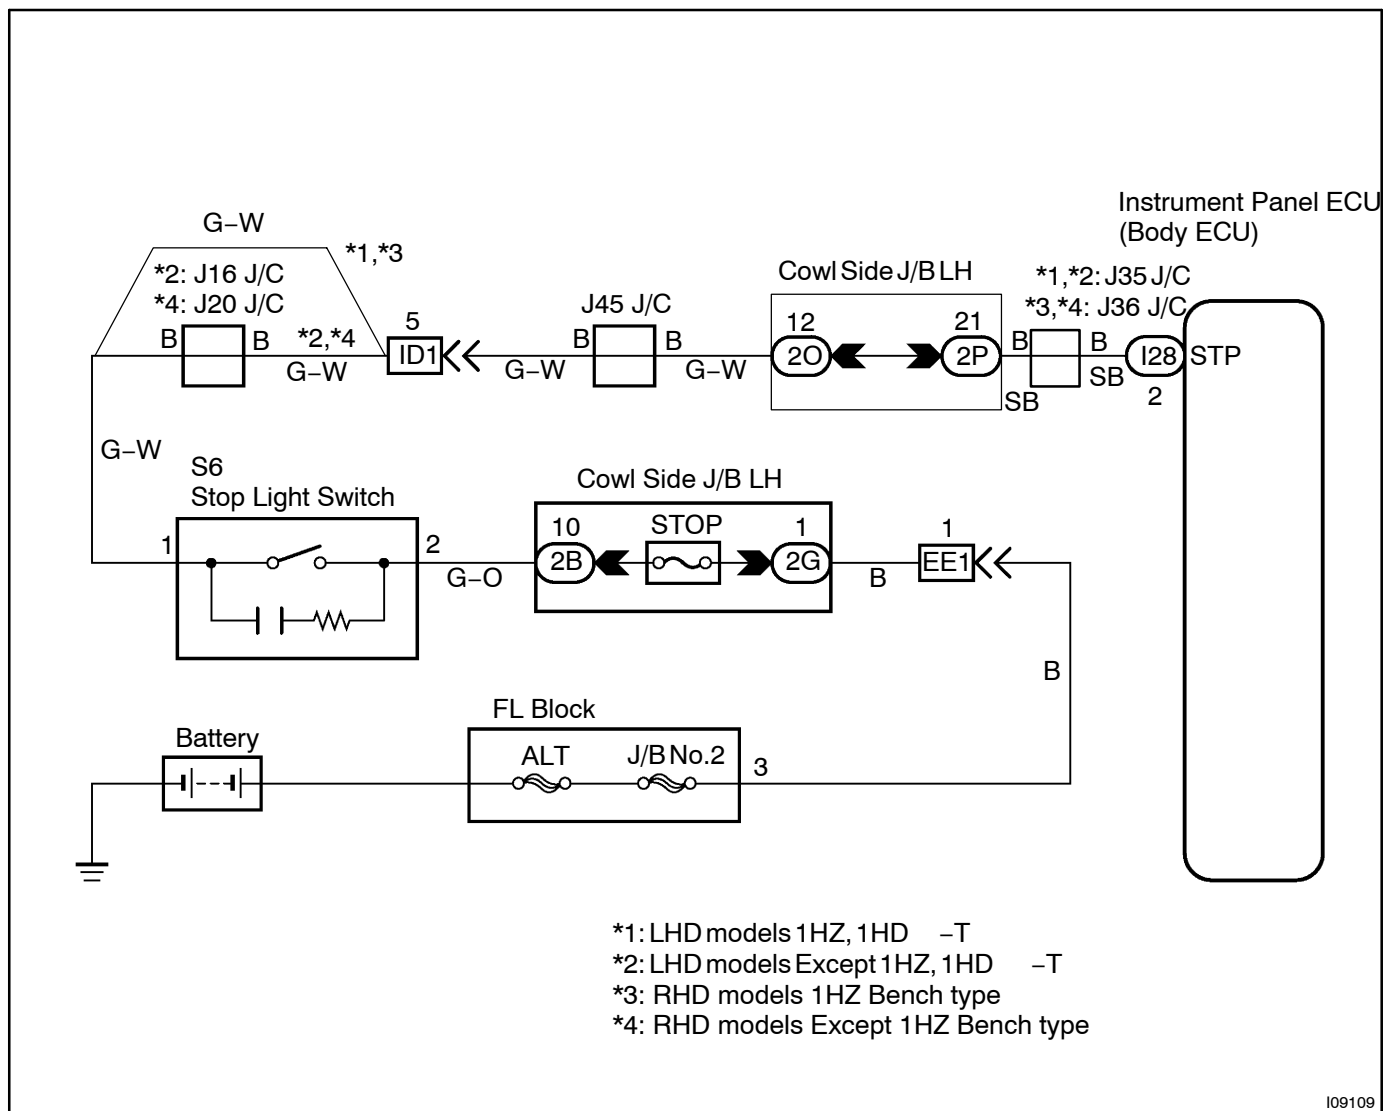

**INSPECTION PROCEDURE**

**1** Check stop light switch. (See page BE-58)

**NG**

Replace the stop light switch.

**OK**

**2** Check wireharness and connector between stop light switch and Body ECU, battery and stop light switch.

**NG**

Repair or replace wireharness or connector.

**OK**

Proceed to next circuit inspection shown on  
problem symptoms table.  
(See page DI-773)