


<b>DTC</b>	<b>C 1257 / 57</b>	<b>Power Supply Drive Circuit</b>
------------	--------------------	-----------------------------------

## CIRCUIT DESCRIPTION

DTC No.	DTC Detecting Condition	Trouble Area
C1257 / 57	When malfunction inside ECU is detected.	<ul style="list-style-type: none"> <li>Battery</li> <li>Power source circuit</li> <li>Skid control ECU</li> </ul>

## WIRING DIAGRAM

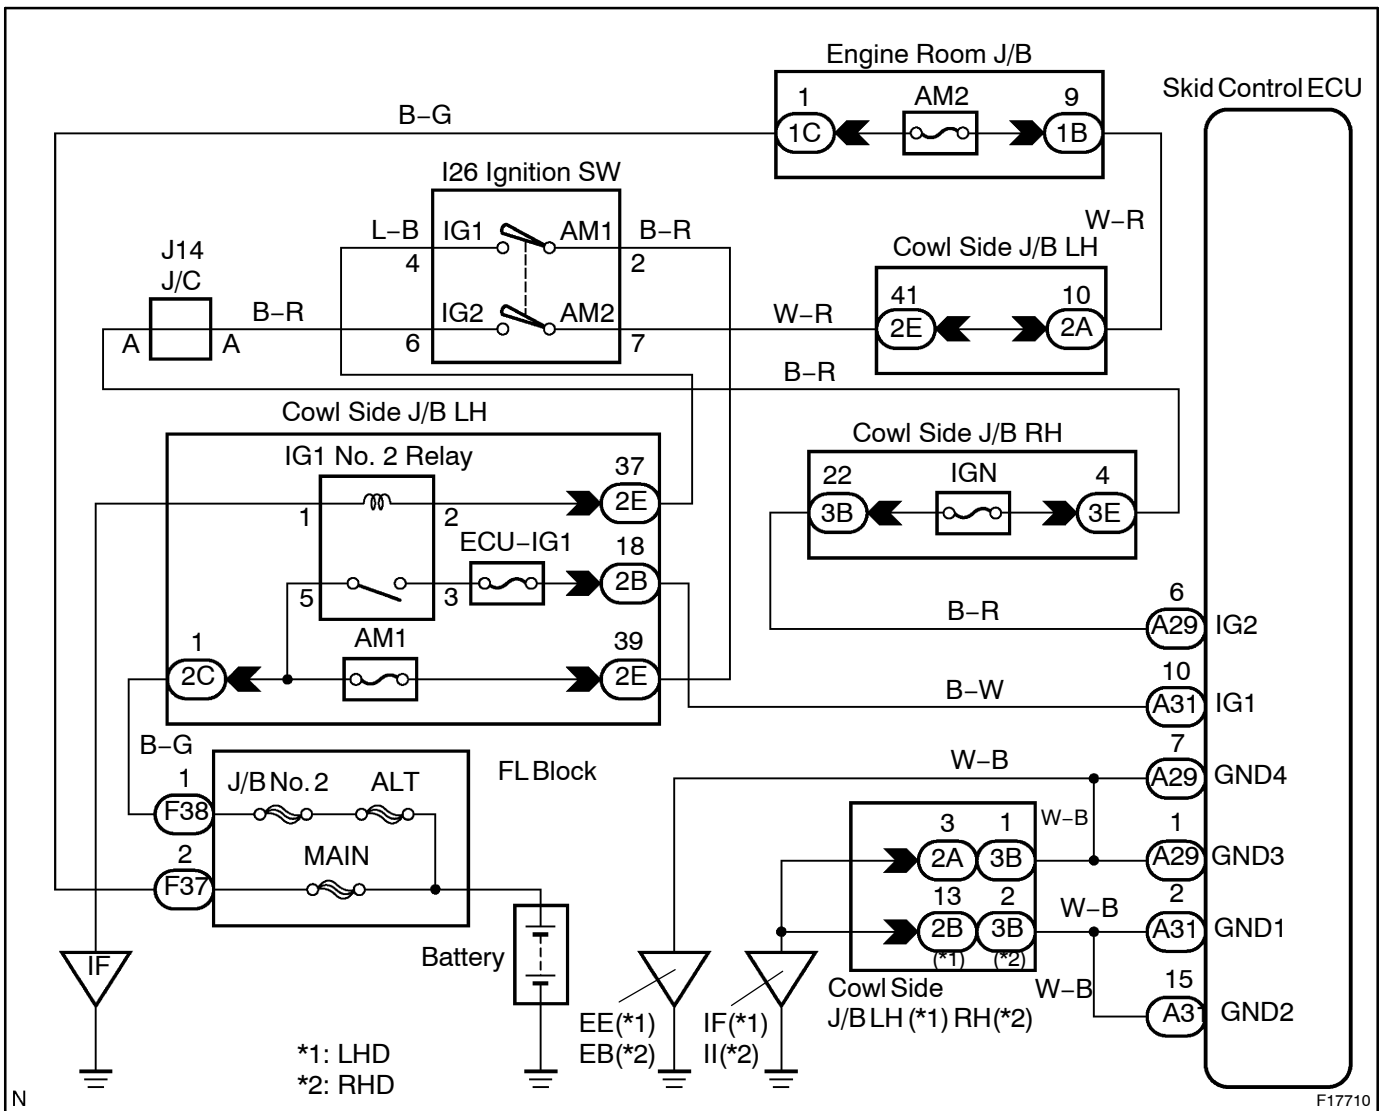

**INSPECTION PROCEDURE****1 Check battery voltage.****OK:**


Voltage: 10 – 14 V

**NG****Check and repair the charging system.****OK****2 Check voltage of the ECU IG power source.****In case of using the hand –held tester.****PREPARATION:**

- (a) Connect the hand –held tester to the DLC3.
- (b) Turn the ignition switch ON and push the hand –held tester main switch ON.
- (c) Select the DATALIST mode on the hand –held tester.

**CHECK:**

Check the voltage condition output from the ECU displayed on the hand –held tester.

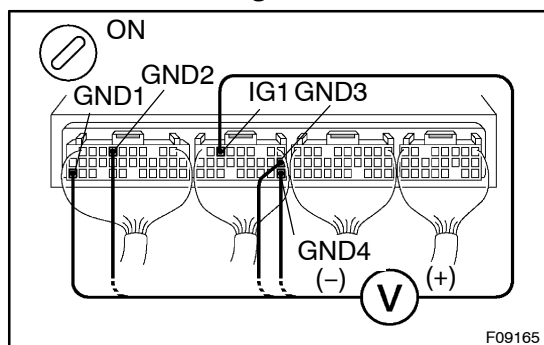**OK:****"Normal" is displayed.****In case of not using the hand –held tester:****PREPARATION:**

Remove skid control ECU with connectors still connected.

**CHECK:**


- (a) Turn the ignition switch ON.
- (b) Measure voltage between terminals IG1 and GND of skid control ECU connector.

**OK:**

Voltage: 10 – 14 V

**OK****Turn ignition switch OFF, check and replace skid control ECU.****NG**

**3 Check continuity between terminal GND of skid control ECU connector and body ground.**

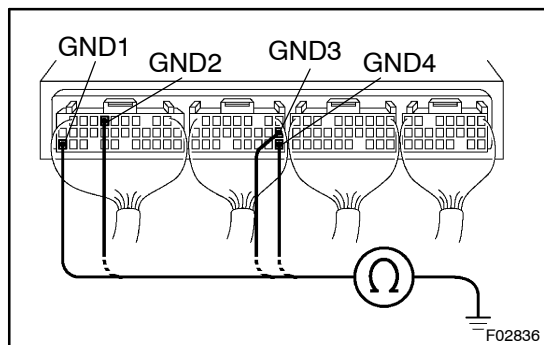

**CHECK:**

Measure resistance between terminal GND of skid control ECU connector and body ground.

**OK:**

**Resistance: 1 Ω or less**


**NG**

**Repair or replace harness or connector.**

**OK**

**4 Check ECU-IG fuse.**

**Cowl Side J/B LH:**

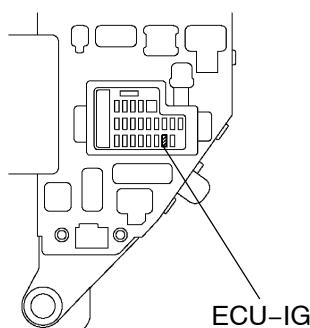

**PREPARATION:**

Remove ECU-IG fuse from the cowl side J/B LH.

**CHECK:**

Check continuity of ECU-IG fuse.

**OK:**

**Continuity**

**NG**

**Check for short circuit in all the harness and components connected to ECU-IG fuse (See attached wiring diagram).**

**OK**

**Check for open circuit in harness and connector between skid control ECU and battery (See page [IN-38](#)).**