



## Jam protection limit / pulse switch circuit on front RH door

### CIRCUIT DESCRIPTION

The front RH power window switch receives the power window switch signal from the switch to operate the power window motor.

### WIRING DIAGRAM

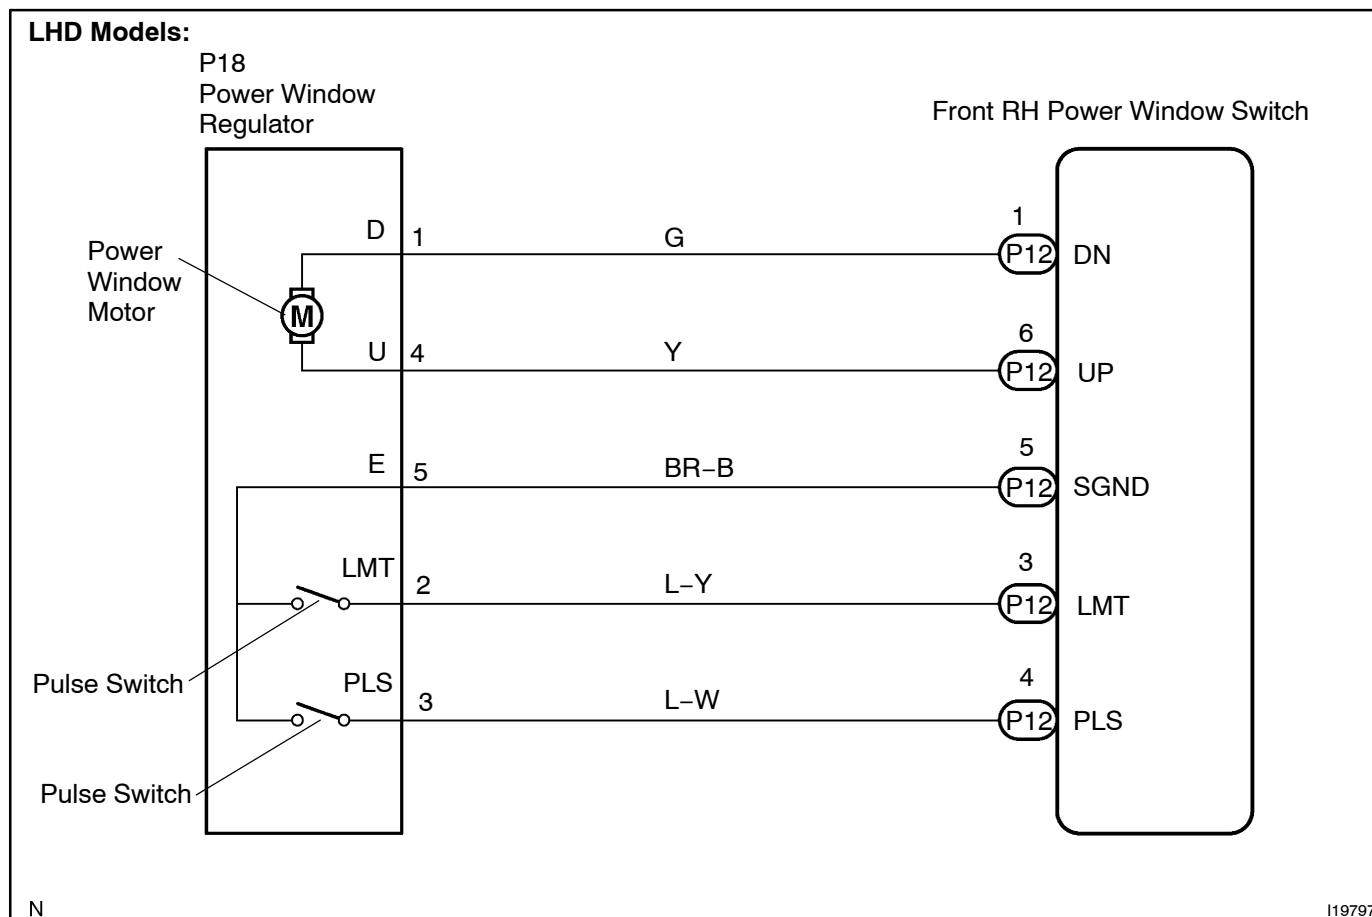

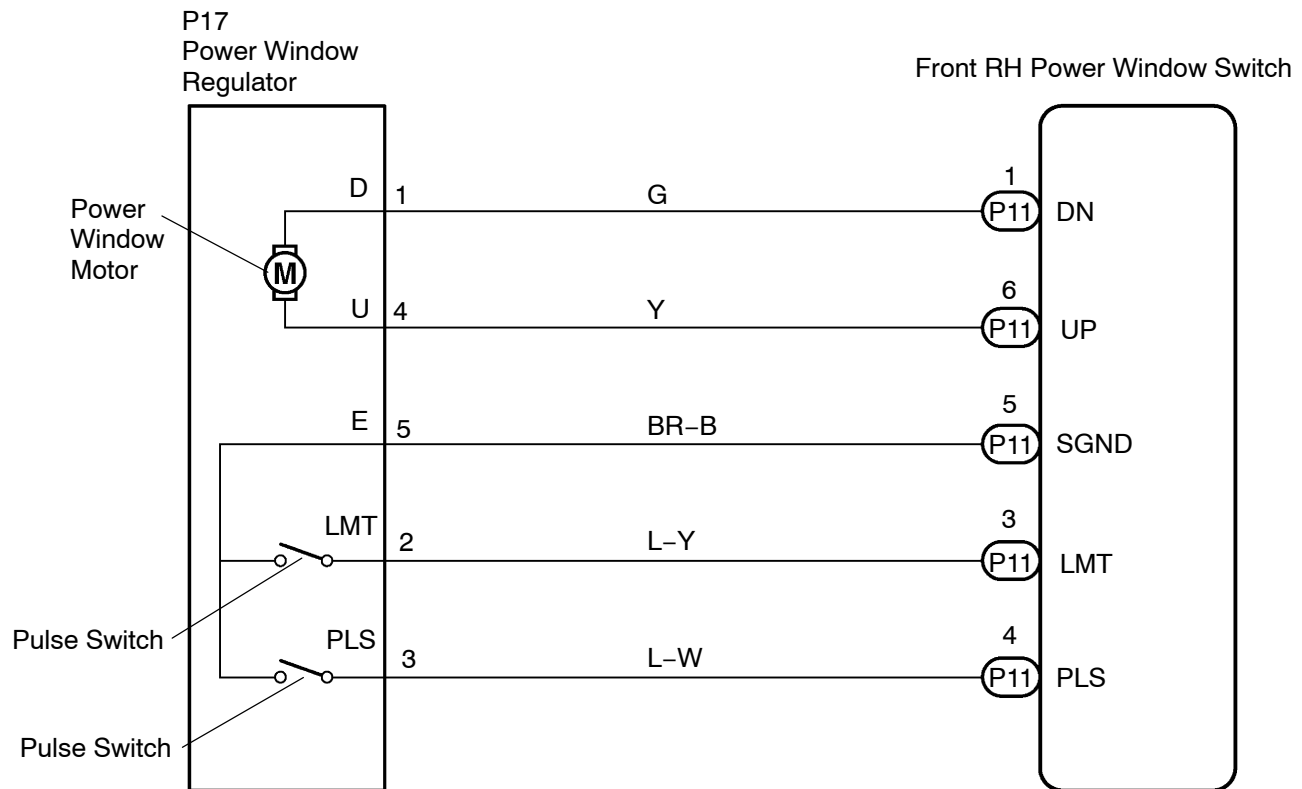**RHD Models:**

N

I19797

## INSPECTION PROCEDURE

- |   |   |
|---|---|
| 1 | Check jam protection limit / pulse switch ( <a href="#">See page BE-51</a> ). |
|---|---|

NG

Replace power window motor.

OK

- |   |   |
|---|---|
| 2 | Check wire harness and connector between power window motor and power window switch ( <a href="#">See page IN-38</a> ). |
|---|---|

NG

Repair or replace wire harness or connector.

OK

Replace Power window switch.