


ENGINE IMMOBILISER SYSTEM (2UZ -FE)

HOW TO PROCEED WITH TROUBLESHOOTING

DI1AJ-10

Troubleshoot in accordance with the procedure on the following pages.

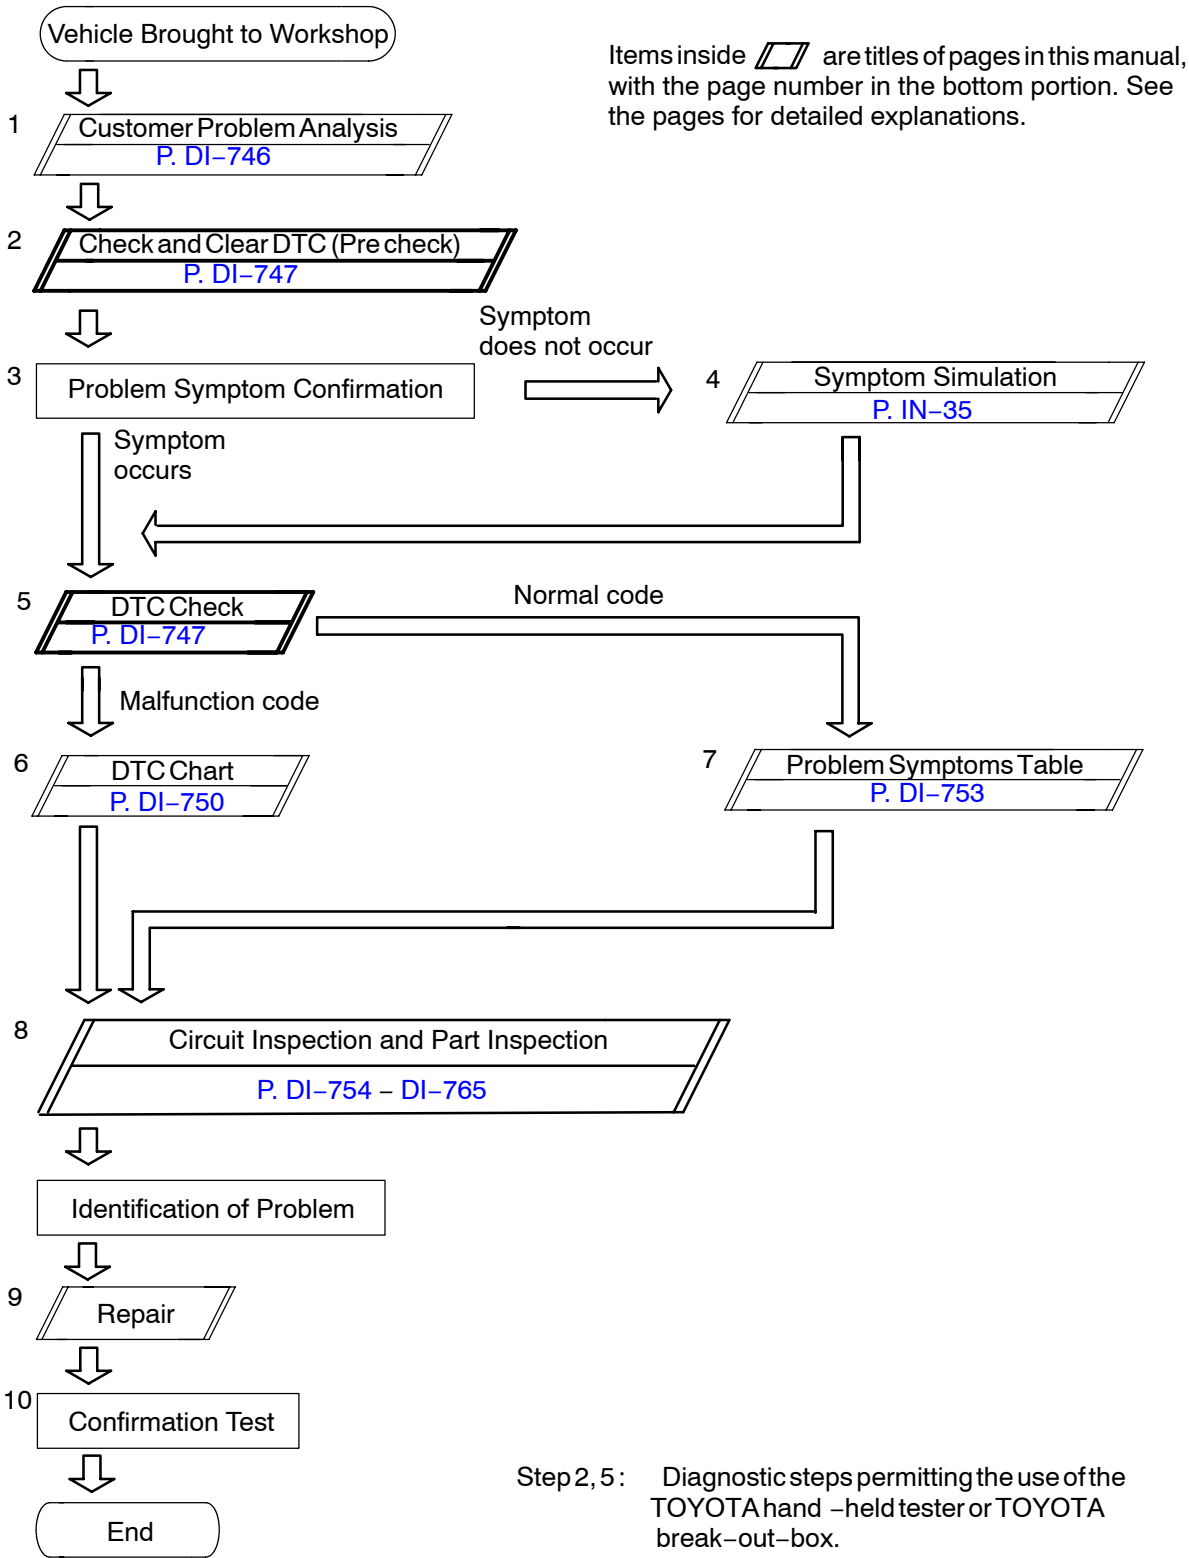

Step 2, 5: Diagnostic steps permitting the use of the TOYOTA hand -held tester or TOYOTA break-out-box.