


## Neutral Start Switch Circuit

### CIRCUIT DESCRIPTION

The neutral start switch detects the shift lever position P and sends signals to the Body ECU.

### WIRING DIAGRAM

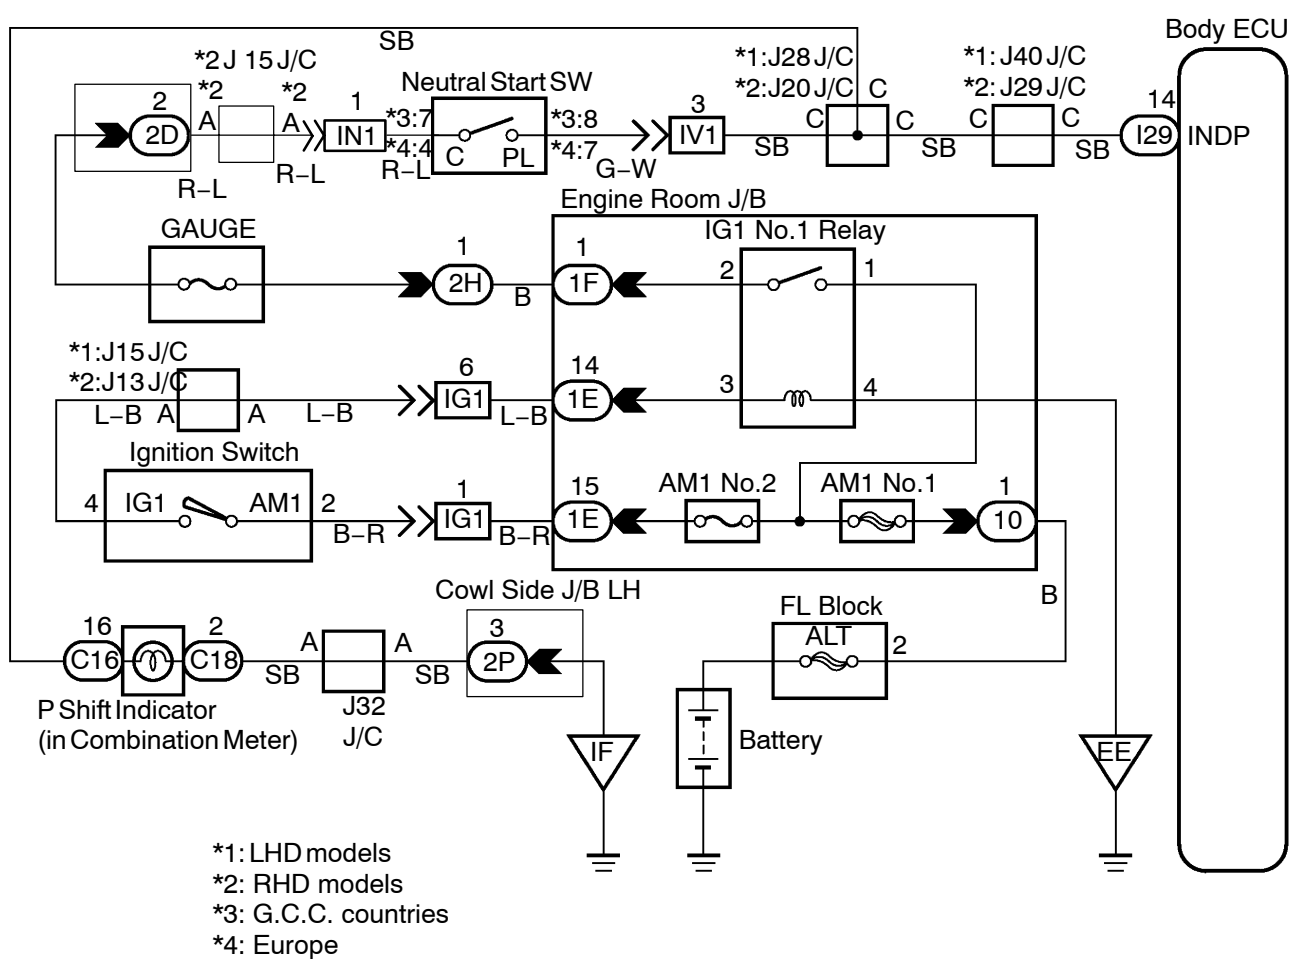

I08809

## INSPECTION PROCEDURE

1	Check A/T shift operation.
---	----------------------------

**CHECK:**

Check that the A/T shift operates normally.

NG

Proceed to AT troubleshooting.  
(A343F: [See page DI-1](#))  
(A442F: [See page DI-77](#))

OK

2	Check harness and connector between Body ECU and neutral start switch ( <a href="#">See page IN-35</a> ).
---	---

NG

Repair or replace harness or connector.

OK

Check and replace Body ECU ( <a href="#">See page IN-35</a> ).
--