


## INSTALLATION

### 1. INSTALL FLOOR SHIFT LEVER ASSEMBLY

- (a) Install the floor shift lever assembly with the 6 bolts.  
**Torque: 8.3 N·m (85 kgf·cm, 73 in·lbf)**
- (b) Connect the connector to the floor shift lever assembly.

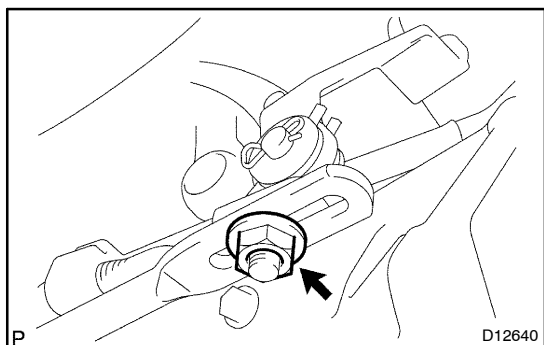

### 2. INSTALL No.1 FLOOR SHIFT GEAR SHIFTING ROD

- (a) Shift into the N range.
- (b) Connect the No.1 floor shift gear shifting rod and connecting rod swivel with the nut.

**Torque: 13 N·m (130 kgf·cm, 9 ft·lbf)**

### 3. INSTALL UPPER CONSOL PANNEL ([See Page BO-79](#))

### 4. INSTALL TRANSFER SHIFT LEVER KNOB