



## Tc Terminal Circuit

### CIRCUIT DESCRIPTION

Connecting terminals Tc and CG of the DLC3 causes the ECU to display the DTC by flashing the height control OFF indicator light.

### WIRING DIAGRAM

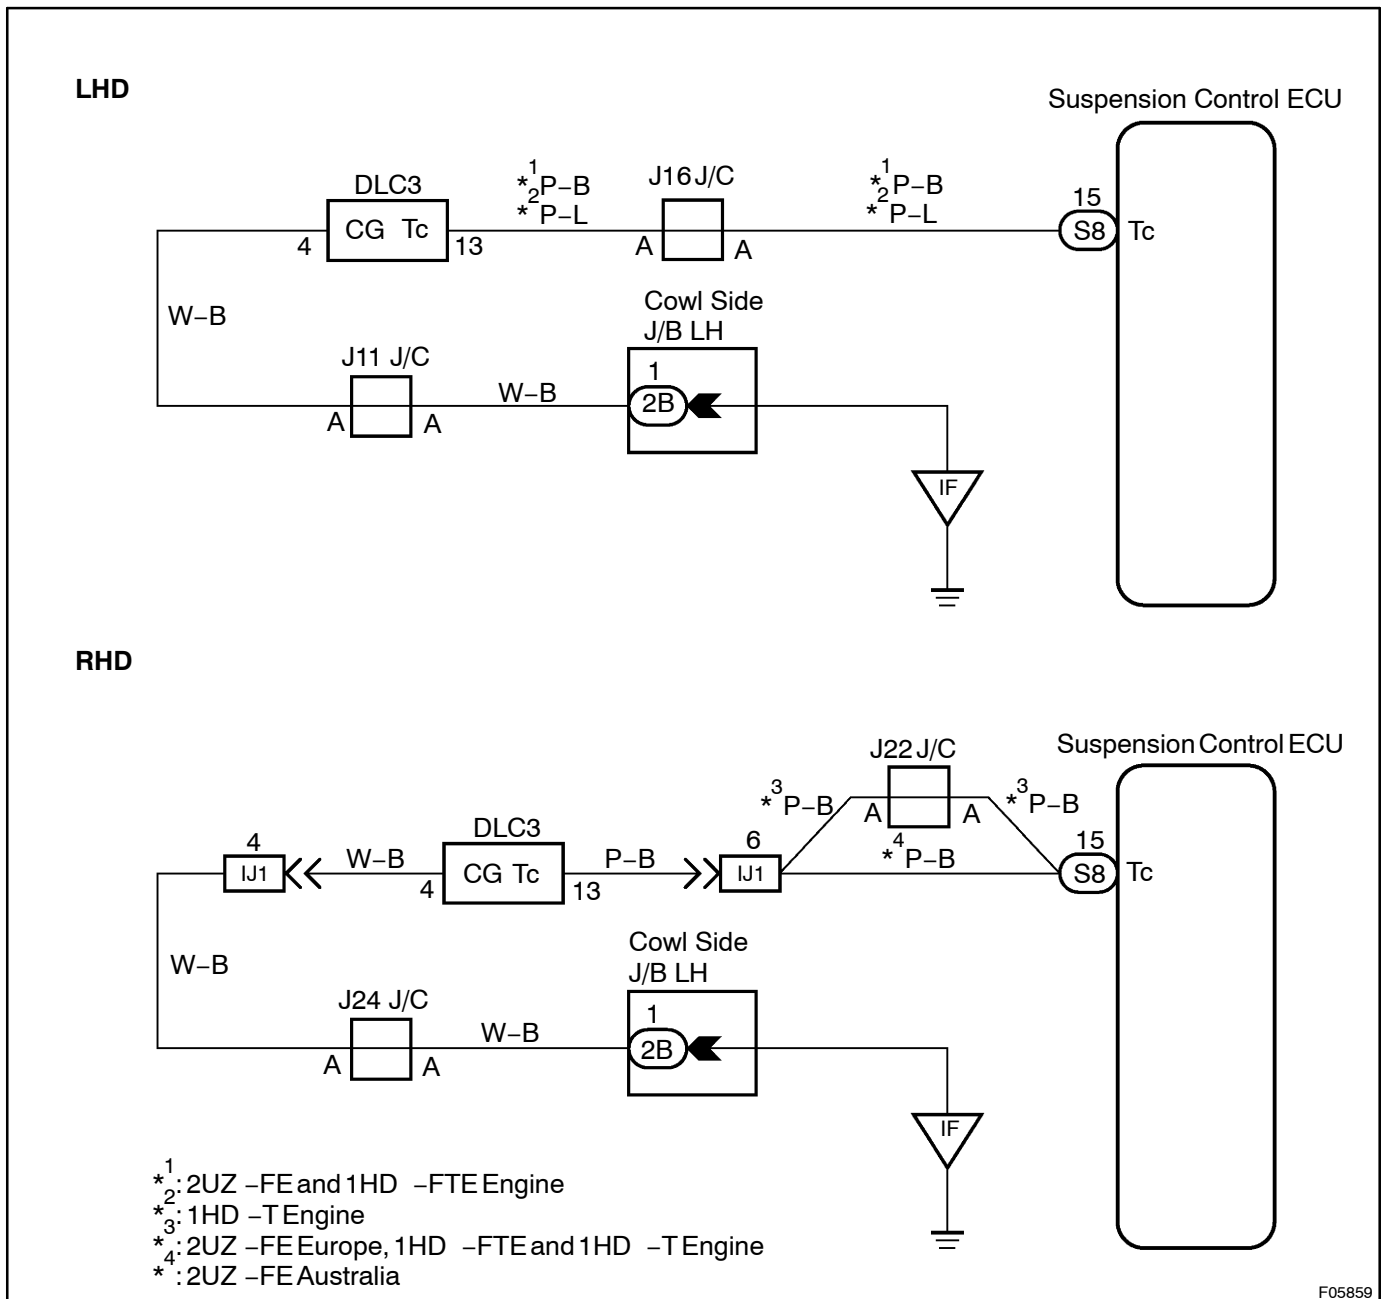

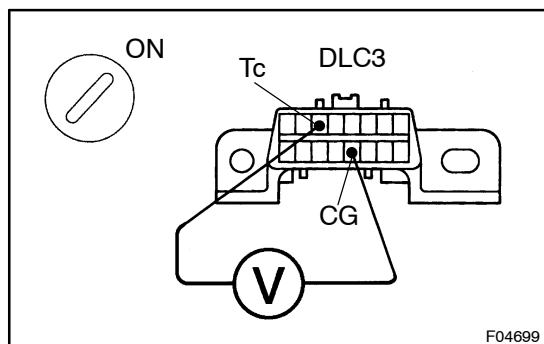**INSPECTION PROCEDURE****1 Check voltage between terminals Tc and CG of DLC3.****CHECK:**

- (a) Turn the ignition switch ON.
- (b) Measure the voltage between terminals Tc and CG of DLC3.

**OK:****Voltage: 9 – 14 V****OK****No problem.****NG****2 Check for open and short circuit in harness and connector between suspension control ECU and DLC3, DLC3 and body ground ([See page IN-35](#)).****NG****Repair or replace harness or connector.****OK****Check and replace suspension control ECU.**