


DTC	C1794/94,C 1795/95	Vehicle Speed Sensor Circuit
-----	--------------------	------------------------------

CIRCUIT DESCRIPTION

This circuit receiving the speed detected by the speed sensor from the ABS ECU.

DTC No.	DTC Detecting Condition	Trouble Area
C1794/94 C1795/95	Vehicle speed 12 mph (20 km/h) or higher signal does not input.	<ul style="list-style-type: none">• Right front, left front speed sensor<ul style="list-style-type: none">• Each speed sensor circuit• ABS ECU• Suspension control ECU

WIRING DIAGRAM

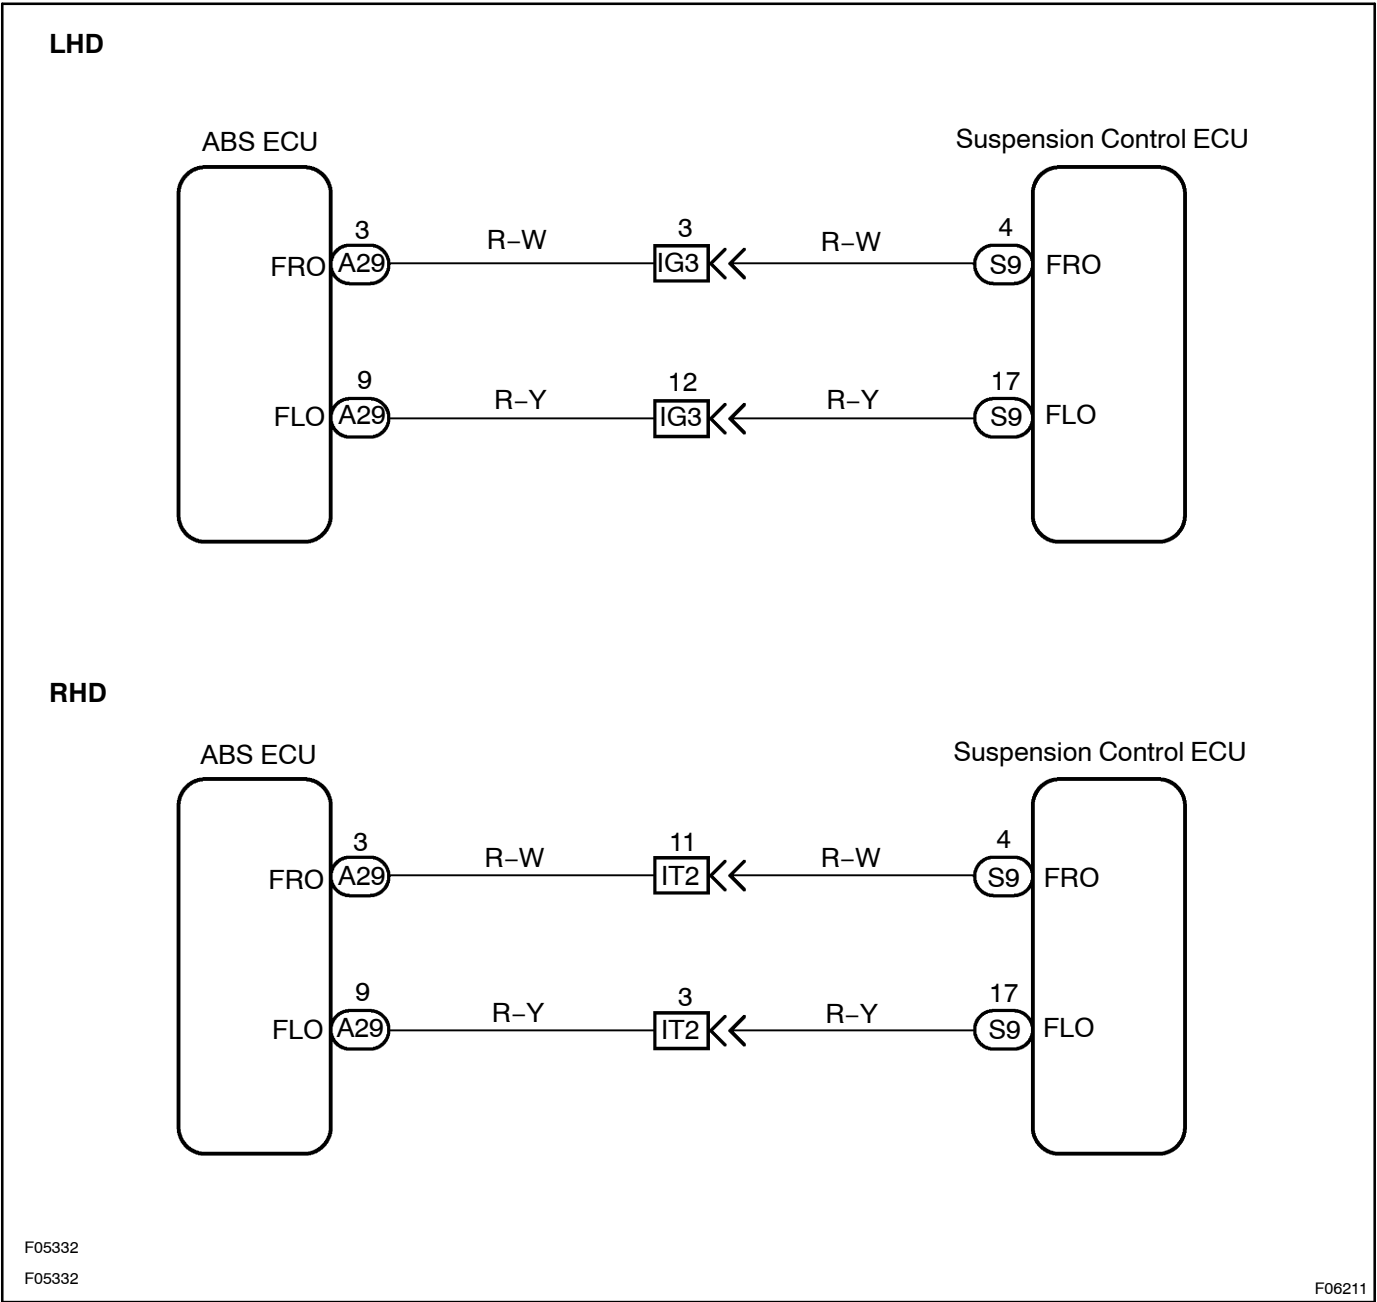

INSPECTION PROCEDURE

- | | |
|----------|---|
| 1 | Check whether or not the ABS ECU outputs DTC 31 or 32. |
|----------|---|

Check DTC on [page DI-208](#).

YES

Check ABS speed sensor circuit.
([See page DI-325](#))

NO

- | | |
|----------|---|
| 2 | Check for open and short circuit in harness and connector between ABS ECU and suspension control ECU (See page IN-35). |
|----------|---|

NG

Repair or replace harness or connector.

OK

Check and replace suspension control ECU.