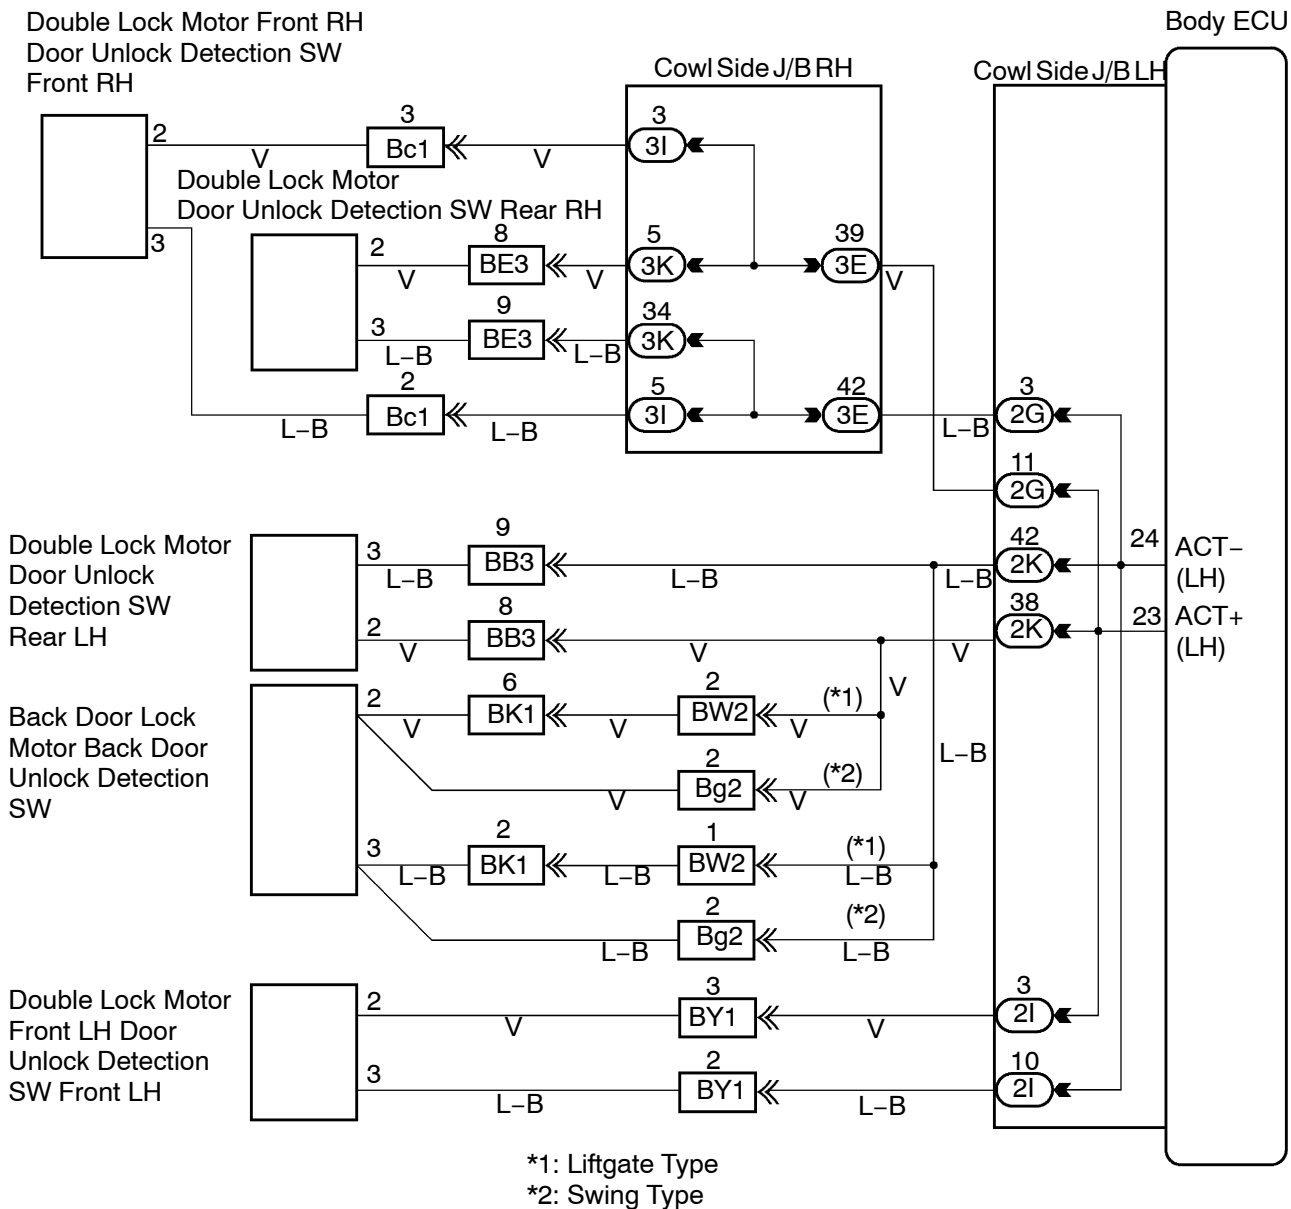


## Door lock motor circuit

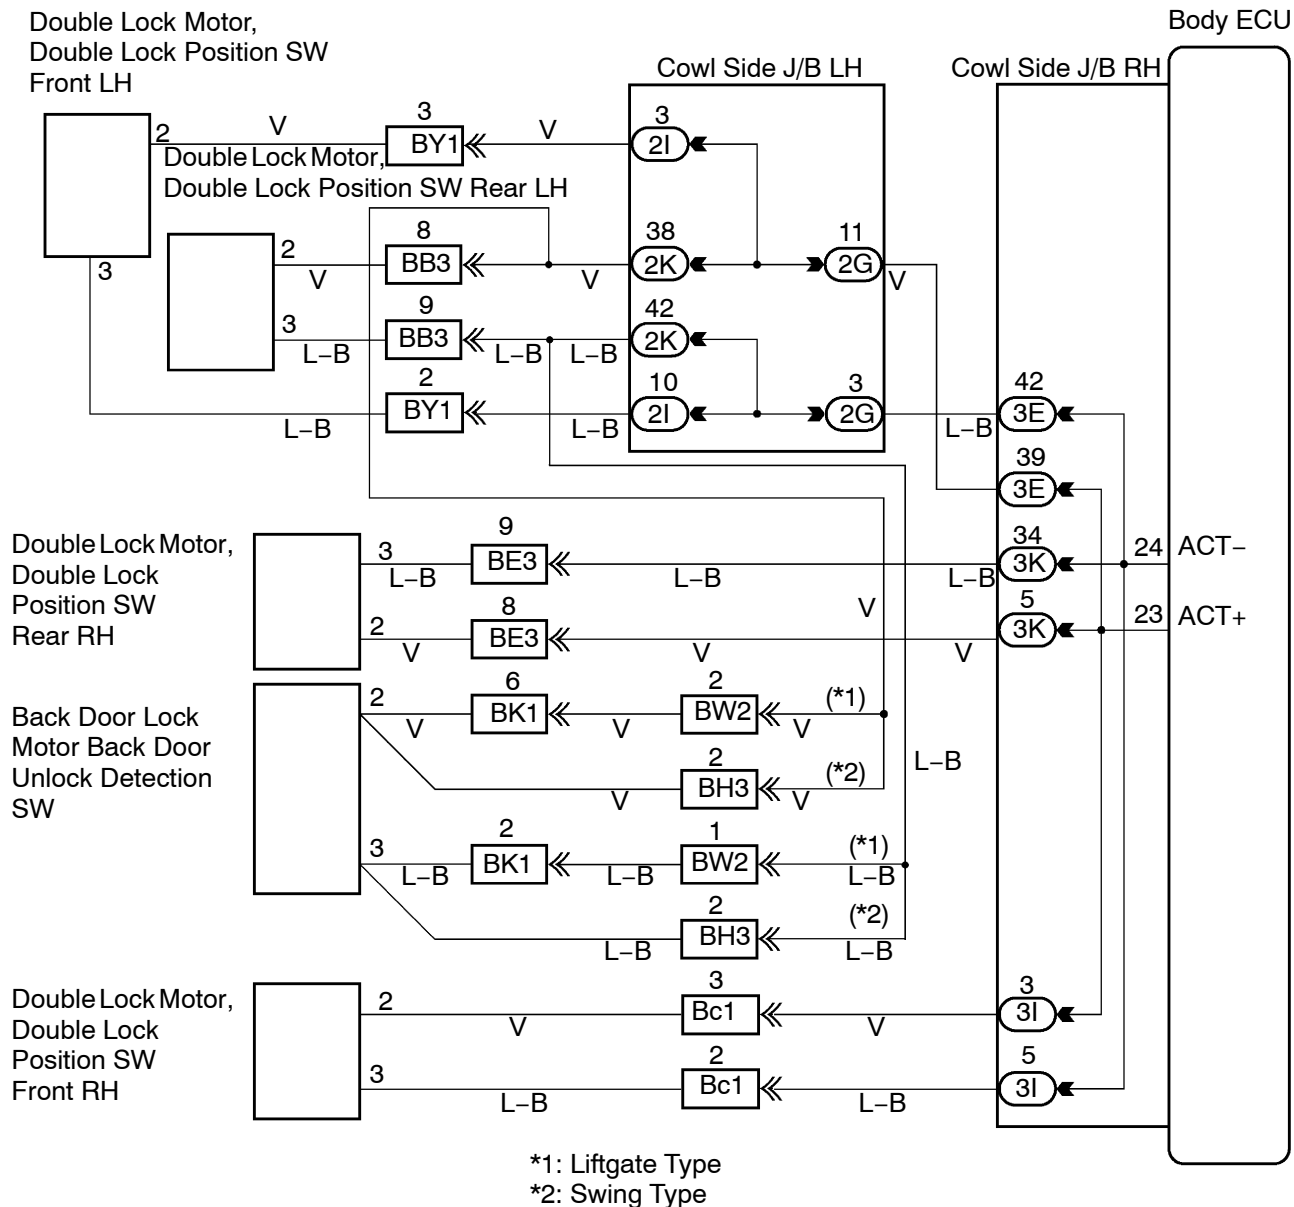
### WIRING DIAGRAM

#### LHD Models (w/o Double Lock):



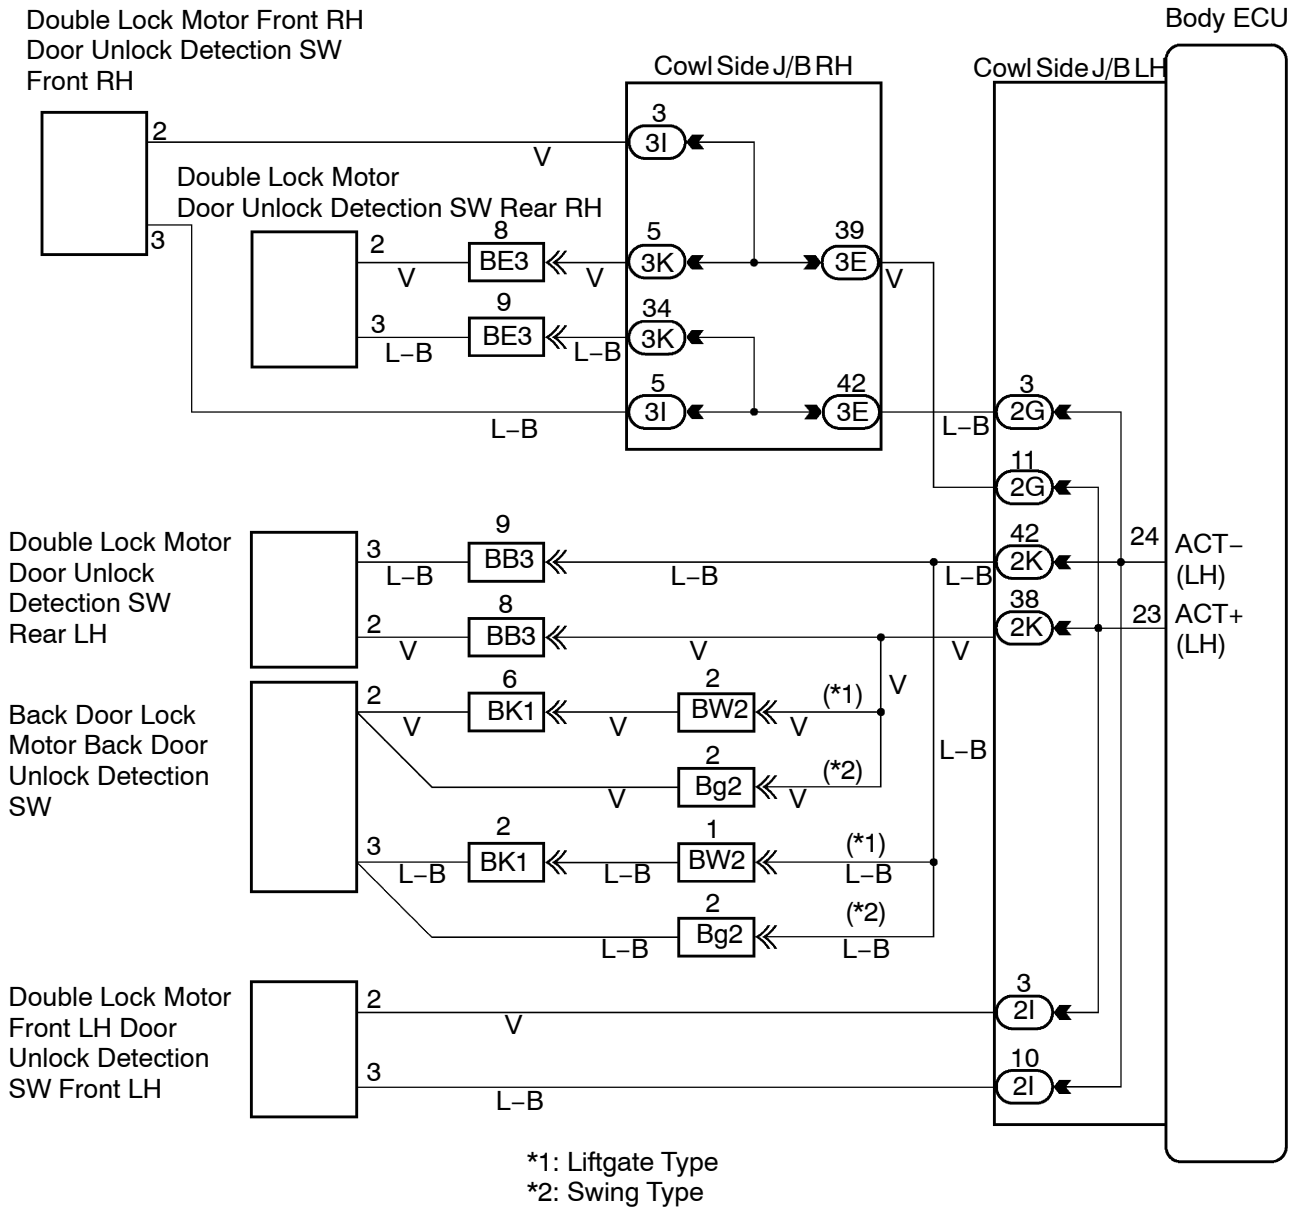
H

I26323

**RHD Models (w/o Double Lock):**

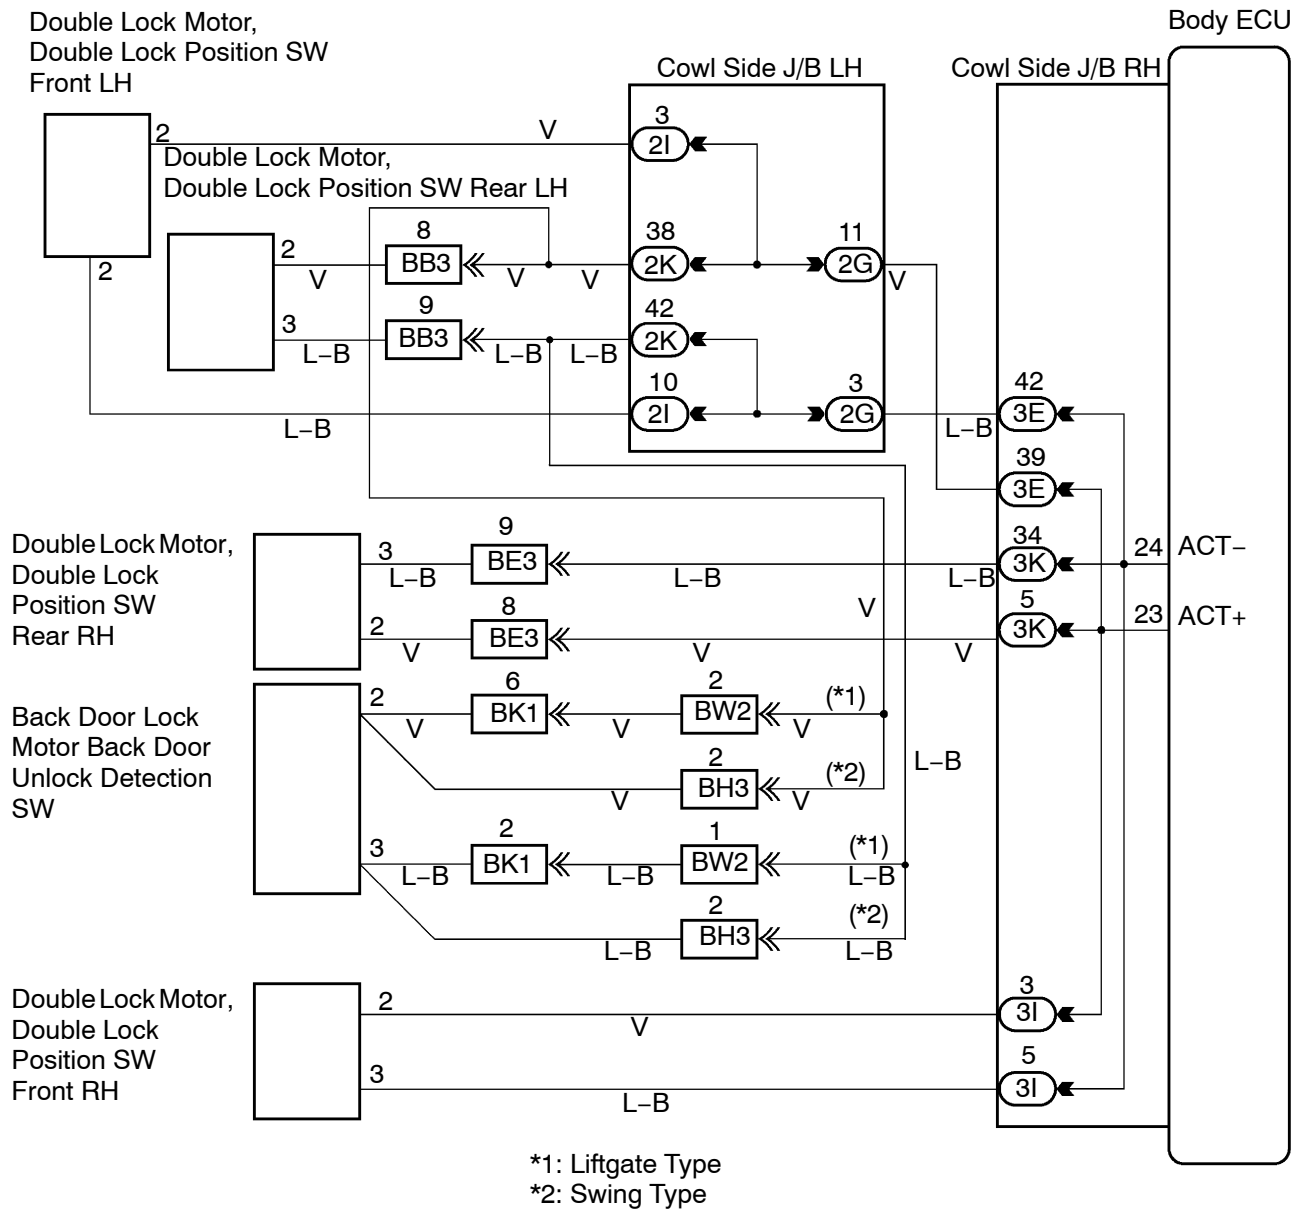
H

I26322

**LHD Models (w/ Double Lock):**

H

I26030

**RHD Models (w/ Double Lock):**

H

I26053

## INSPECTION PROCEDURE

### HINT:

In case of using the hand-held tester, start the inspection from step 1 and in case of not using the hand-held tester, start from step 2.

1	Check door lock motor using hand-held tester.
---	---

### PREPARATION:

Connect the hand-held tester to DLC 3.

### CHECK:

Check that the door lock motor operate in ACTIVE TEST ([See page DI-1057](#)).

OK

Proceed to next circuit inspection shown on problem symptoms table ([See page DI-1063](#)).

NG

2	Check the door lock motor ( <a href="#">See page BE-53</a> ).
---	---

NG

Replace the door lock motor.

OK

3	Check wireharness and connector between door lock motor and Body ECU.
---	---

NG

Repair or replace wireharness or connector.

OK

Proceed to next circuit inspection shown on problem symptoms table ([See page DI-1063](#)).