


DISASSEMBLY

1. w/ Spare Wheel Carrier: REMOVE SPARE WHEEL

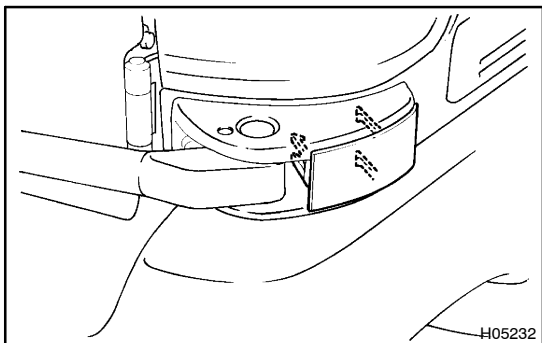


2. w/ Spare Wheel Carrier: REMOVE SPARE WHEEL CARRIER

- (a) Using a screwdriver, remove the No.1 and No.2 hinge cover.

HINT:


Tape the screwdriver tip before use.

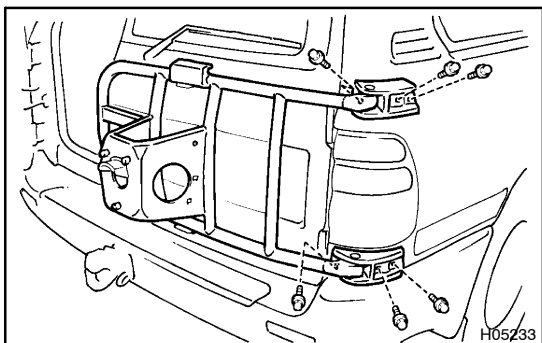

- (b) Remove the 6 bolts and spare wheel carrier.


3. w/ Spare Wheel Carrier: REMOVE THESE PARTS:

- (a) No.1 spare wheel guide stay
(b) Spare wheel auxiliary stoppers

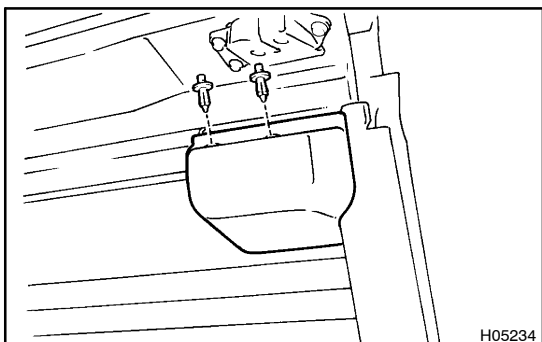


4. w/ High –Mount Stop Light: REMOVE HIGH –MOUNT STOP LIGHT

- (a) Remove the 2 clips and high –mount stop light cover.

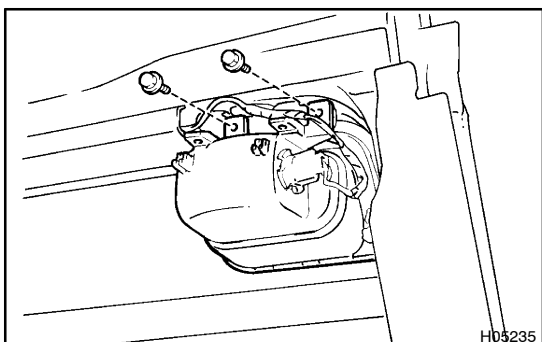

- (b) Disconnect the connector, then remove the 2 bolts and high–mount stop light.
(c) Remove the 2 bolts and high –mount stop light bracket.

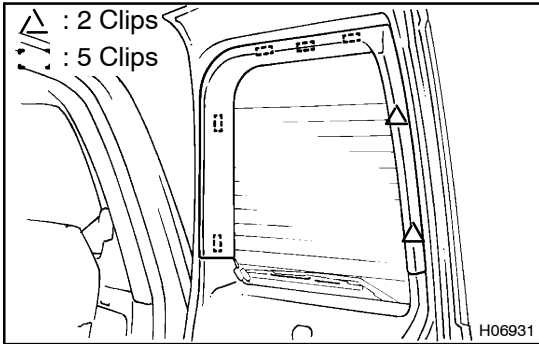


5. REMOVE BACK DOOR GARNISH

(a) Using a screwdriver, remove the back door garnish.

HINT:

Tape the screwdriver tip before use.

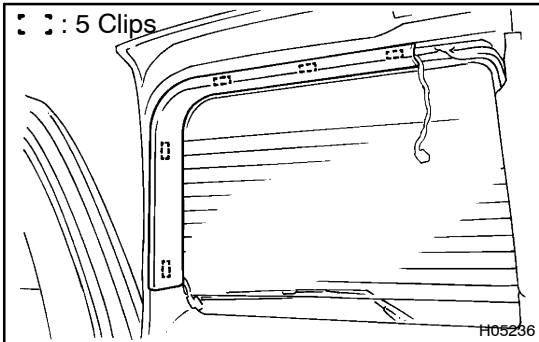


(b) w/ High -Mount Stop Light:

Using a screwdriver, remove the back door garnish.

HINT:

Tape the screwdriver tip before use.

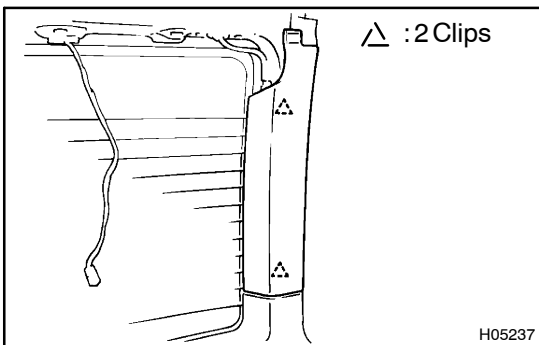


(c) w/ High -Mount Stop Light:

Using a screwdriver, remove the center back door garnish.

HINT:

Tape the screwdriver tip before use.

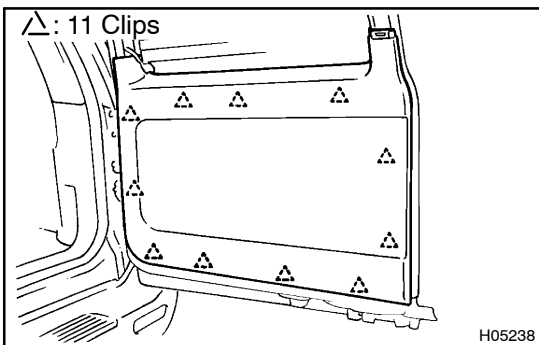

6. REMOVE BACK DOOR TRIM

(a) Insert a screwdriver between the door and door trim to pry out.

HINT:

Tape the screwdriver tip before use.


(b) Remove the back door trim.

7. REMOVE SERVICE HOLE COVER

Remove the service hole cover.

HINT:


Tape the screwdriver tip before use.

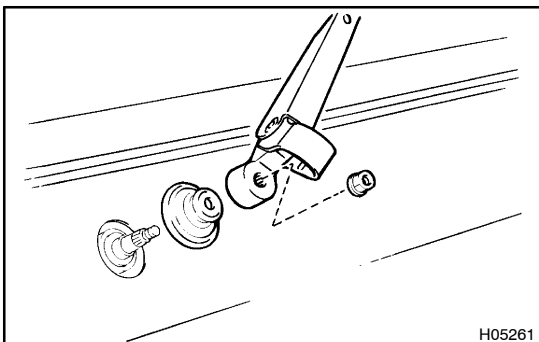


8. REMOVE REAR WIPER ARM

(a) Open the cover.


(b) Remove the nut, wiper arm and grommet.

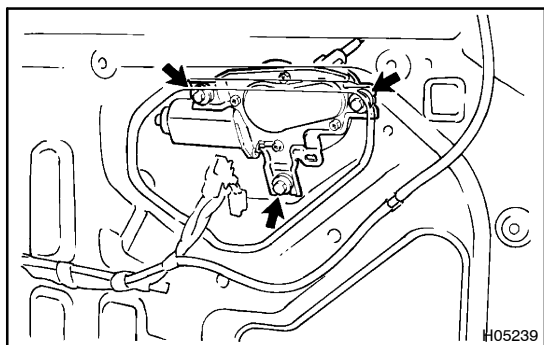**9. REMOVE REAR WIPER MOTOR**


- (a) Disconnect the connector.
- (b) Unfasten the 3 bolts and remove the rear wiper motor.

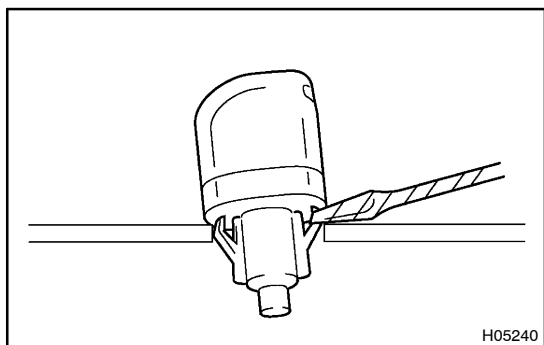**10. REMOVE WASHER NOZZLE**


- (a) Using a screwdriver, remove the washer nozzle.
- (b) Disconnect the washer nozzle.

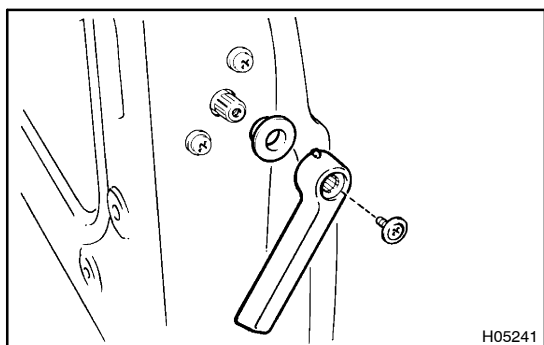11. REMOVE BACK DOOR CENTER WEATHERSTRIP**12. REMOVE BACK DOOR INSIDE HANDLE**


- (a) Remove the screw and inside handle.
- (b) Remove the spacer.

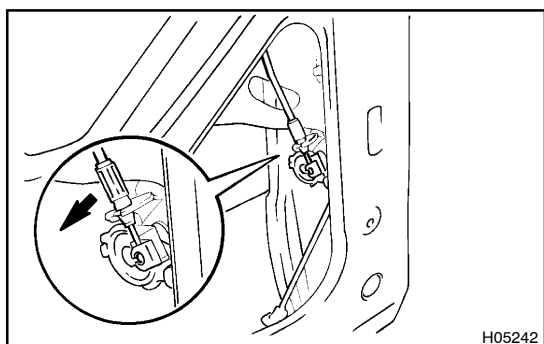**13. REMOVE BACK DOOR UPPER LOCK**

- (a) Disconnect the control cable from the back door lock control.

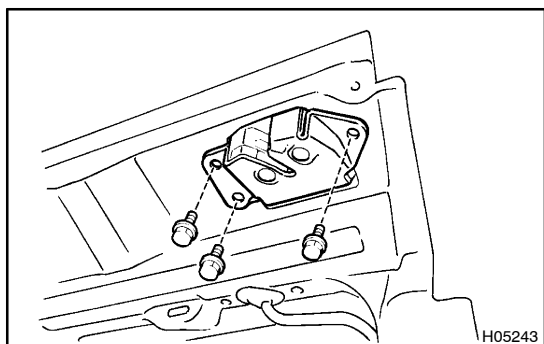

- (b) Remove the 3 bolts and back door upper lock.
Torque: 18 N·m (185 kgf·cm, 13 ft·lbf)

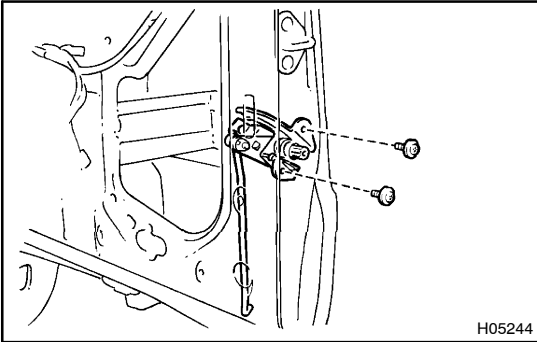**14. REMOVE DOOR LOCK CONTROL**

- (a) Disconnect the control link.
- (b) Remove the 2 screws and door lock control.

Torque: 12 N·m (120 kgf·cm, 9 ft·lbf)

15. REMOVE THESE PARTS:

- (a) Back door lower lock
Torque: 18 N·m (185 kgf·cm, 13 ft·lbf)
- (b) No.2 back door stopper