


## SHIFT POSITION SWITCH (M/T) ON-VEHICLE INSPECTION

ED022-01

### INSPECT SHIFT POSITION SWITCH CONTINUITY

(a) Disconnect the switch connector.

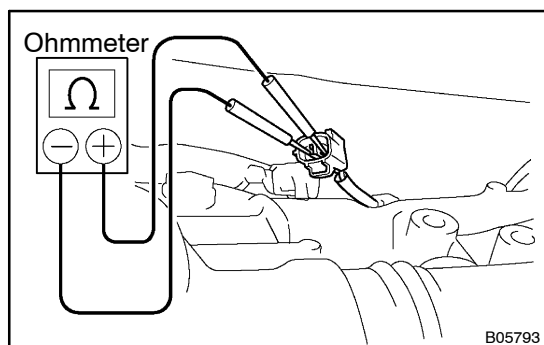

(b) Using an ohmmeter, check the switch continuity.

#### Continuity:

Transmission position	Specified continuity
1	Continuity
Others	No continuity

If continuity is not as specified, replace the shift position switch.

(c) Reconnect the switch connector.