


Double lock motor circuit


WIRING DIAGRAM

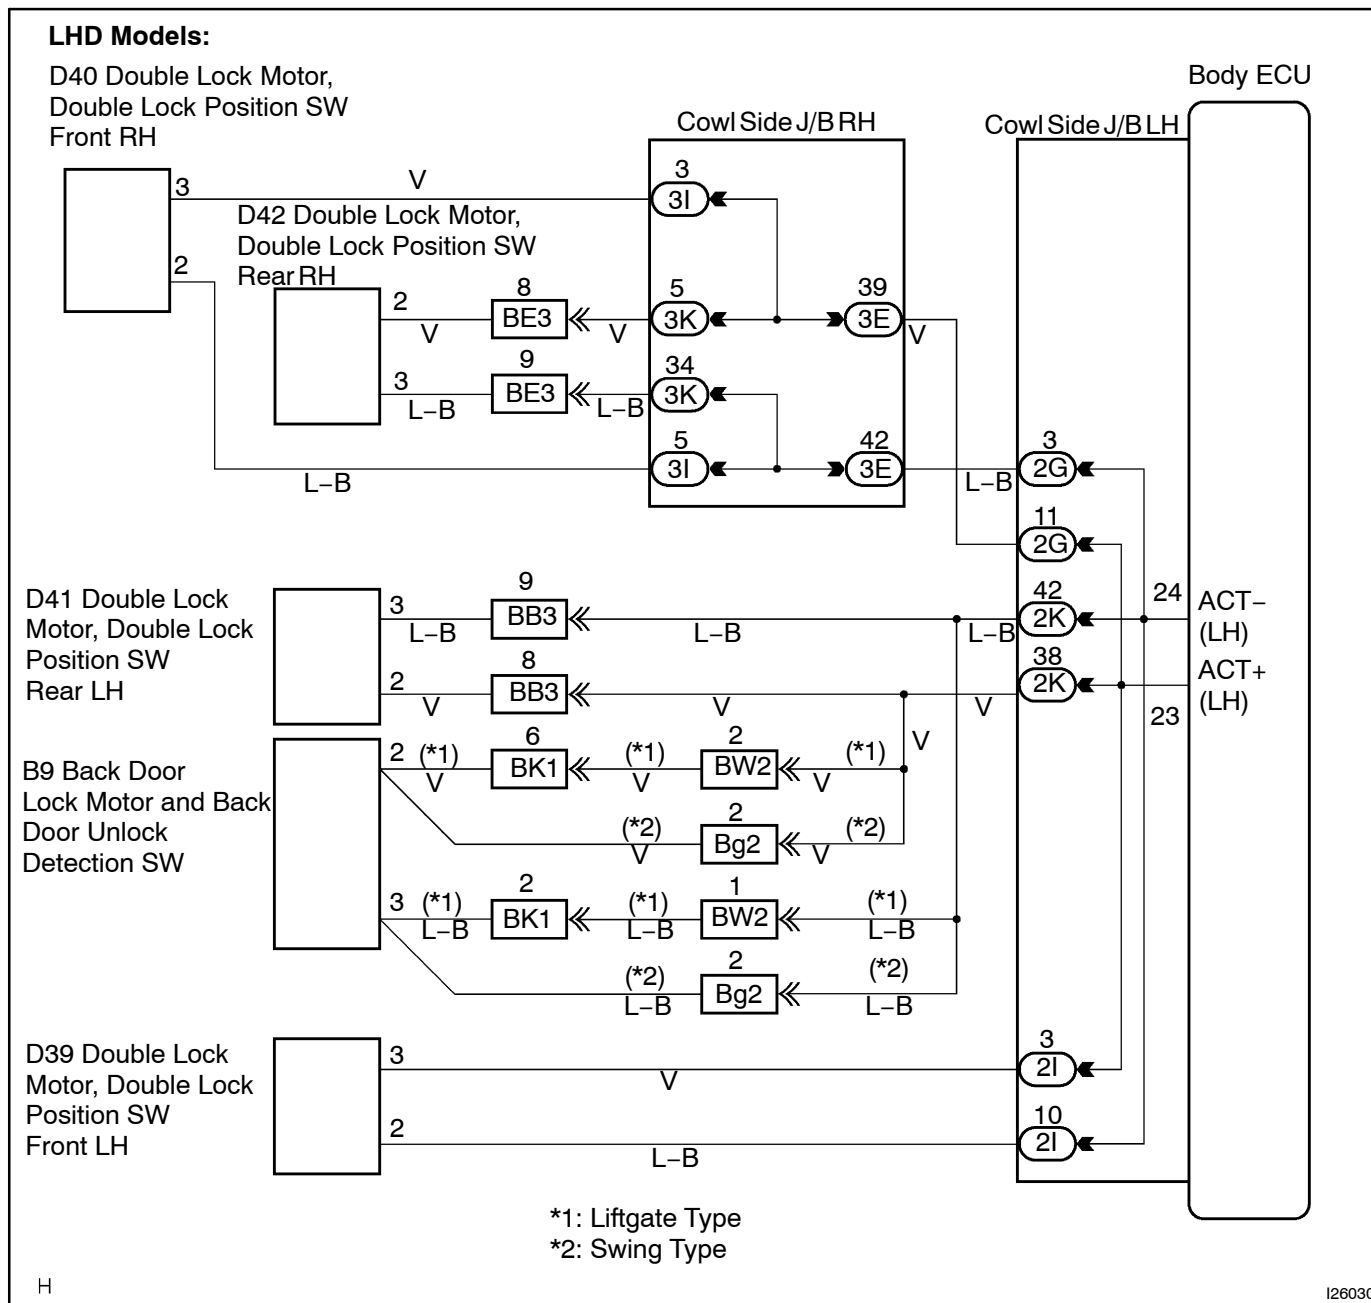

RHD Models:

D39 Double Lock Motor,
Double Lock Position SW
Front LH

Body ECU

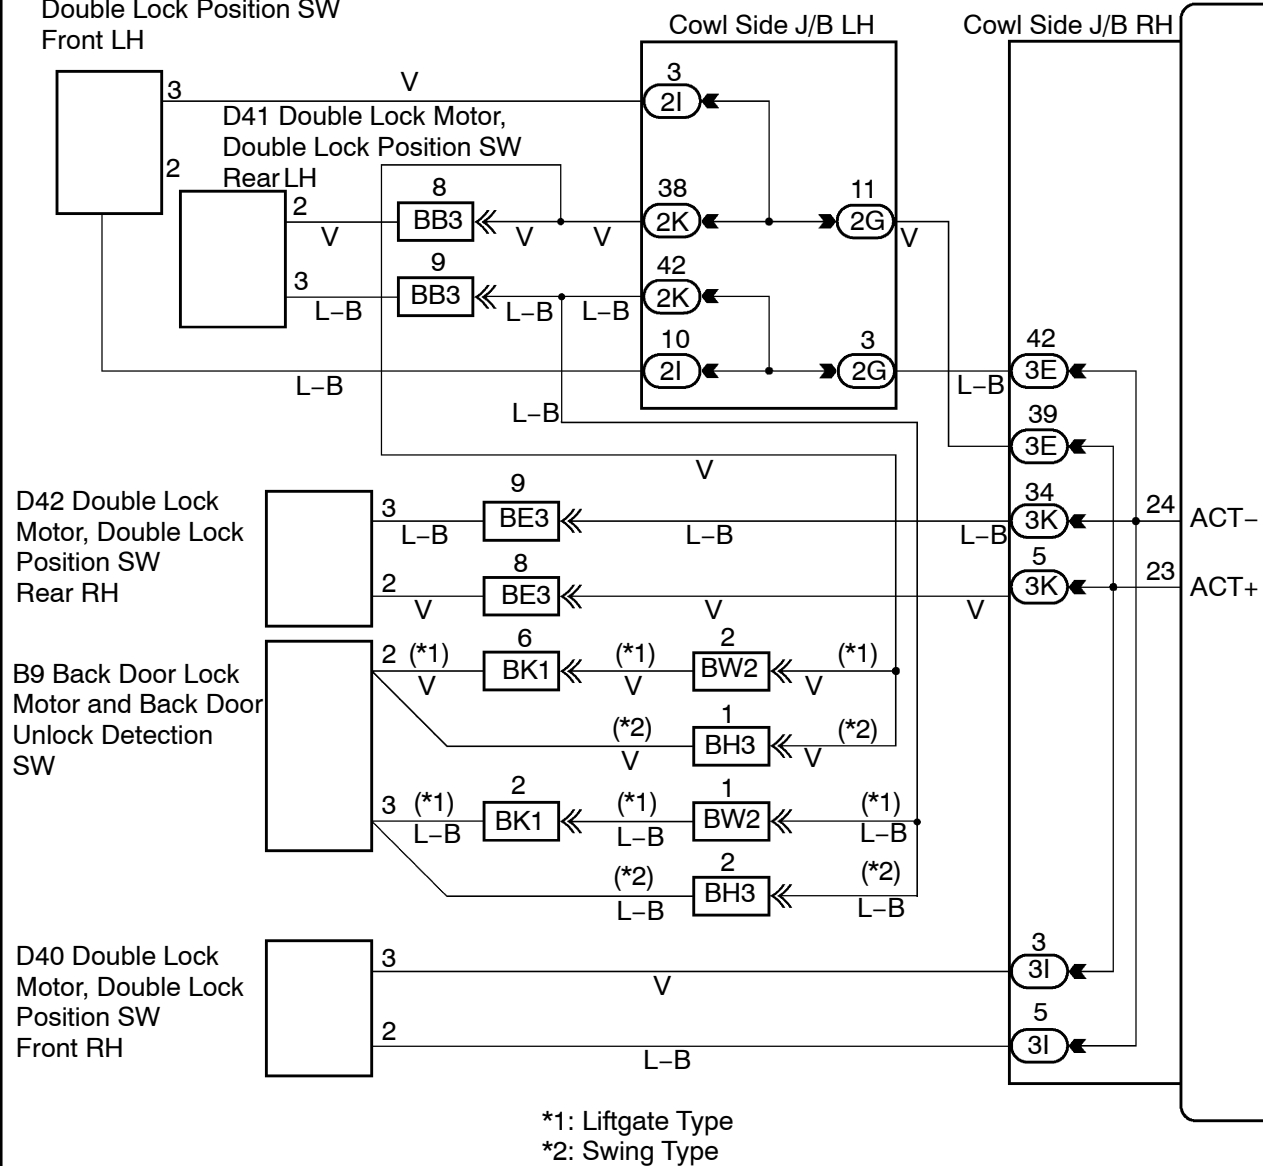

H

I26053

INSPECTION PROCEDURE

1 Check double lock motor ([See page BE-56](#)).

NG

Replace the double lock motor.

OK

2 Check wireharness and connector between double lock motor and body ECU ([See page IN-38](#)).

NG

Repair or replace wireharness or connector.

OK

Proceed to next circuit inspection shown on problem symptoms table ([See page DI-992](#)).