


REPLACEMENT

IF NECESSARY REPLACE FRONT BEARING RETAINER OIL SEAL

- (a) Using a screwdriver, pry out the oil seal.

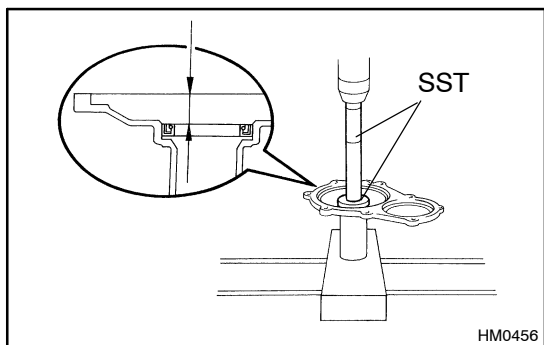

- (b) Using SST and a press, drive in a new oil seal.
SST 09950 –60010 (0995 1–00460), 0995 1–07150
Drive in depth: 15.4 –16.2 mm (0.606 –0.638 in.)