


REMOVAL

1. REMOVE V -BANK COVER
2. DRAIN ENGINE COOLANT
3. DISCONNECT UPPER RADIATOR HOSE
4. REMOVE LH NO.3 TIMING BELT COVER
(See page EM-16)

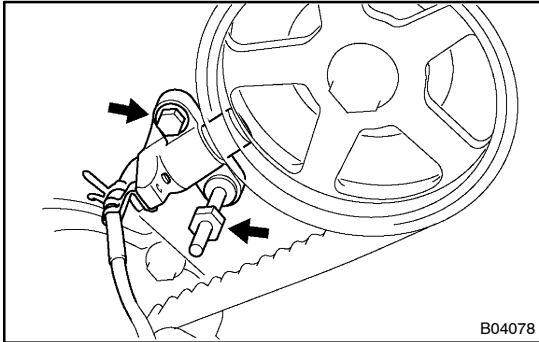

5. REMOVE CAMSHAFT POSITION SENSOR

Remove the bolt, stud bolt and camshaft position sensor.