

REMOVAL

1. REMOVE ROOF HEADLINING REAR TRIM


Using a screwdriver, remove the roof headlining rear trim.

HINT:

Tape up the screwdriver tip before use.

2. w/ Rear No.2 Seat:

REMOVE REAR NO.2 SEAT

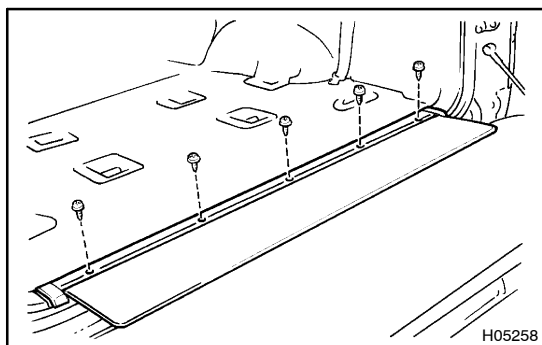


3. REMOVE REAR MAT SET PLATE

(a) Remove the 5 screws.

(b) Using a screwdriver, remove the rear mat set plate.

HINT:

Tape up the screwdriver tip before use.

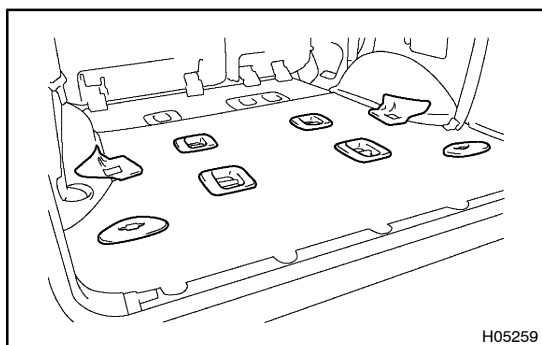

4. w/ Rear No.2 Seat (Forward -Facing Type):

REMOVE STRIKER PLATE

(a) Remove the 6 screws.

(b) Using a screwdriver, remove the striker plates.

HINT:

Tape up the screwdriver tip before use.

5. w/ TONNEAU COVER:

REMOVE TONNEAU COVER

6. REMOVE REAR MAT

7. w/ Rear No.2 Seat (Forward -Facing Type):

REMOVE REAR NO. 2 SEAT OUTER BELT FLOOR ANCHOR


Torque: 42 N·m (430 kgf·cm, 3 1 ft·lbf)

8. REMOVE REAR NO. 1 SEAT OUTER BELT FLOOR ANCHOR

Torque: 42 N·m (430 kgf·cm, 3 1 ft·lbf)

9. REMOVE REAR DOOR SCUFF PLATE

10. REMOVE REAR DOOR OPENING TRIM

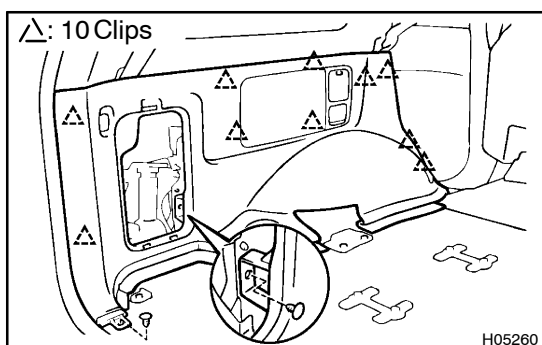

11. REMOVE QUARTER TRIM PANEL

(a) Remove the quarter trim jack cover.

(b) Using a clip remover, remove the 2 clips.


(c) Remove the quarter trim panel, then disconnect the connector.

**12. w/ Rear No.2 Seat (Forward –Facing Type):
REMOVE REAR NO. 2 SEAT OUTER BELT SHOULDER ANCHOR**

Torque: 42 N·m (430 kgf·cm, 3 1 ft·lbf)

13. REMOVE REAR NO. 1 SEAT OUTER BELT SHOULDER ANCHOR

Torque: 42 N·m (430 kgf·cm, 3 1 ft·lbf)

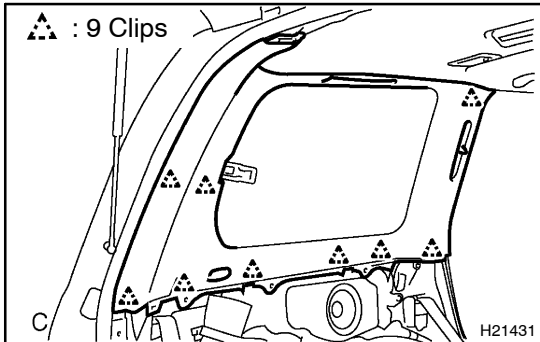

14. REMOVE UPPER ROOF SIDE INNER GARNISH

(a) w/ Rear No.2 Seat (Forward –Facing Type):

Using a screwdriver, remove the assist grip plugs, then remove the 2 screws and the rear assist grip.

HINT:


Tape up the screwdriver tip before use.

(b) Using a clip remover, remove the clip.

(c) Using a screwdriver, remove the upper roof side inner garnish.

HINT:

Tape up the screwdriver tip before use.

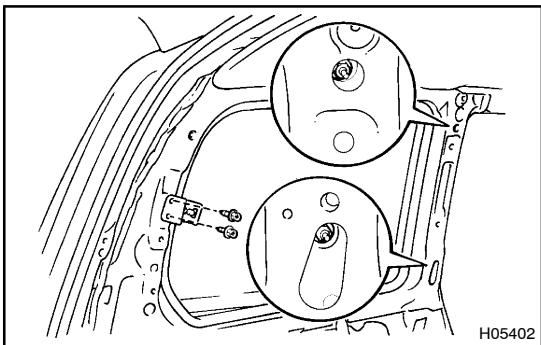

15. REMOVE QUARTER WINDOW GLASS

(a) w/ Power Vent:


Disconnect the connector.

(b) w/ Antenna:

Disconnect the connector.

(c) Remove the 2 bolts, the 2 nuts and the quarter window glass.

16. REMOVE QUARTER WINDOW GLASS WEATHERSTRIP

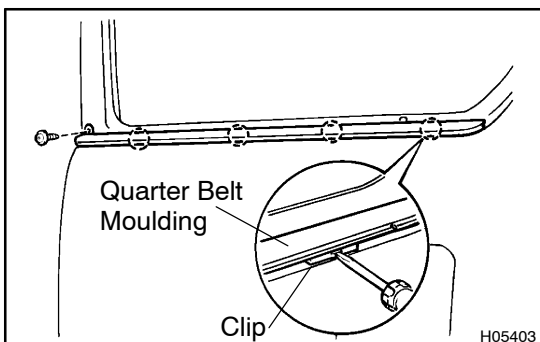

17. REMOVE QUARTER BELT MOULDING

(a) Remove the screw.

(b) Using a screwdriver, remove the quarter belt moulding.

HINT:

Tape up the screwdriver tip before use.

18. REMOVE QUARTER WINDOW LOCK

Remove the screw and the quarter window lock.