


## Front Washer Switch Circuit

### CIRCUIT DESCRIPTION

This circuit sends a front washer switch ON or OFF signal to ECU.

### WIRING DIAGRAM

LHD Models:

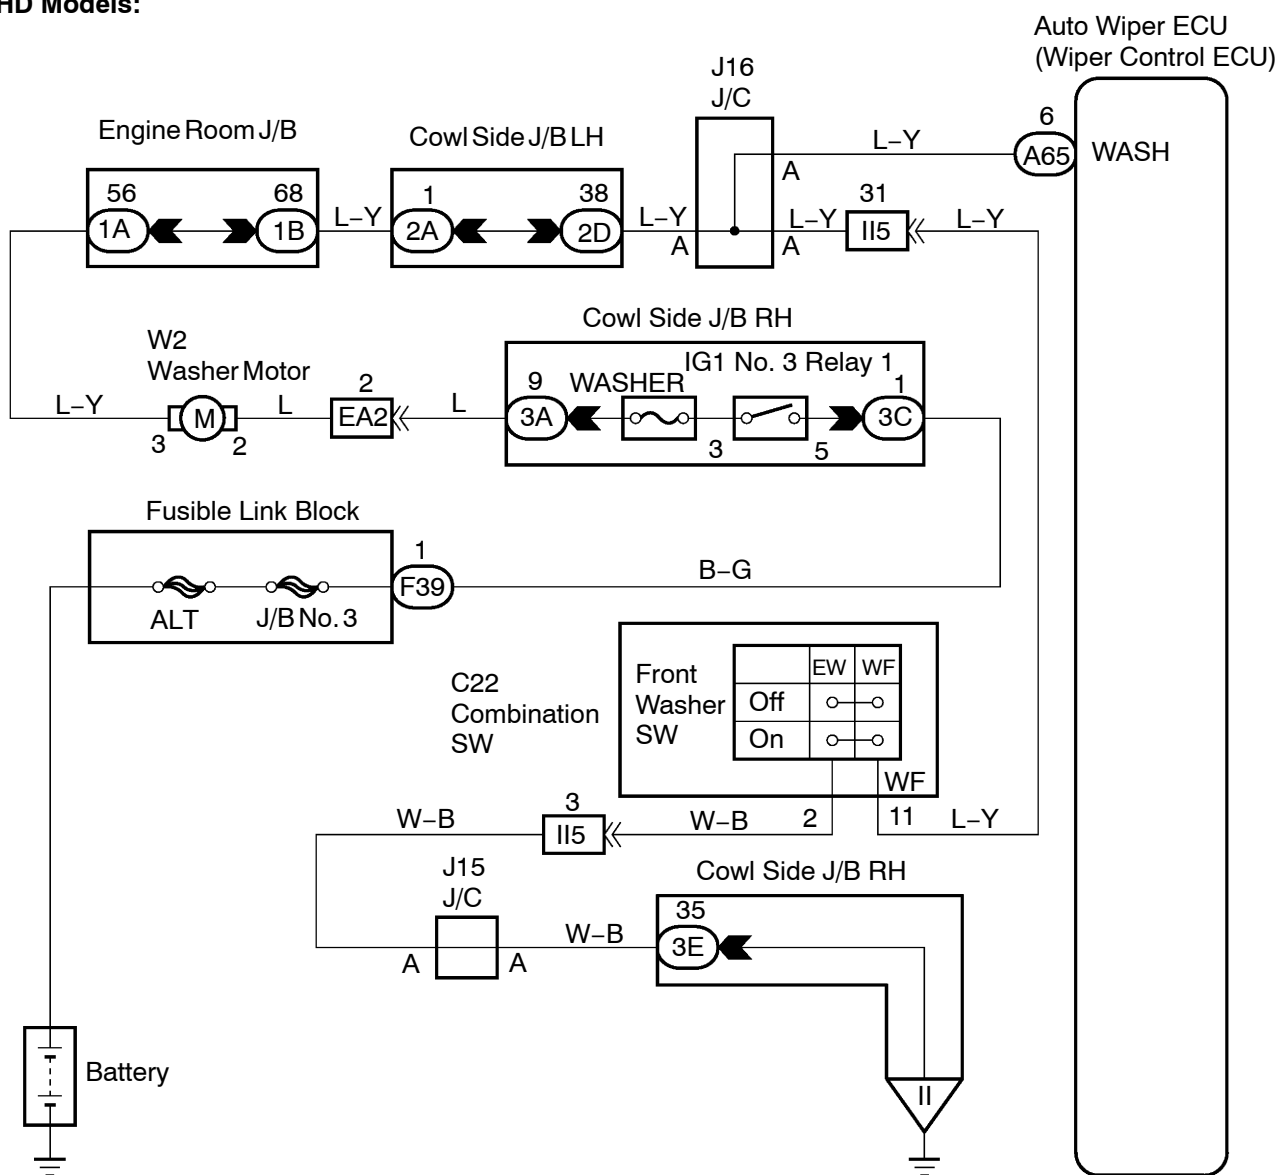

C

I25580

Auto Wiper ECU  
(Wiper Control ECU)



125580

## INSPECTION PROCEDURE

|   |                    |
|---|--------------------|
| 1 | Check WASHER fuse. |
|---|--------------------|

**CHECK:**

Check continuity of WASHER fuse.

**OK:**

Continuity

|    |
|----|
| NG |
|----|

|                      |
|----------------------|
| Replace WASHER fuse. |
|----------------------|

|    |
|----|
| OK |
|----|

|   |   |
|---|---|
| 2 | Check wire harness between combination switch and wiper control ECU ( <a href="#">See page IN-38</a> ). |
|---|---|

|    |
|----|
| NG |
|----|

|                                 |
|---------------------------------|
| Repair or Replace wire harness. |
|---------------------------------|

|    |
|----|
| OK |
|----|

|   |
|---|
| Proceed next circuit inspection shown on problem symptom table ( <a href="#">See page DI-930</a> ). |
|---|