




GlowCore DC extension v1.0 Quick Start Guide

Learn how to power your
GlowCore with a DC power supply.




Download PDF:
bit.ly/3VZQ9e4

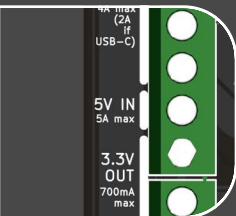


Step 1:

Connect the **5V** pin of this extension with the **5V IN** pin of GlowCore, using a wire. Use a thick wire and make sure it is screwed in securely.

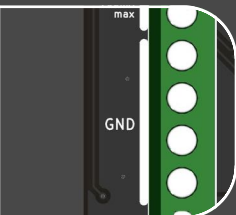

Step 2:

Repeat the same for the **GND** pin and connect it to one of the **GND** pins of GlowCore.

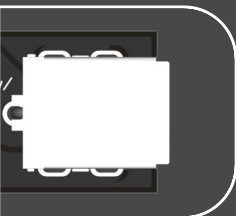

Step 3:

Connect a **5V DC** power supply to the DC connector and power everything up.