


GlowCore buttons extension v1.0 Quick Start Guide

Learn how to connect buttons to
your GlowCore.




Download PDF:
bit.ly/3UGvri2

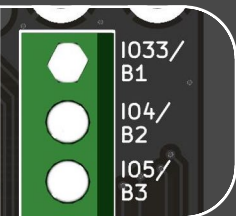


Step 1:

Solder a wire to the **B1** pin and connect the other side to the **B1** pin of GlowCore. You can repeat the same with B2 if you like.

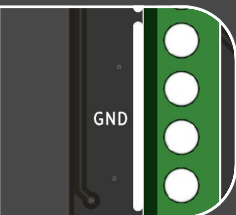

Step 2:

Repeat the same for the **G** pin and connect it to one of the **GND** pins of GlowCore.

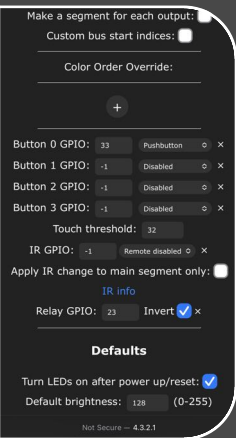

Step 3:

Power up your GlowCore. The LEDs should turn off/on by pressing one of the buttons. If that's not the case: connect to your GlowCore WiFi, open [4.3.2.1/settings/leds](#) and update your button settings.

You can also change what animation should play when pressing the buttons, in the “Button actions” section of [4.3.2.1/settings/time](#).