




GlowStripe v1.0

Quick Start Guide

Learn how to make your
GlowStripe glow.




Download PDF:
bit.ly/3uyF73y

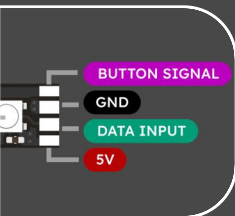


Step 1:

Connect your GlowStripe to your GlowCore. Check out the pinout overview (PDF available via bit.ly/3P7pGJ7) for more details.

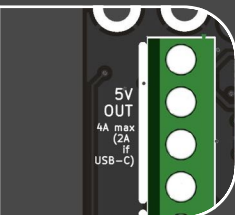

Step 2:

Power GlowStripe via GlowCore or connect another 5V source to the 5V pin of GlowStripe.

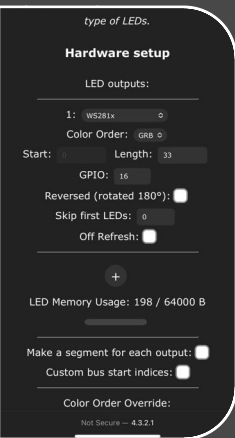

Step 3:

If your GlowStripe doesn't glow yet: connect to your GlowCore WiFi, open [4.3.2.1/settings/leds](#), update the LED outputs section and scroll up again and click "Save".