


# SPIKE PRIME LESSONS

By the Creators of EV3Lessons



## INSTALLING SOFTWARE & FIRMWARE

BY SANJAY AND ARVIND SESHAN

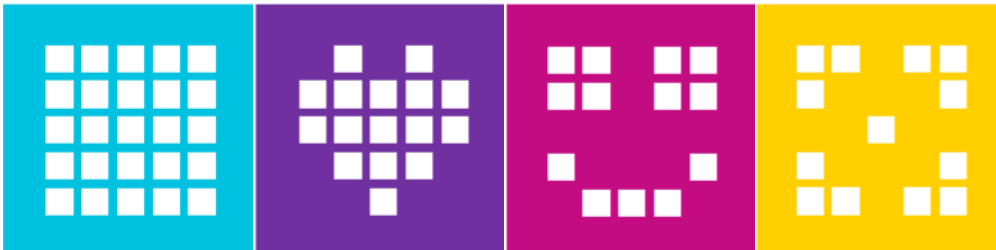


# LESSON OBJECTIVES

- Learn how to update SPIKE Prime






# CONNECT TO HUB

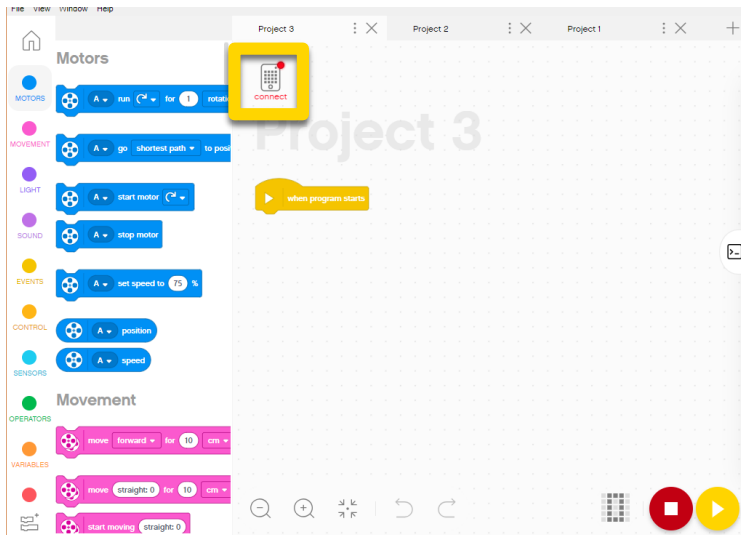

- Connect your SPIKE Prime to your computer using the USB Cable for OS Updates
- The software will auto-connect to the brick if you are using USB
- Note: If you are using the iOS, Android, or Chromebook version of the software, you may need to connect to your Hub using a computer the very first time to update the firmware on the Hub. Subsequent updates may be possible via Bluetooth. [This process may get updated.]



# UPDATING THE HUB OPERATING SYSTEM

- If there is an Update available, you will get a popup telling you to do so

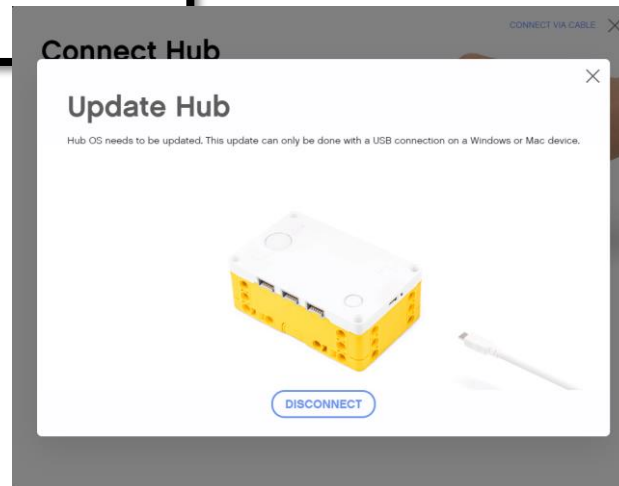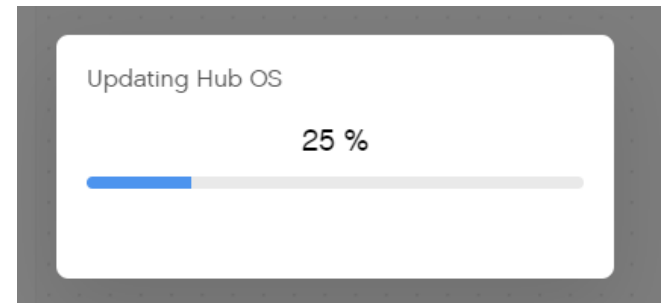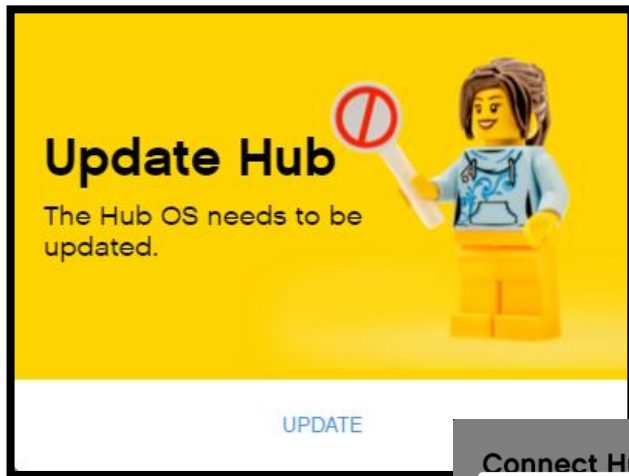



# RENAMING HUB

- The first time you update your Hub OS, you will be prompted to rename your Hub

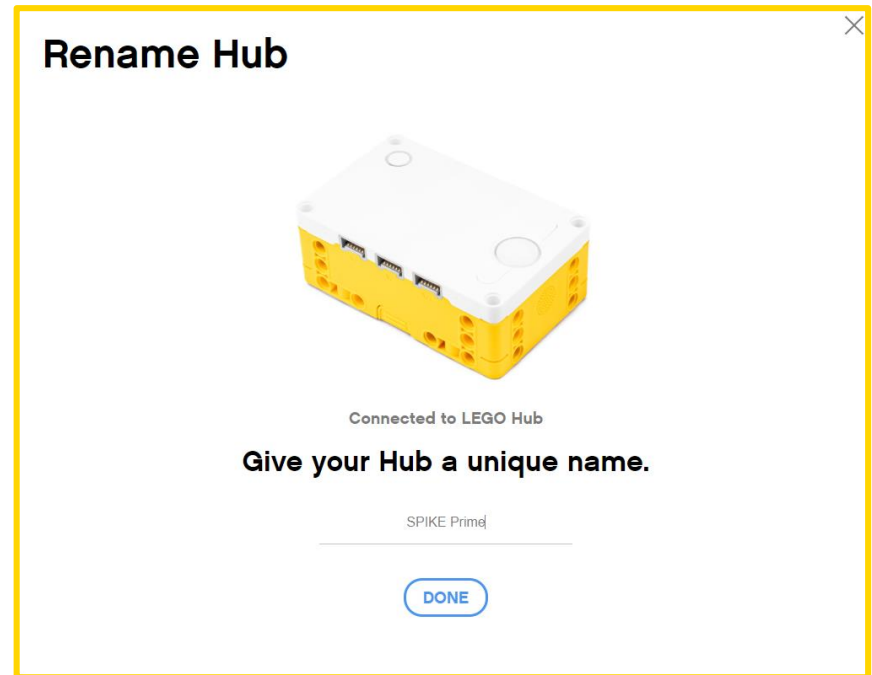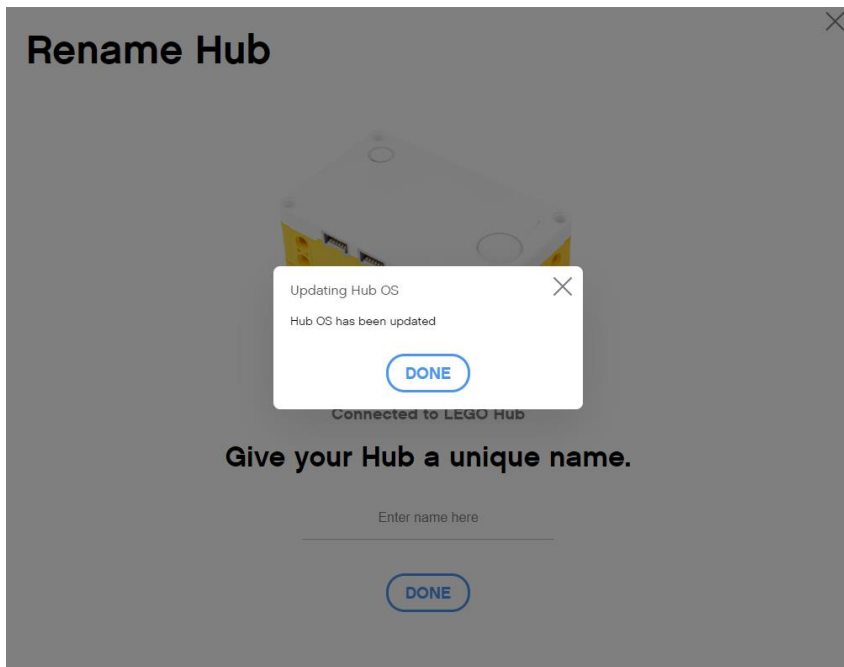


# INSTALL LATEST HUB OS

- When a new Hub OS is available a button labeled Update will appear next to the current Hub OS in the Hub Dashboard
- You may also see a pop-up show up on the right side of the screen indicating a Hub OS update is available
- Never disconnect the Hub while the update is in progress

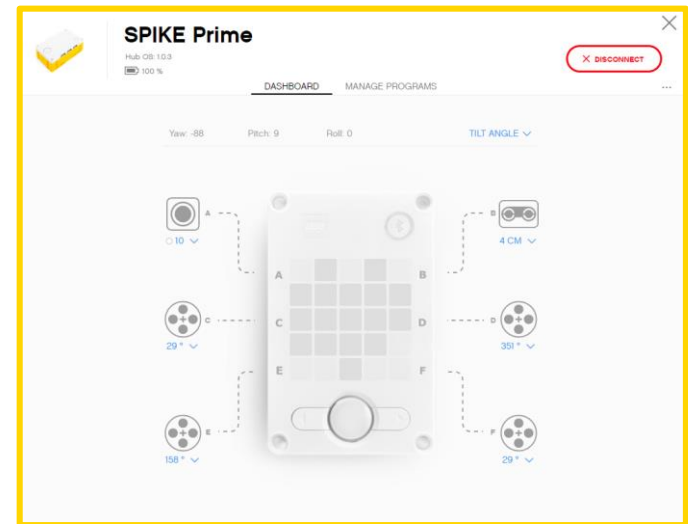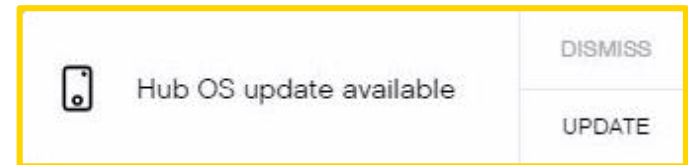

# INSTALL THE LATEST SOFTWARE

- You can check for SPIKE Prime Software Updates from inside the App
- Click on the Help Menu inside a Project and Check for Update

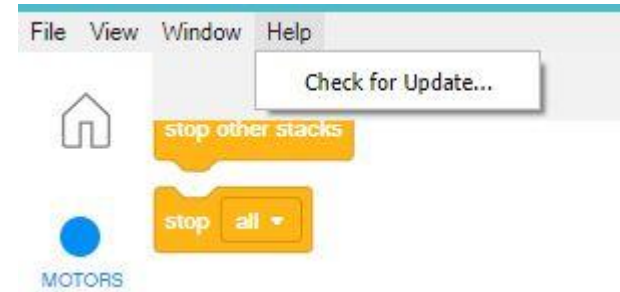

# CREDITS

- This lesson was created by Sanjay Seshan and Arvind Seshan for SPIKE Prime Lessons
- More lessons are available at [www.primelessons.org](http://www.primelessons.org)



This work is licensed under a [Creative Commons Attribution-NonCommercial-ShareAlike 4.0 International License](https://creativecommons.org/licenses/by-nc-sa/4.0/).