


1\_6. X-AxisBeltAssembly

Materials			
Electronic Parts	Frame Parts	Hardware Parts	Fasteners Parts
		GT2 Timing Belt *1(X-axis belt 60cm)	M3 Screw *2
		Belt-Tensioner *2	M3 Square nut *2




[Step1] Install the M3 screw into the Belt-Tensioner, and install the square nut on the screw.

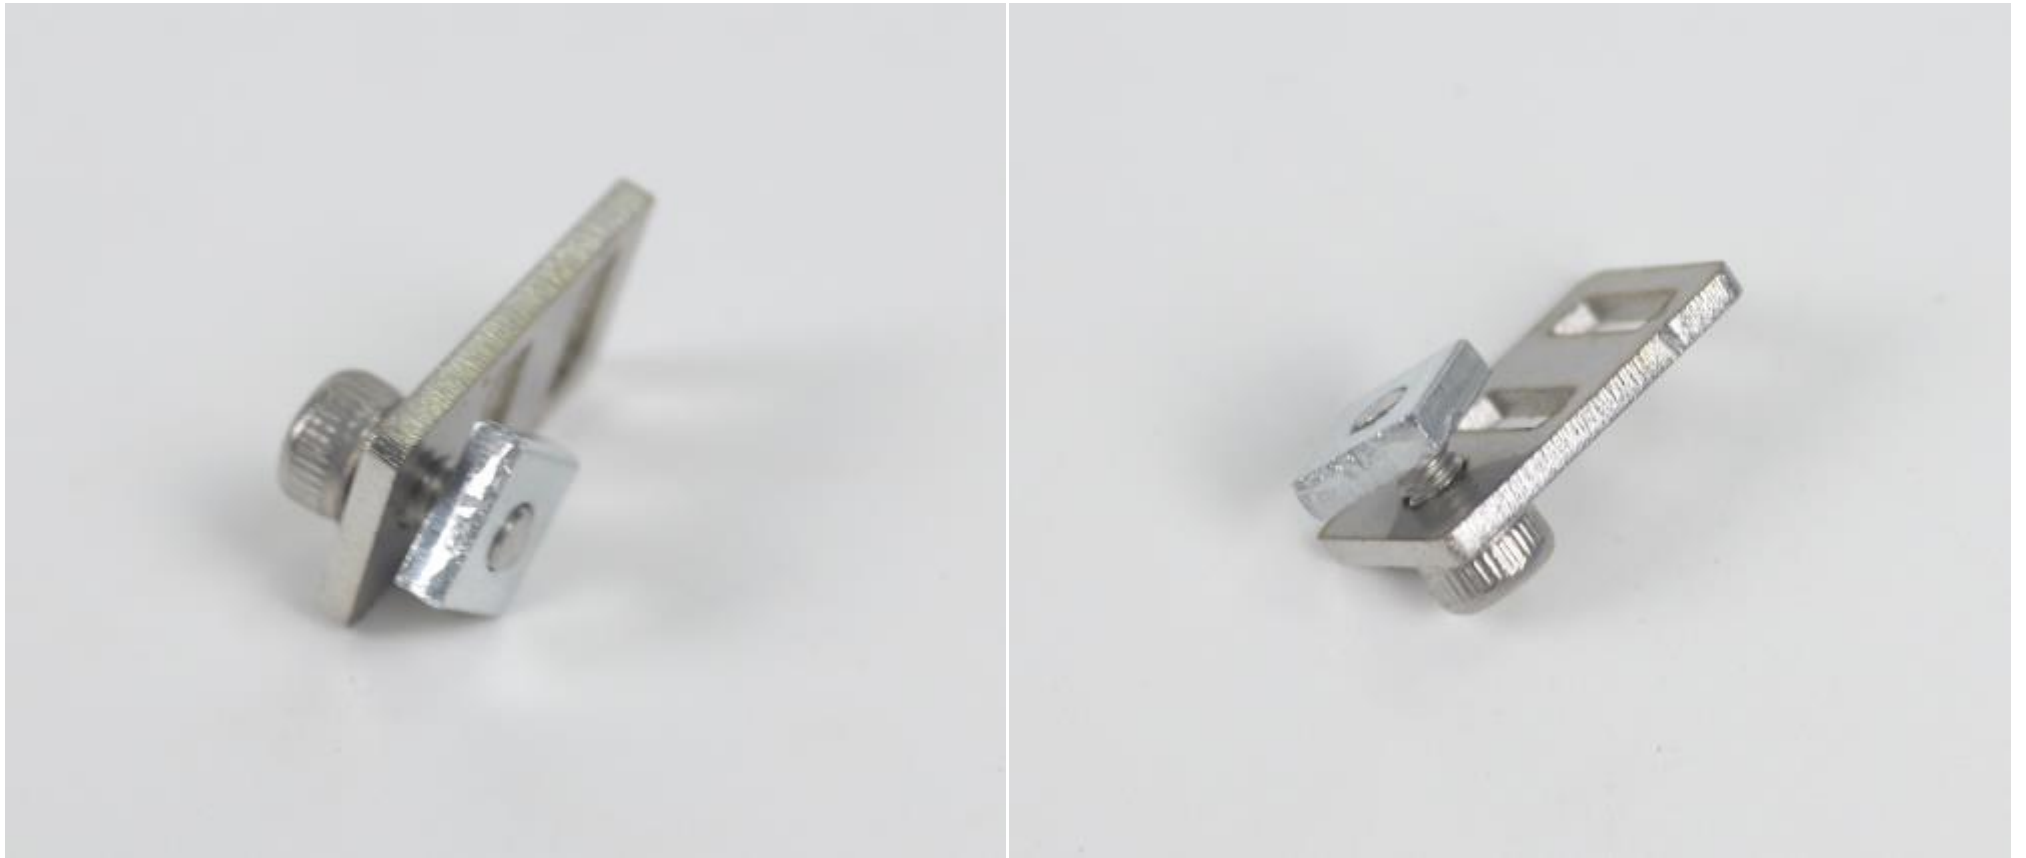

**[Step2]** Install timing belt into belt-tensioner.




Install the belt-tensioner into the aluminum material. Do not tighten the screws on the belt-tensioner . Need to move this end position while install the other side at the back.

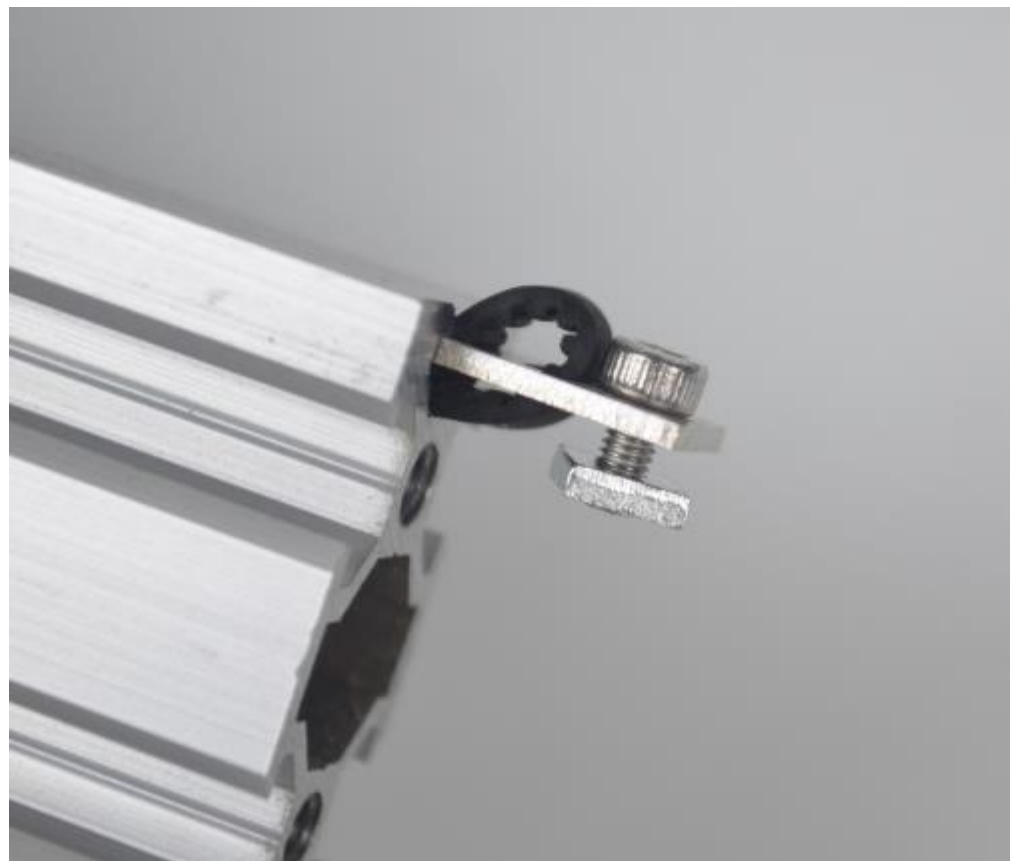



**[Step3]** Route of synchronous belt: through the lower end of the Pom-Wheel, through the top of the GT2 Timing Pulley, through the lower end of the Pom-Wheel.

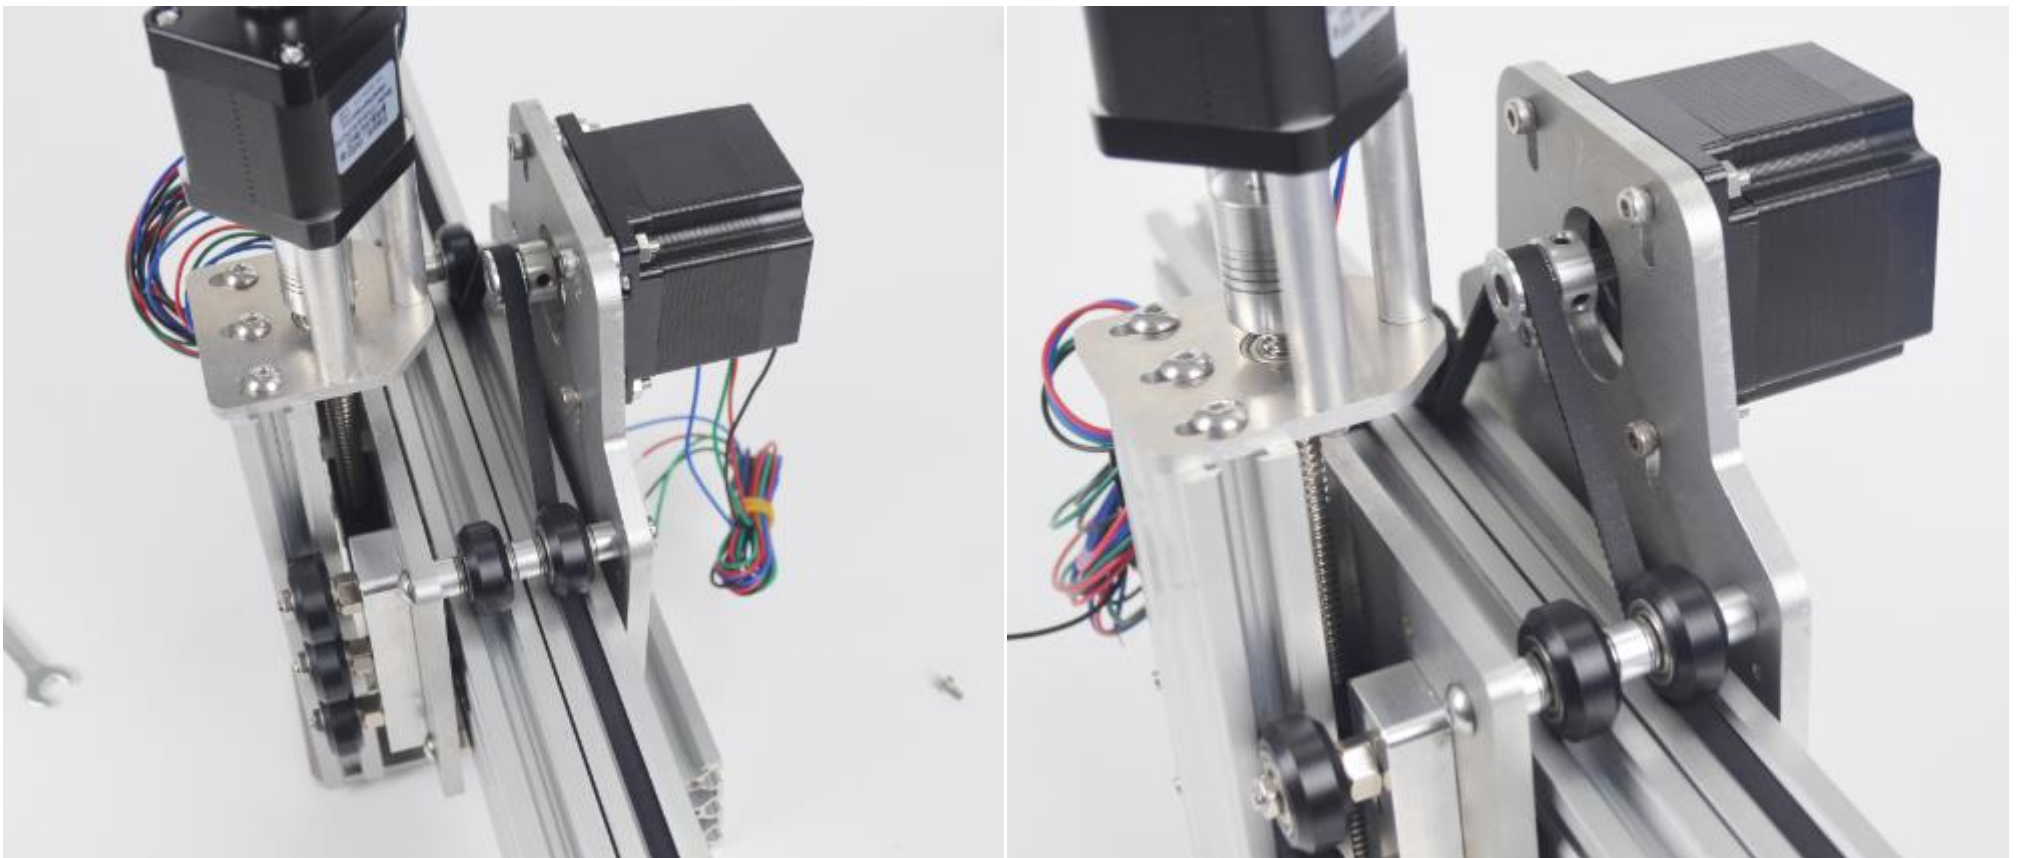

**[Step4]** Fix the other end of the GT2 Timing Belt as the step 2 , fasten the timing belt with a hex Wrench.

