



# Consideraciones ESP32



## Pasos previos

### 1. Instalar la placa

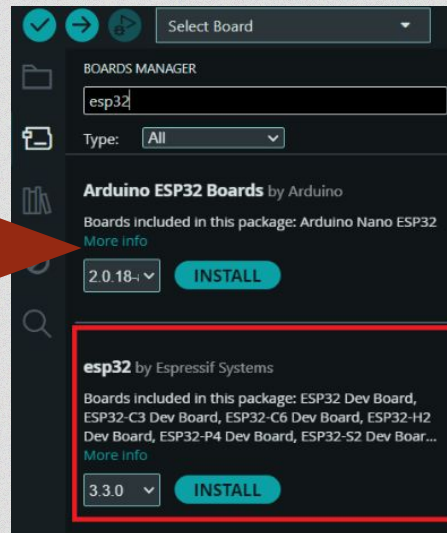

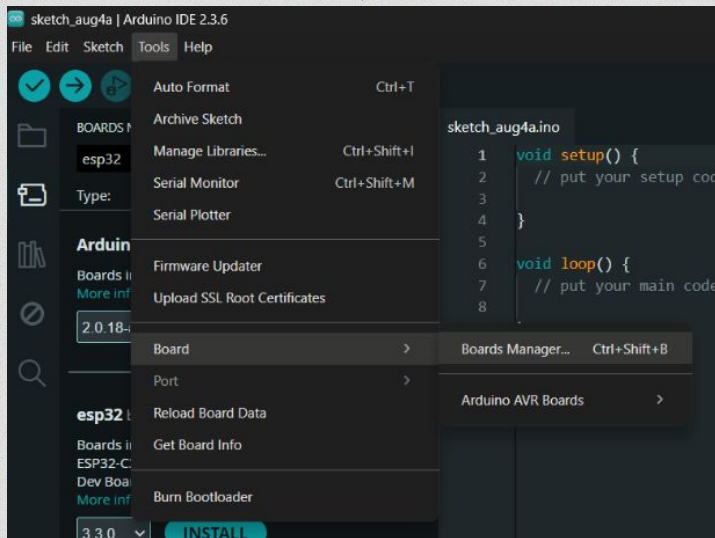

## 2. Seleccionar la placa

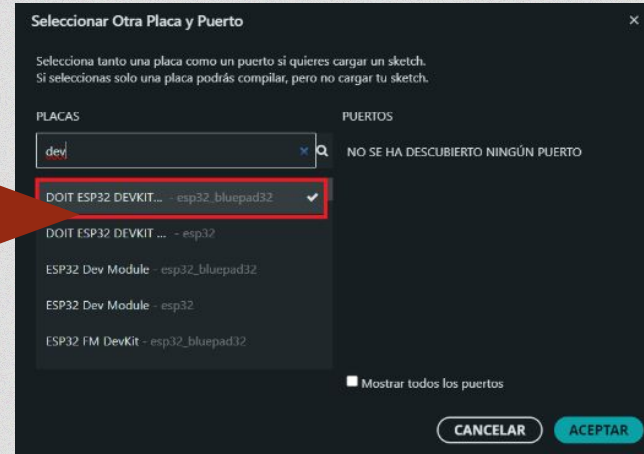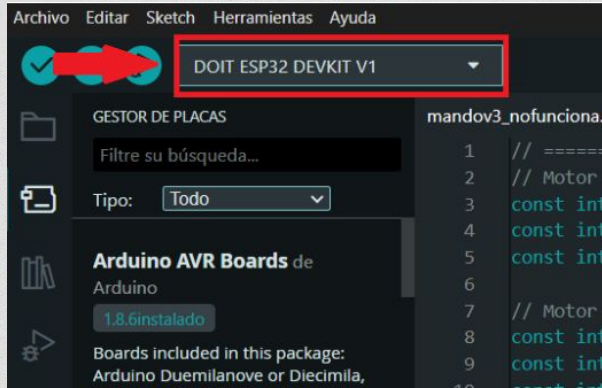

## 3. Listo





# Posibles problemas

## No les detecta los puertos

Instalar el driver CP210x VCP Windows:

<https://www.silabs.com/software-and-tools/usb-to-uart-bridge-vcp-drivers?tab=downloads>

### Software · 11

CP210x Universal Windows Driver	v11.4.0 12/18/2024
CP210x VCP Mac OSX Driver	v6.0.3 5/30/2025
CP210x VCP Windows	v6.7 9/3/2020
CP210x Windows Drivers	v6.7.6 9/3/2020
CP210x Windows Drivers with Serial Enumerator	v6.7.6 9/3/2020