



# CNC xPRO QUICK START GUIDE

## Powering with ATX supply:

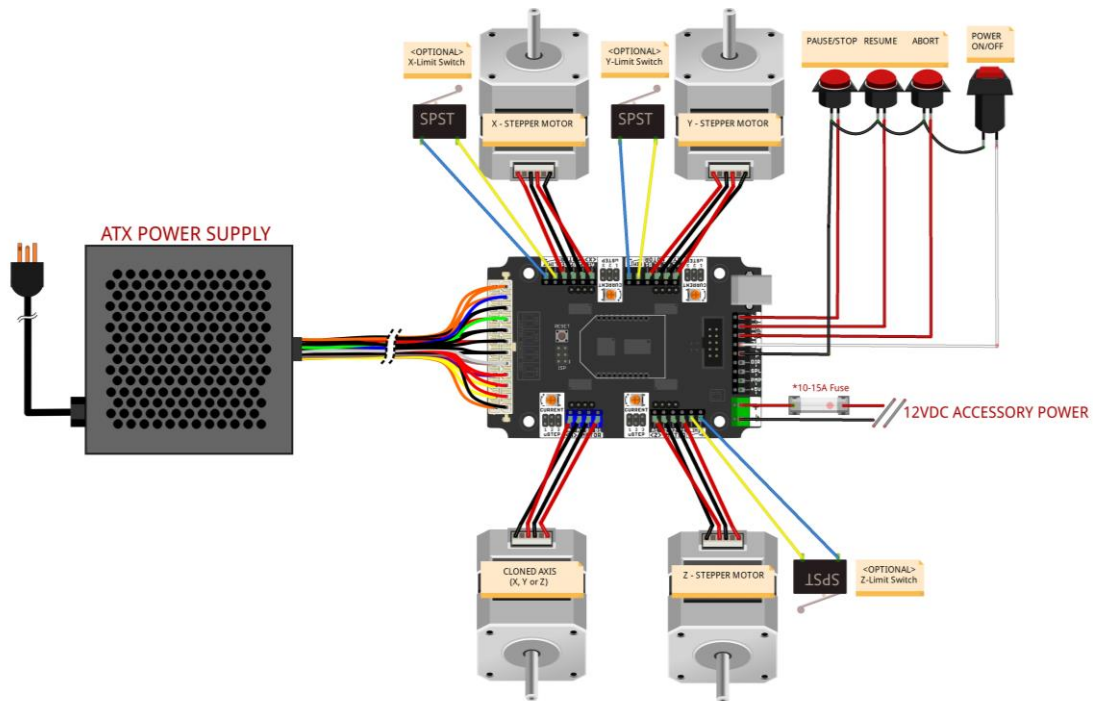

\* Fuse REQUIRED if connecting to 12VDC accessory output terminal (w/ ATX supply)

### Powering with 12-24V (DC) supply:

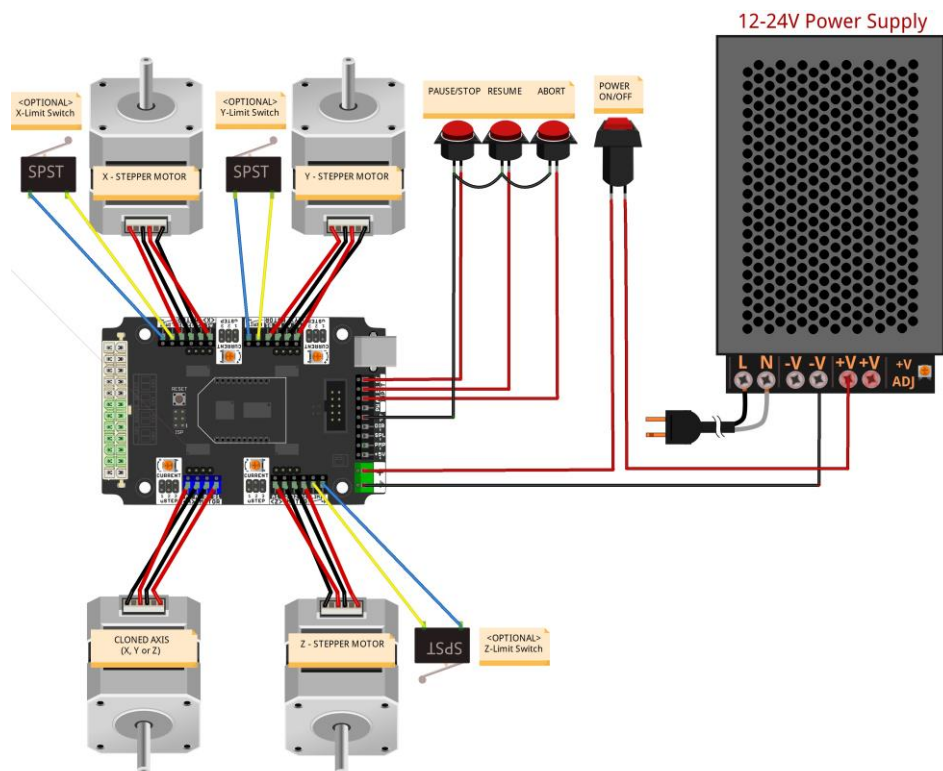

**NOTE: Please refer to your motor diagram for winding layout**