

? Terminal Operation Display Window

■ Terminal operation display

This window plots the ON/OFF status of each I/O terminal at a 0.2 ms frequency.

The ON/OFF status of each terminal can be confirmed without wiring.

* Changes of less than 0.2 ms in terminal conditions cannot be plotted.

■ Basic operations on the display window

Click the icon of (1) to open the terminal operation display setting window (2).


In this window, select the terminals to display and determine the display position.

Click the [Start monitoring] button to display trend graphs for the ON/OFF status of the selected terminals.


To confirm the ON/OFF status of other terminals when a certain terminal rose (fell), click the icon of (3) to open the terminal operation display search window (4).

In this window, select the terminal to search, its condition (rising/falling), and the search direction.

Click the [Search] button to display target points.

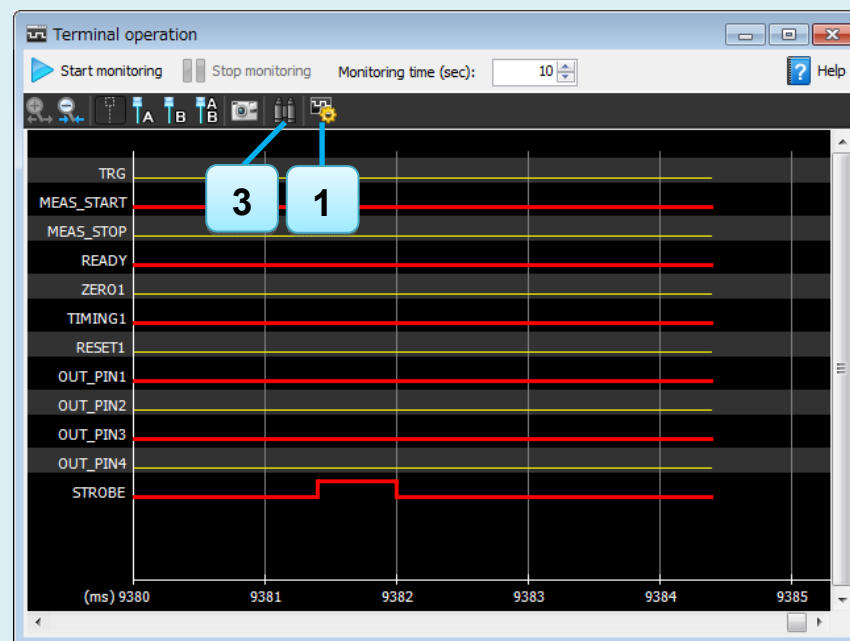

2

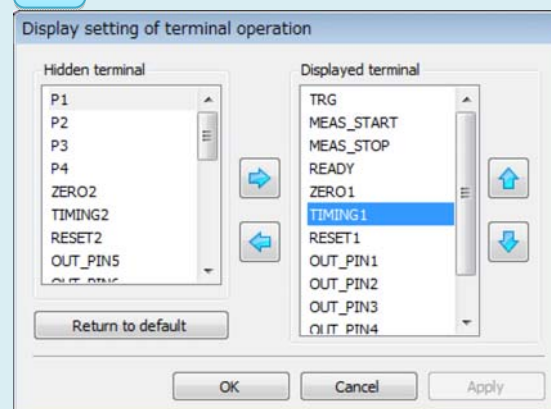

4

