




TARGET SIGHT RECURVE BOW

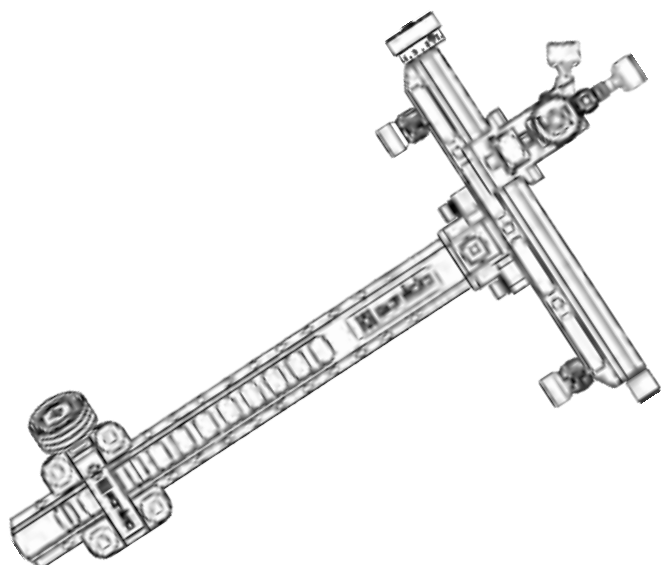

OPERATING INSTRUCTIONS

Thank you for purchasing this product.
This instruction sheet contains vital information to ensure safe use, and prevent accidents involving the product. Please read it carefully before using the product, and use it safely and responsibly. After reading, please keep this instruction sheet for future referral.

Caution and Warnings

Caution and Warnings

This products are designed with great care for safety. However, due to the nature of this product, certain parts contain sharp edges. Please take care when handing this product.

To ensure using this product to best effect, please confirm the following points before and after shooting:

1. Is the sight firmly attached to the bow riser?
2. Is the mounting knob firmly tightened?
3. Are there any loose screws?
4. Are all moving parts moving smoothly?

In the case of a problem concerning above points, abort usage immediately, and contact your archery retailer about the issue.

If used in rain or otherwise exposed to moisture, use a soft cleaning cloth to wipe off excess moisture, and let dry in a place with low humidity.

Please follow the instructions in this instructions sheet closely to avoid breakage or malfunction.

This sight is compatible with all bows featuring 10#-24 threaded sight mounting holes that are 33.3 mm apart.


This sight is compatible with scopes featuring a 8#-32 threaded scope rod.

Please use only the included 10#-24 sight mounting screws.


Damage caused by over tightening of screws, or tightening at a wrong angle is not covered by warranty.



Scope installation

Push the adjust buttons on the Aperture Block and insert the it from the bottom of the Elevation Bar. Move the Aperture Block to the proper location, then release the button, make sure the Aperture Block and Elevation Bar are matched perfectly. Please note that the Release Lever must be fully depressed when inserting.

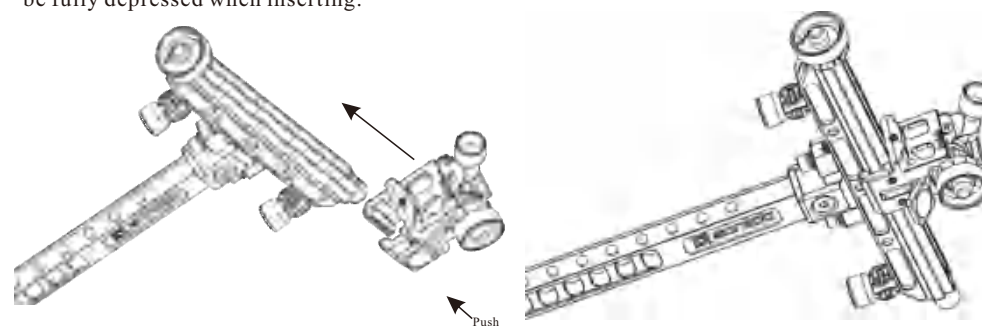


Take the fiber optic fixed seat off, put the pin bar in the sight pin locker, then use the cap nut to fix it, make sure it won't be loose. Then put the fiber optic fixed seat at the another side apposite the pin. Put the pin amount back to the Aperture Block (Please note that there is a locating groove on the pin amount, it should be faced up), then use the screw to fix the pin amount.

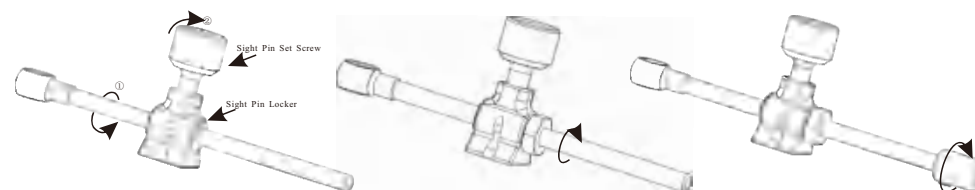

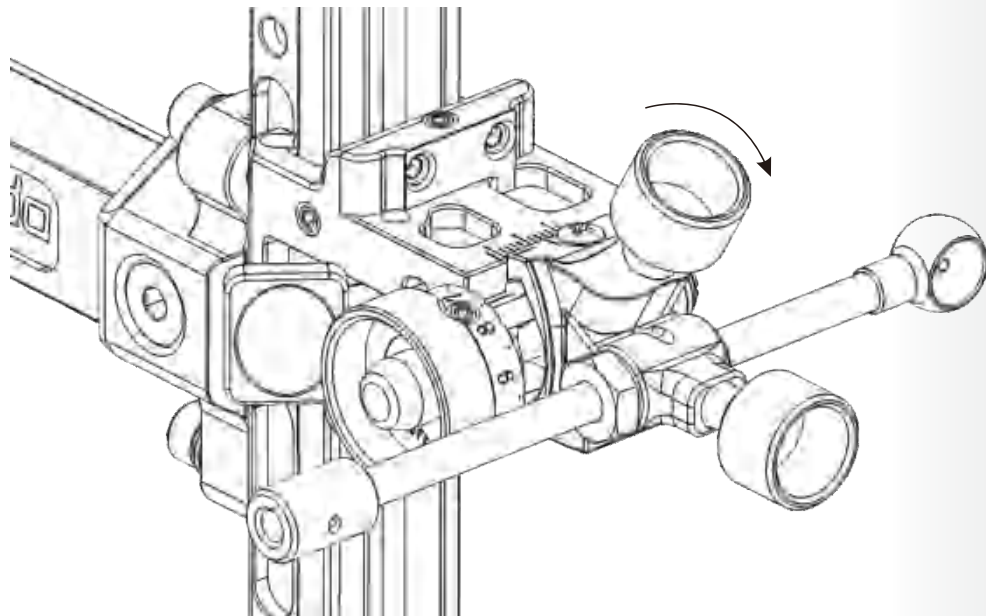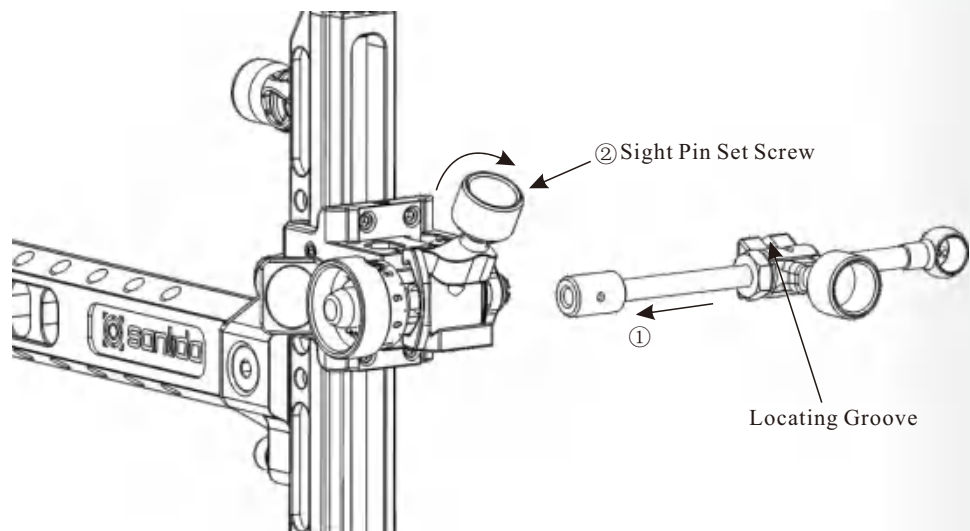

Sight adjustment

Release the fixed button on the sight mount, then the sight bar can be adjusted front and back.

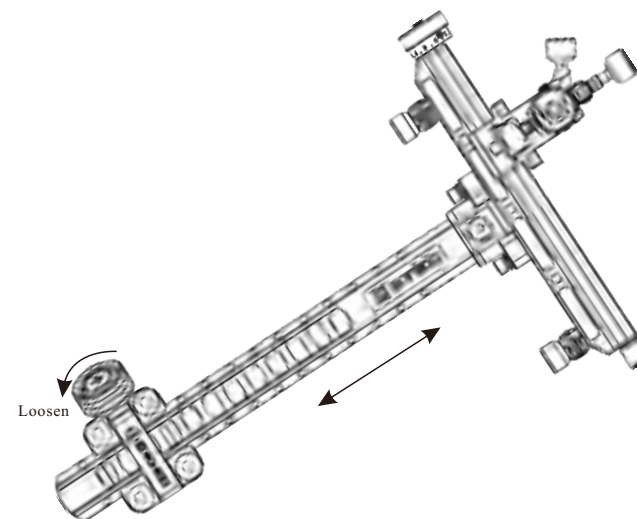

Push the Aperture Block buttons, the pin can be adjusted up or down quickly.
 Turn the up & down button, the pin will be adjusted up or down slightly.
 Turn the left & right button, the pin will be adjusted left or right slightly.
 Release the sight pin cap nut then turn the pin bar, the pin can be adjusted to left or right quickly.
 When the pin is adjusted to the proper position, then fix the cap nut to avoid the loose with the pin.

