

BITWIG STUDIO CONTROLLER EXTENSION

NOVATION
Launchpad Mini Mk3



NOVATION LAUNCHPAD MINI MK3

Mix Panel Layout

Pads

Use the pads to trigger clips.

Navigation

Use the arrow buttons to navigate your project.

Mode Selection

Use the mode buttons to switch to a different mode: Session, Drums, Keys or User.

Double-press the Session button to see a miniaturized overview of your project (for quick navigation).

In this guide only Session mode is described. Detailed information about Drums, Keys, and User modes can be found in the Launchpad Mini manual.

Scene Launch

Press one of the Scene Launch buttons to start a clip launcher scene.

Stop/Solo/Mute/Transport

Toggle through different modes of the bottom pad row:

Default pad functions (white)

Stop clips (red)

Solo tracks (yellow)

Mute tracks (orange)


Transport and ALT functions* (green)

Transport*

Play (green)
Overdub (red)
Metronome (blue)

ALT Mode*

Hold this pad (pulsating white) and press a pad or a scene button to ALT-trigger clips.

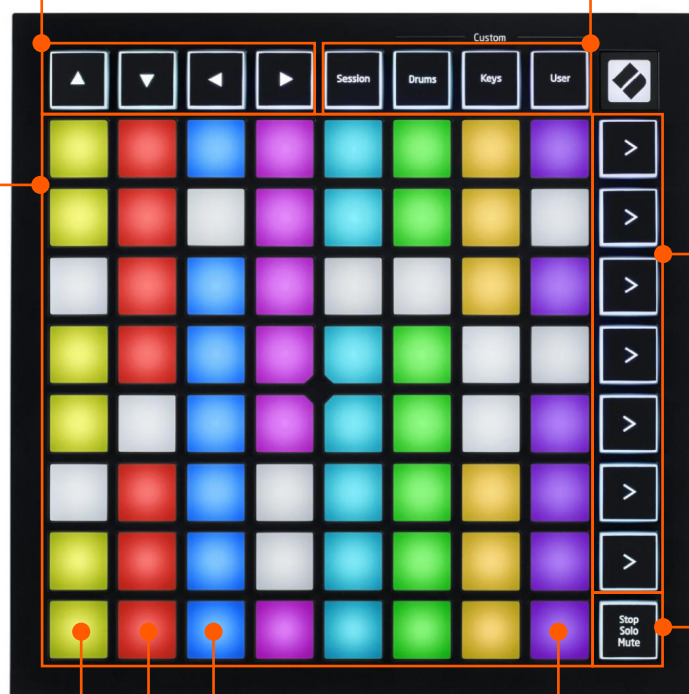

NOVATION LAUNCHPAD MINI MK3


Arrange Panel Layout

Differences in the Arrange Panel Layout

When the Launchpad Mini is used in Arrange Panel Layout, the pads in the bottom row turn white and become Scene Launch buttons.

The vertical row of buttons on the right can be used to select tracks.

When Stop/Solo/Mute/Transport Mode is active, pad row 8 can be used to toggle these parameters.

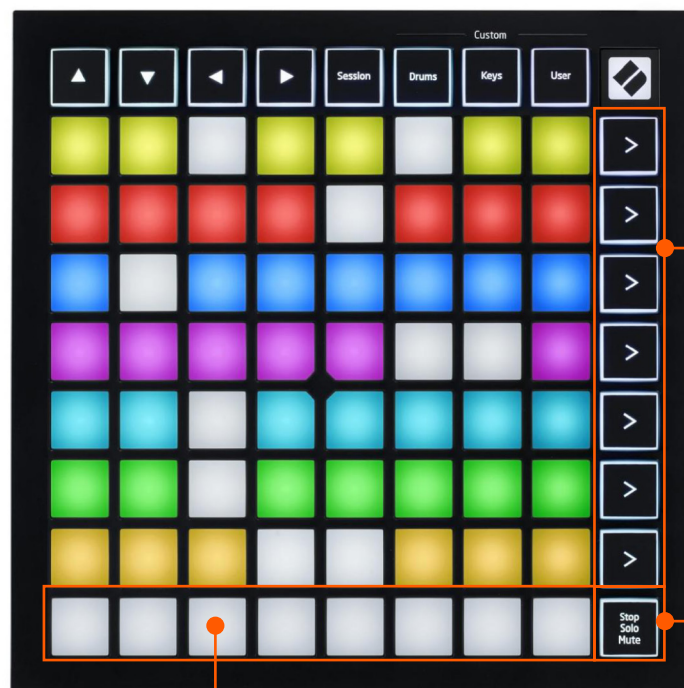

Scene Launch

Press one of the white pads in the bottom row to start a clip launcher scene.

Track Select

Press one of the buttons to select a track.

Stop/Solo/Mute/Transport

Toggle through different modes of pad row 8:

Default pad functions (white)

Stop clips (red)

Solo tracks (yellow)

Mute tracks (orange)

Transport and *ALT* functions* (green)

NOVATION LAUNCHPAD MINI MK3

Setup and Options

Setup

Important: Make sure your Launchpad Mini MK3 firmware is version 0341 (App / Boot) or higher. Please go to components.novationmusic.com to install the latest firmware.

The Launchpad Mini should be detected and set up automatically when it is connected. If you add the controller manually, make sure the MIDI ports are selected in the correct order:

Mac/Linux:

In 1: Launchpad Mini MK3 LPMiniMK3 DAW Out
In 2: Launchpad Mini MK3 LPMiniMK3 MIDI Out
Out: Launchpad Mini MK3 LPMiniMK3 DAW In

Windows:

In 1: LPMiniMK3 MIDI
In 2: MIDIIN2 (LPMiniMK3 MIDI)
Out: LPMiniMK3 MIDI

Options

In Bitwig Studio, go to Dashboard > Settings > Controllers > Launchpad Mini Mk3 to select various options.

Grid Layout

You can determine the orientation of the grid layout to match the Clip Launcher either in the Mix Panel (vertical tracks) or Arrange Panel (horizontal tracks).

When set to Automatic, the Launchpad Mini follows the currently displayed layout in Bitwig Studio.

