




BRAKE PAD/DISC/CALIPER


BRAKE PAD REPLACEMENT

- Always replace the brake pads in pairs to assure even disc pressure.
- After the brake pad replacement, check the brake fluid level and brake operation by applying the brake lever.

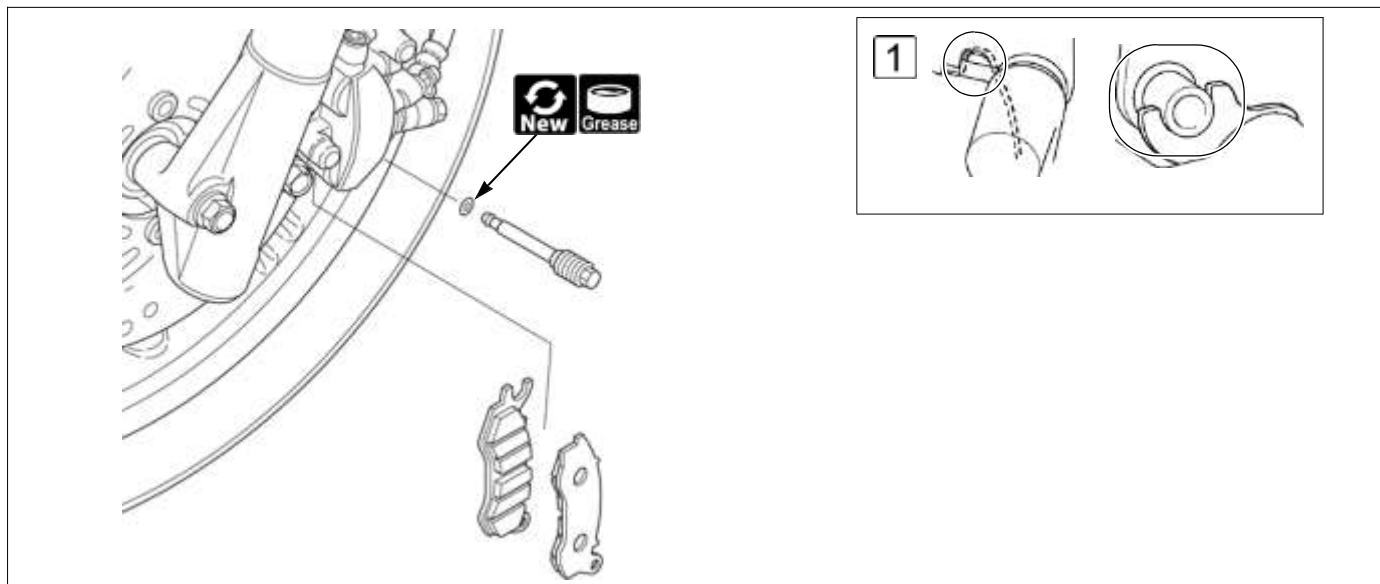

- **1** Install the brake pads so that they are set on the brake caliper bracket and bracket pin.


BRAKE DISC INSPECTION

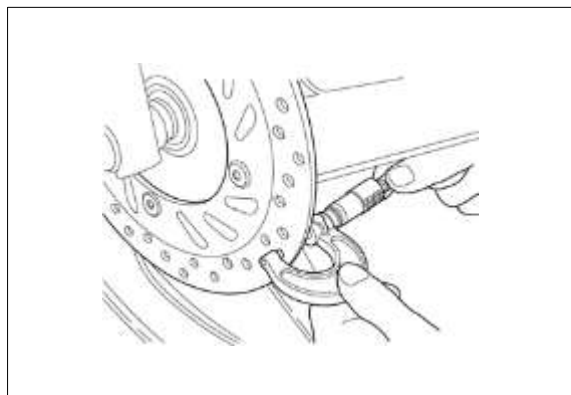

- Brake disc for damage or cracks



- Brake disc thickness at several points
 - If the thickness less than service limit, replace the brake disc with a new one.

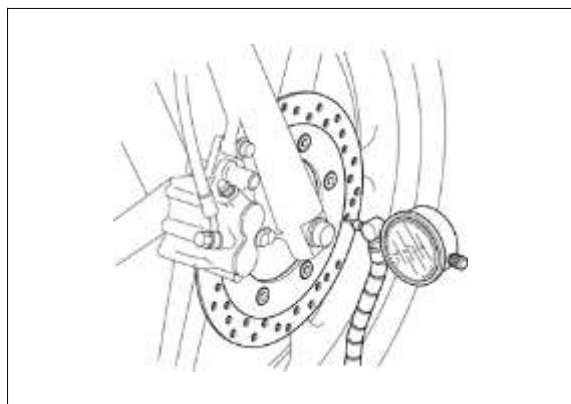

- Brake disc for warp
 - If the warpage exceeds the service limit, check the wheel bearings for excessive play.