




MIL CIRCUIT INSPECTION

DIAGRAM

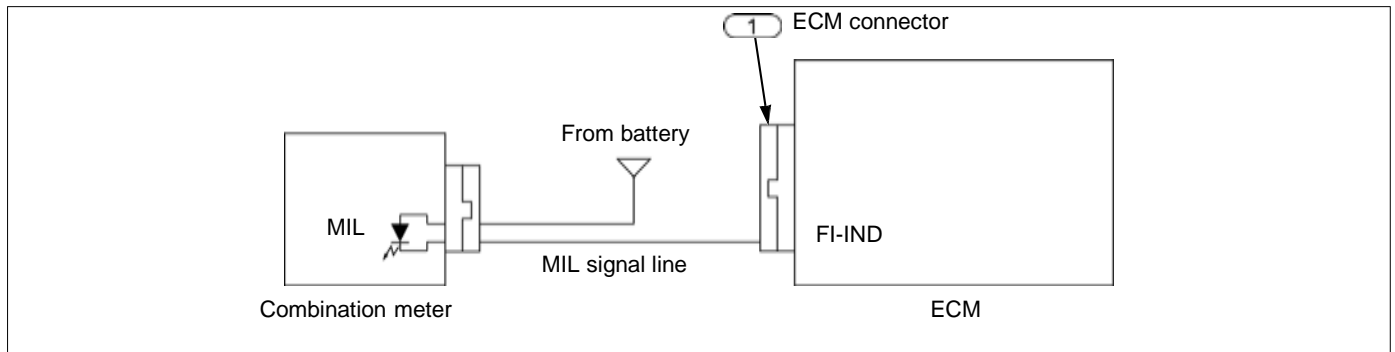

When the ignition switch is turned on, the MIL does not come on



- Connection: FI-IND terminal – Ground
- Does the MIL come on?

No
►

- Combination meter is normal, check the MIL signal line.

Yes ▼

- Replace the ECM with a new one, and recheck.

When the ignition switch is turned on, the MIL does not go off within a few seconds
(engine starts and No MIL code set)



- After few seconds, does the MIL stay off?

No
►

- Check the MIL signal line for short circuit.

Yes ▼

- Check the MIL signal line.
- If there is no problem, replace the ECM with a new one, and recheck.