




Honda SMART Key SOUND

Switch the buzzer sounding when the ignition switch locked/unlocked

Enable:

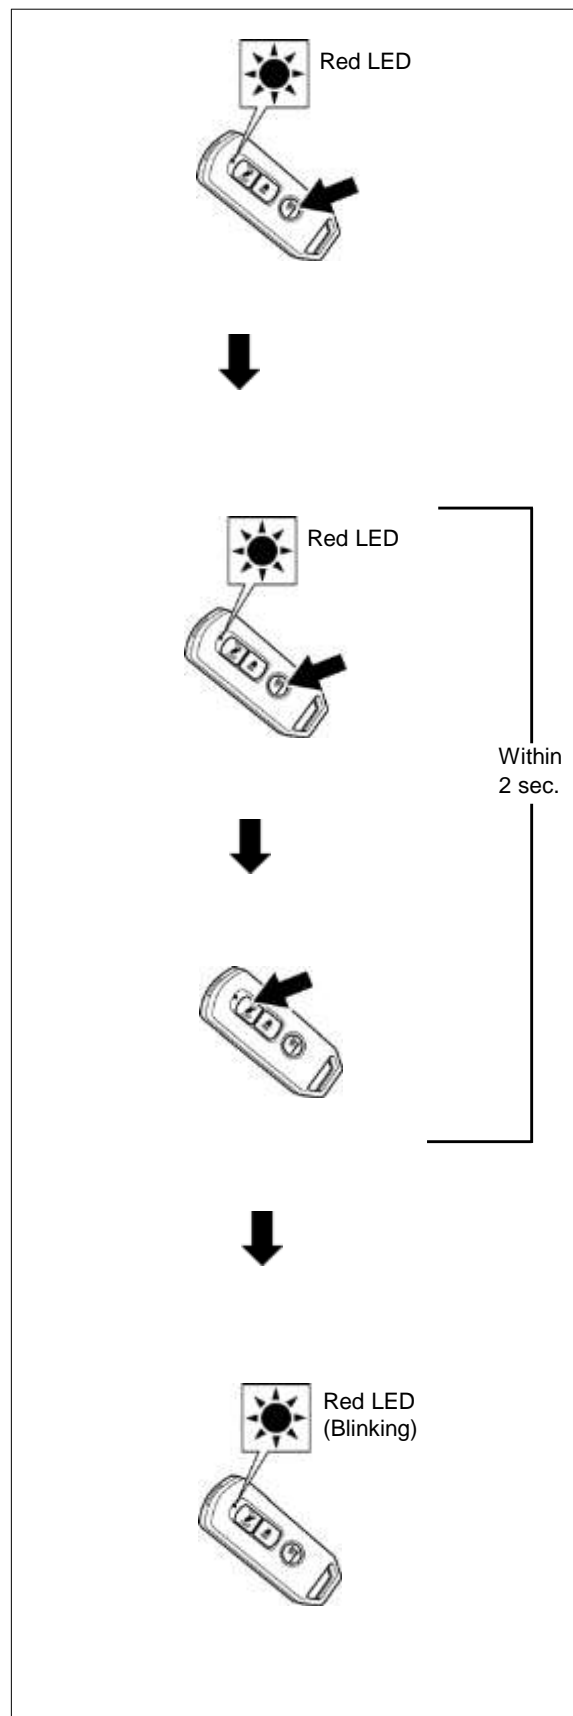

- Push and hold the Honda SMART Key ON/OFF button to deactivate the system.
 - Green LED blinks five times and then Red LED blinks once.

- Lightly press the Honda SMART Key ON/OFF button.
 - Red LED of the Honda SMART Key comes on.

- Push the Honda SMART Key answer back button while the Red LED is on.

- Red LED of the Honda SMART Key starts blinking when the buzzer sounding is properly enabled.