





DRIVE BELT

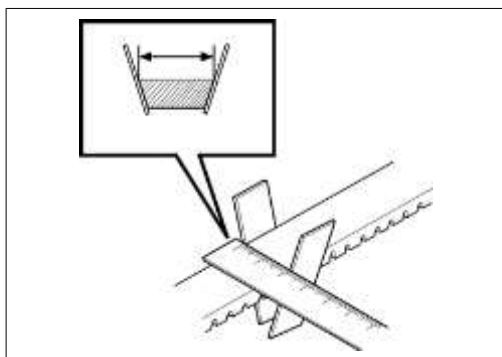


- Drive belt for cracks on the side face, separation or abnormal or excessive wear.
- Drive belt width (using the suitable two flat plates)

FINAL DRIVE OIL (SCOOTER TYPE) OIL LEVEL CHECK

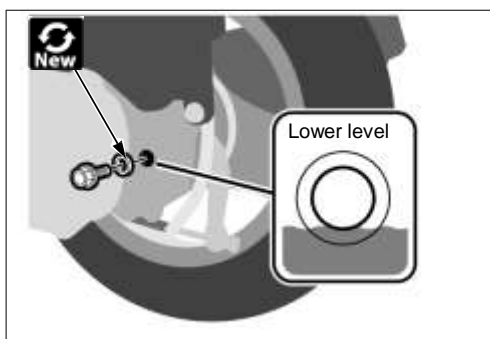

- Support the scooter with its centerstand or a maintenance stand.
- Final reduction case oil leaks
- Oil check bolt
- Sealing washer
- Check the oil level is at the lower line of check bolt hole.
- If the level is low (oil does not flow out), add the recommended oil.

OIL CHANGE

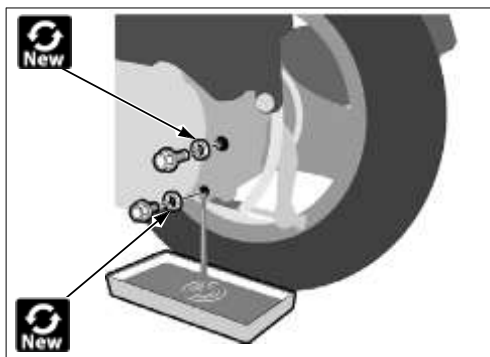

- Place an oil drain pan under the final reduction case to collect the oil.
- Oil check bolt
- Oil drain bolt
- Sealing washers
- Slowly turn the rear wheel and drain the oil.
- New sealing washer
- Oil drain bolt
- Fill the final reduction case with recommended oil up to the correct level.
- New sealing washer
- Oil check bolt