



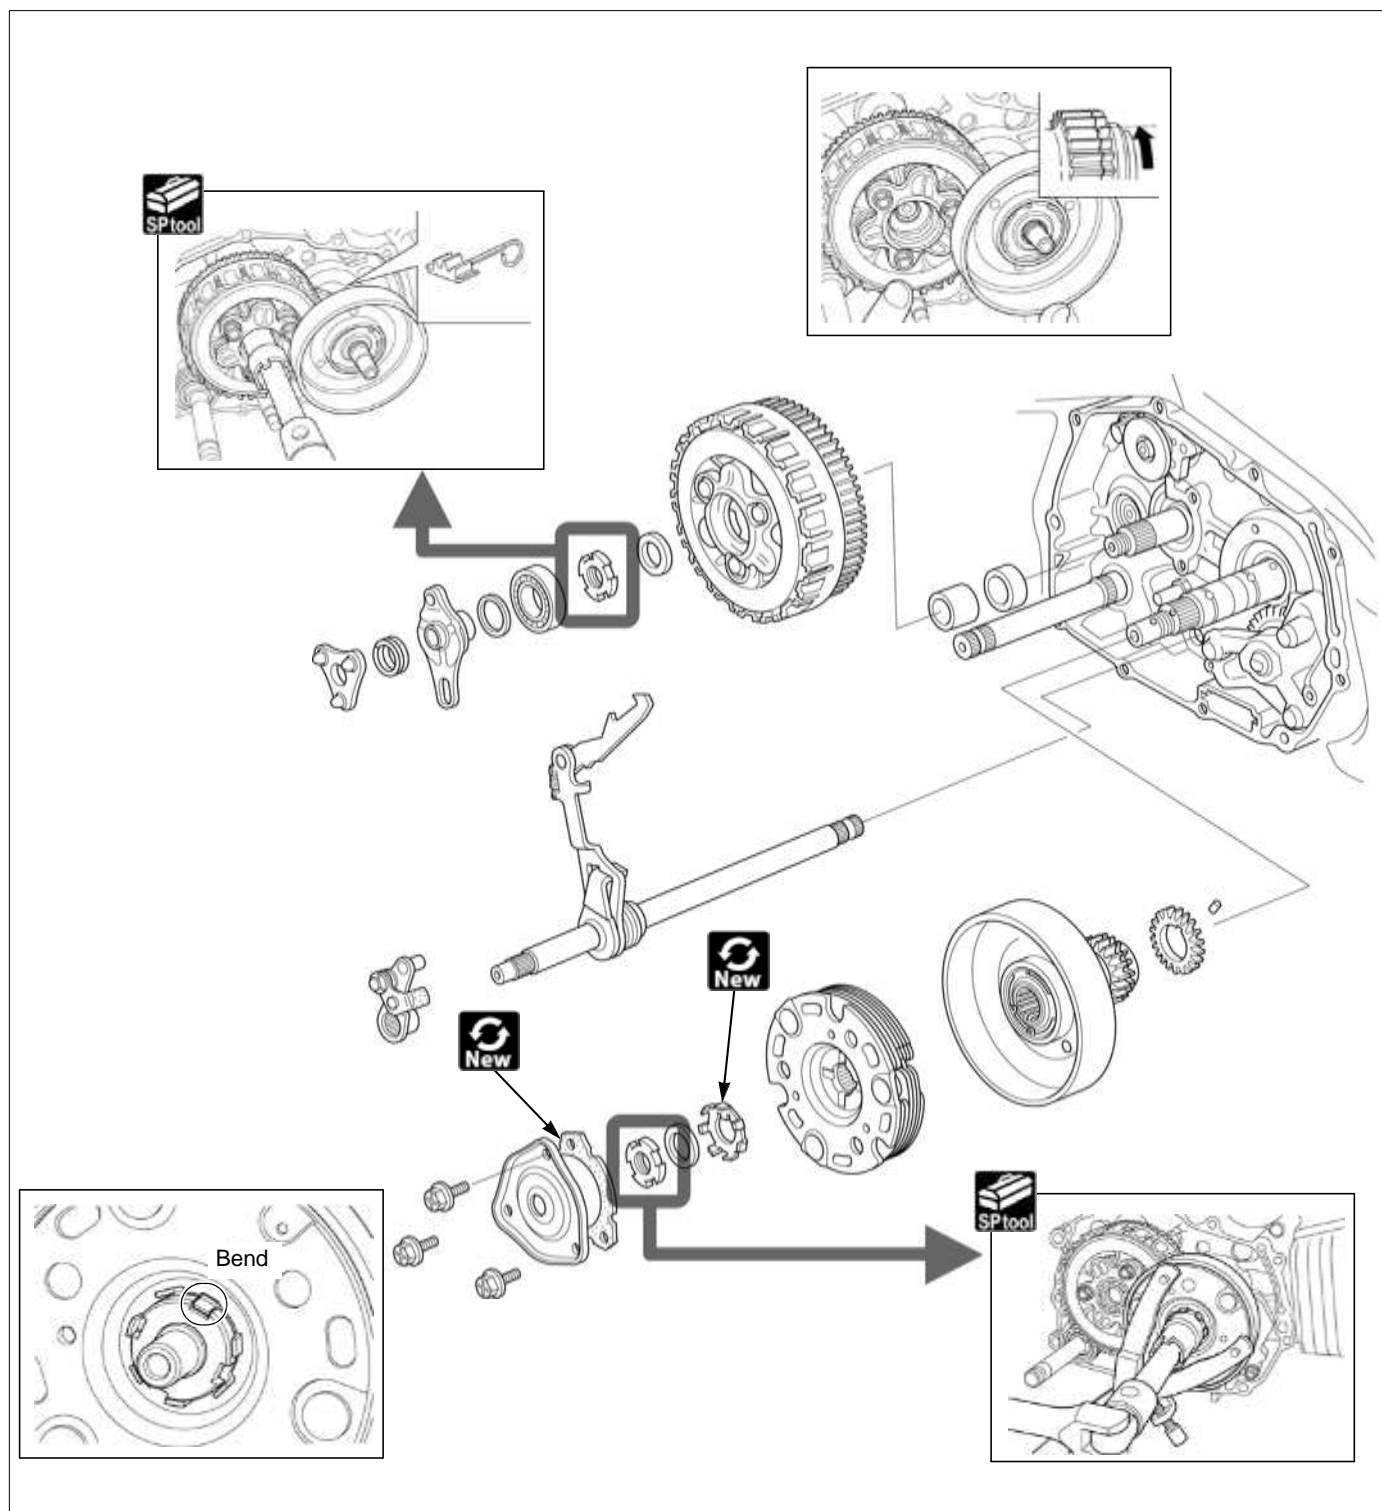

## CLUTCH (CUB TYPE)

### REMOVAL/INSTALLATION

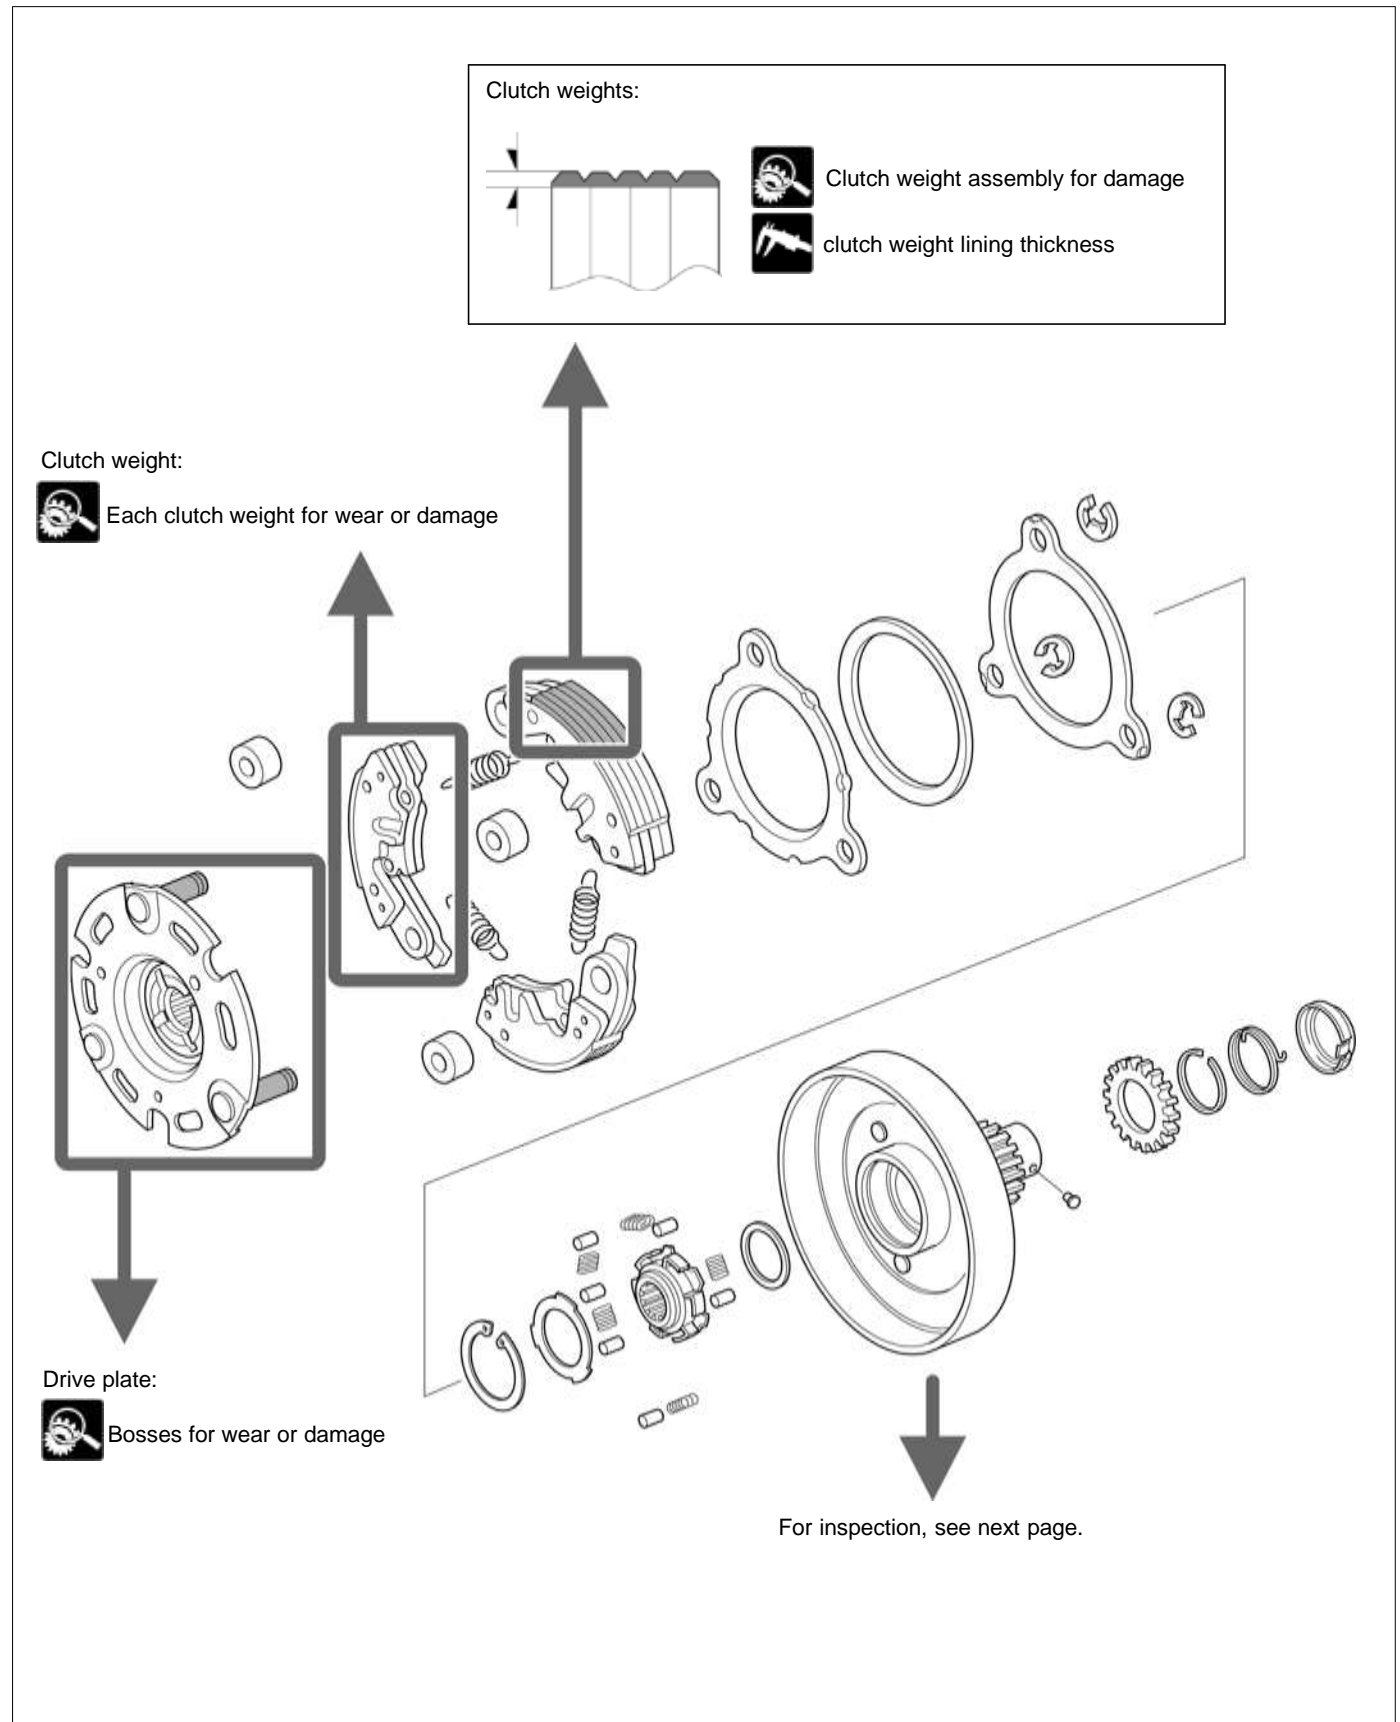


**CENTRIFUGAL CLUTCH DISASSEMBLY/INSPECTION****Clutch Weight:**





## FUEL&ENGINE

### Clutch Outer/One-way Clutch:


Centrifugal clutch outer:

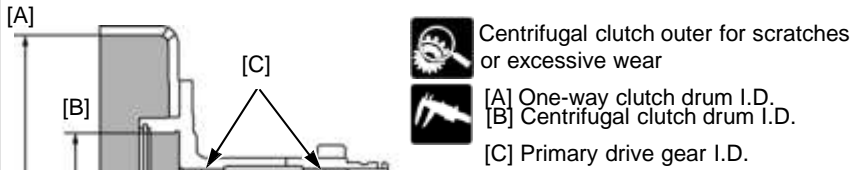


Crankshaft:

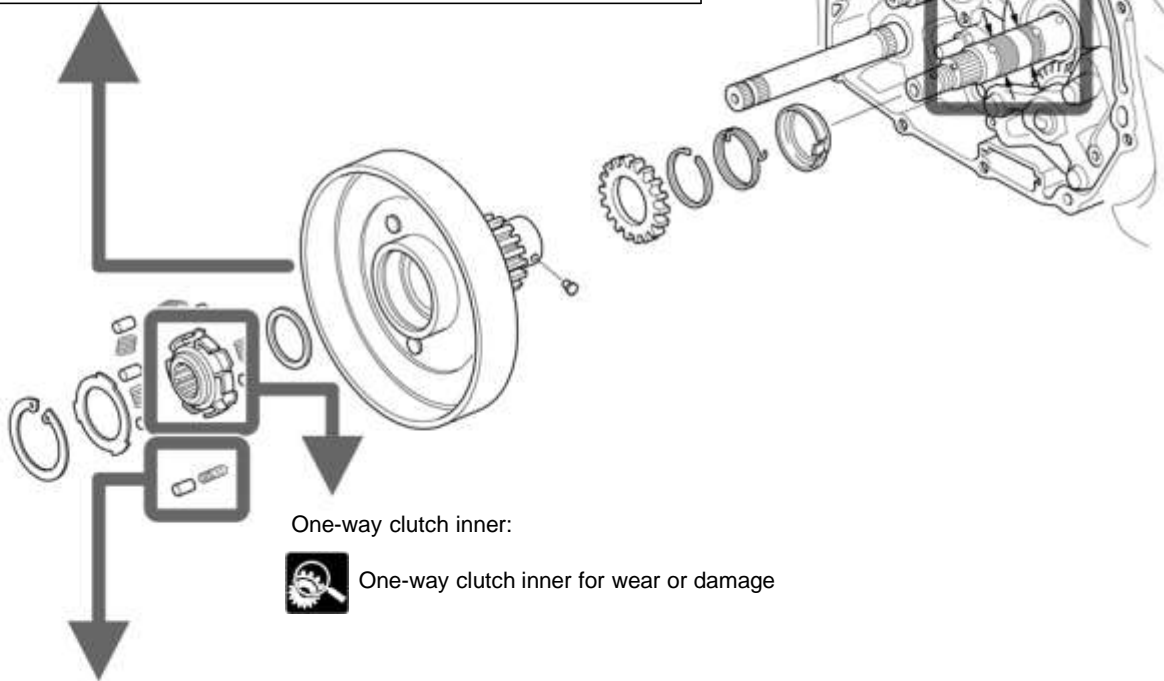


One-way clutch inner:



Rollers and springs:

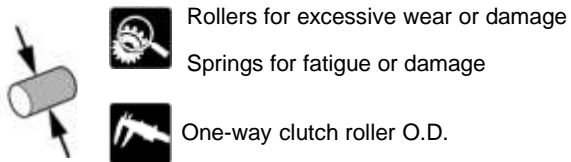

### GEARSHIFT LINKAGE INSPECTION

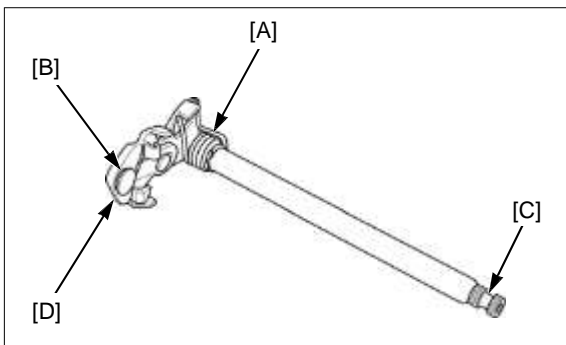

- [A] Return spring for fatigue or damage
- [B] Spindle arm spring for fatigue or damage
- [C] Gearshift spindle for wear or bend
- [D] Spindle arm for wear, damage or deformation



## MANUAL CLUTCH INSPECTION

