





SHOCK LINKAGE

REMOVAL/INSTALLATION

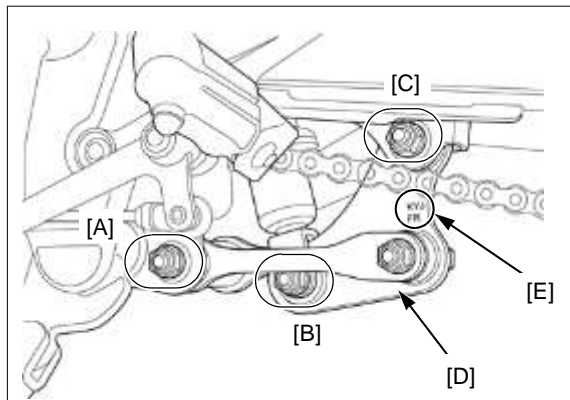


- Support the vehicle using a safety stand or hoist, raise the rear wheel off the ground.
- Front shock link bolt and nut [A]
- Shock absorber lower mounting bolt and nut [B]
- Shock arm bolt and nut [C]
- Shock linkage assembly [D]
- If the identification mark [E] is available, according to install the shock linkage.

INSPECTION

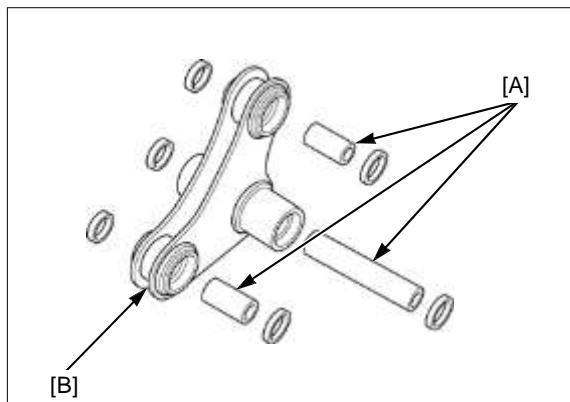

- Collars [A] for wear, damage or fatigue
- Shock arm [B] for cracks or damage

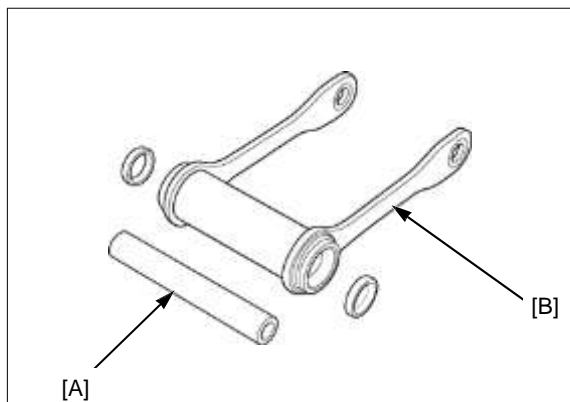

- Collar [A] for wear, damage or fatigue.
- Shock link [B] for cracks or damage.