



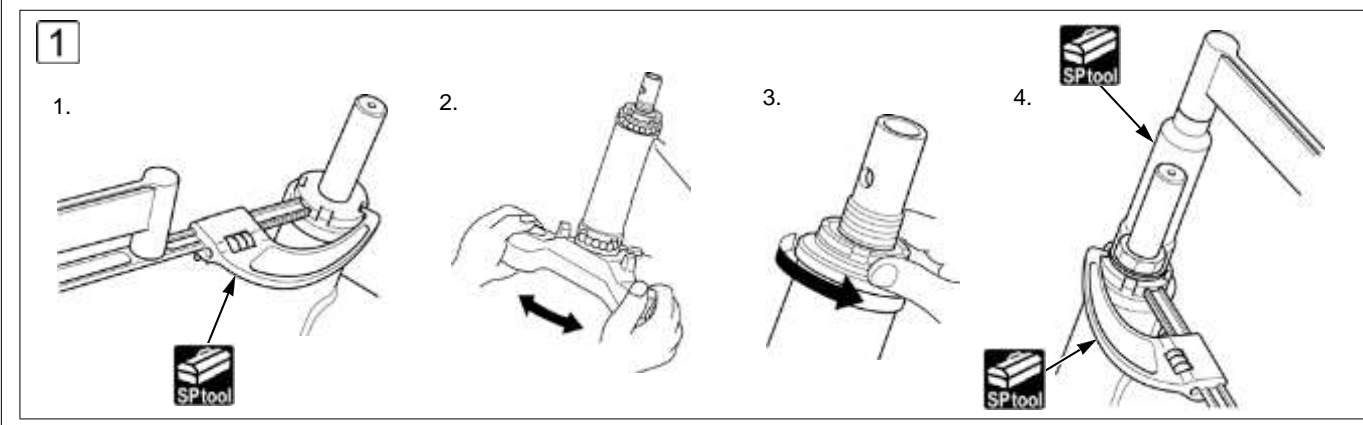

INSTALLATION

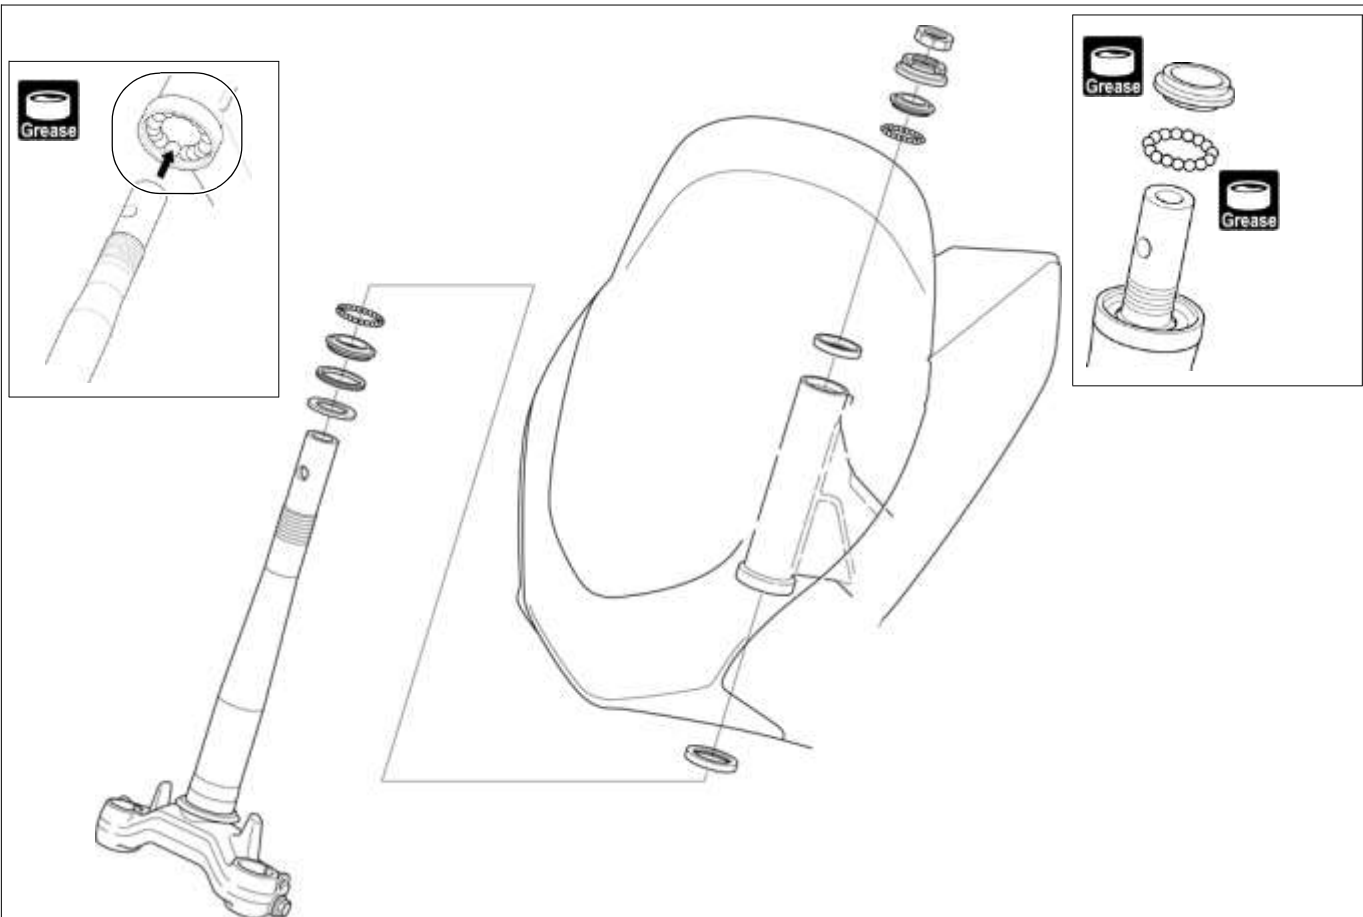

- 1 Top thread tightening sequence:
 1. Hold the steering stem and tighten the stem top thread to the initial torque.
 2. Turn the steering stem lock-to-lock several times to seat the bearing.
 3. Completely loosen the top thread.
 4. Hold the steering stem and tighten the stem top thread to the specified torque using the special tool.