



## DRIVE TRAIN (SCOOTER TYPE)

### SERVICE INFORMATION

- Avoid getting grease and oil on the drive belt and drive/driven pulley faces in order to prevent belt slippage.

### TROUBLESHOOTING

#### Engine starts but vehicle won't move

- Worn drive belt
- Damaged ramp plate
- Worn or damaged clutch shoes and/or clutch outer
- Broken driven face spring

#### Engine stalls or creeps


- Broken clutch shoe spring

#### Poor performance at high speed or lack of power

- Worn drive belt
- Weak driven face spring
- Worn weight rollers
- Contaminated pulley faces


## DRIVE PULLEY

### REMOVAL/INSTALLATION

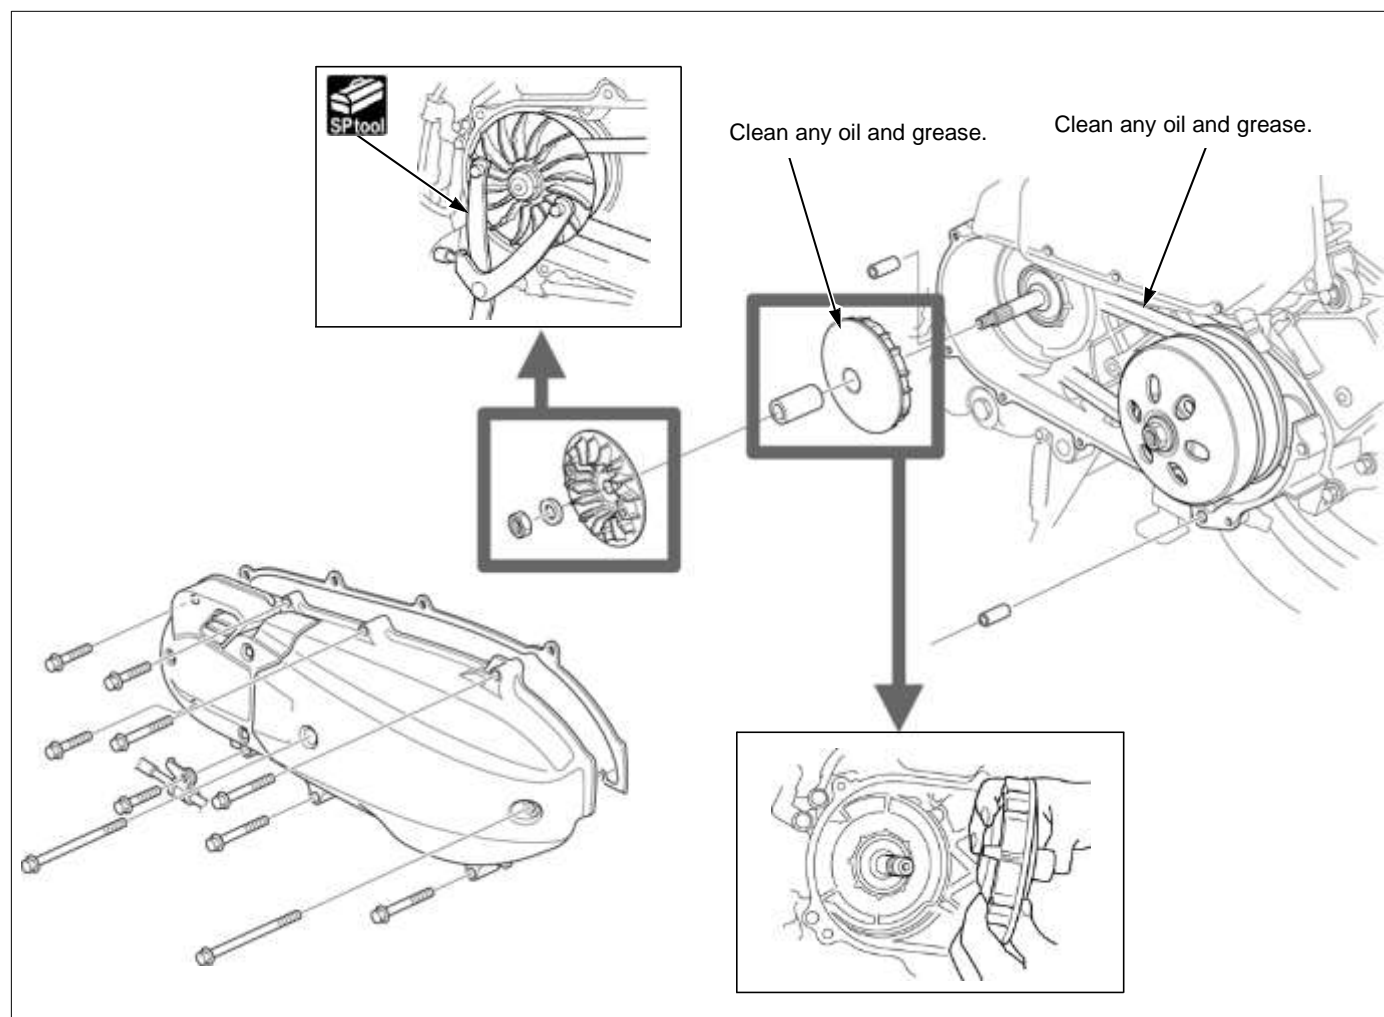




## INSPECTION

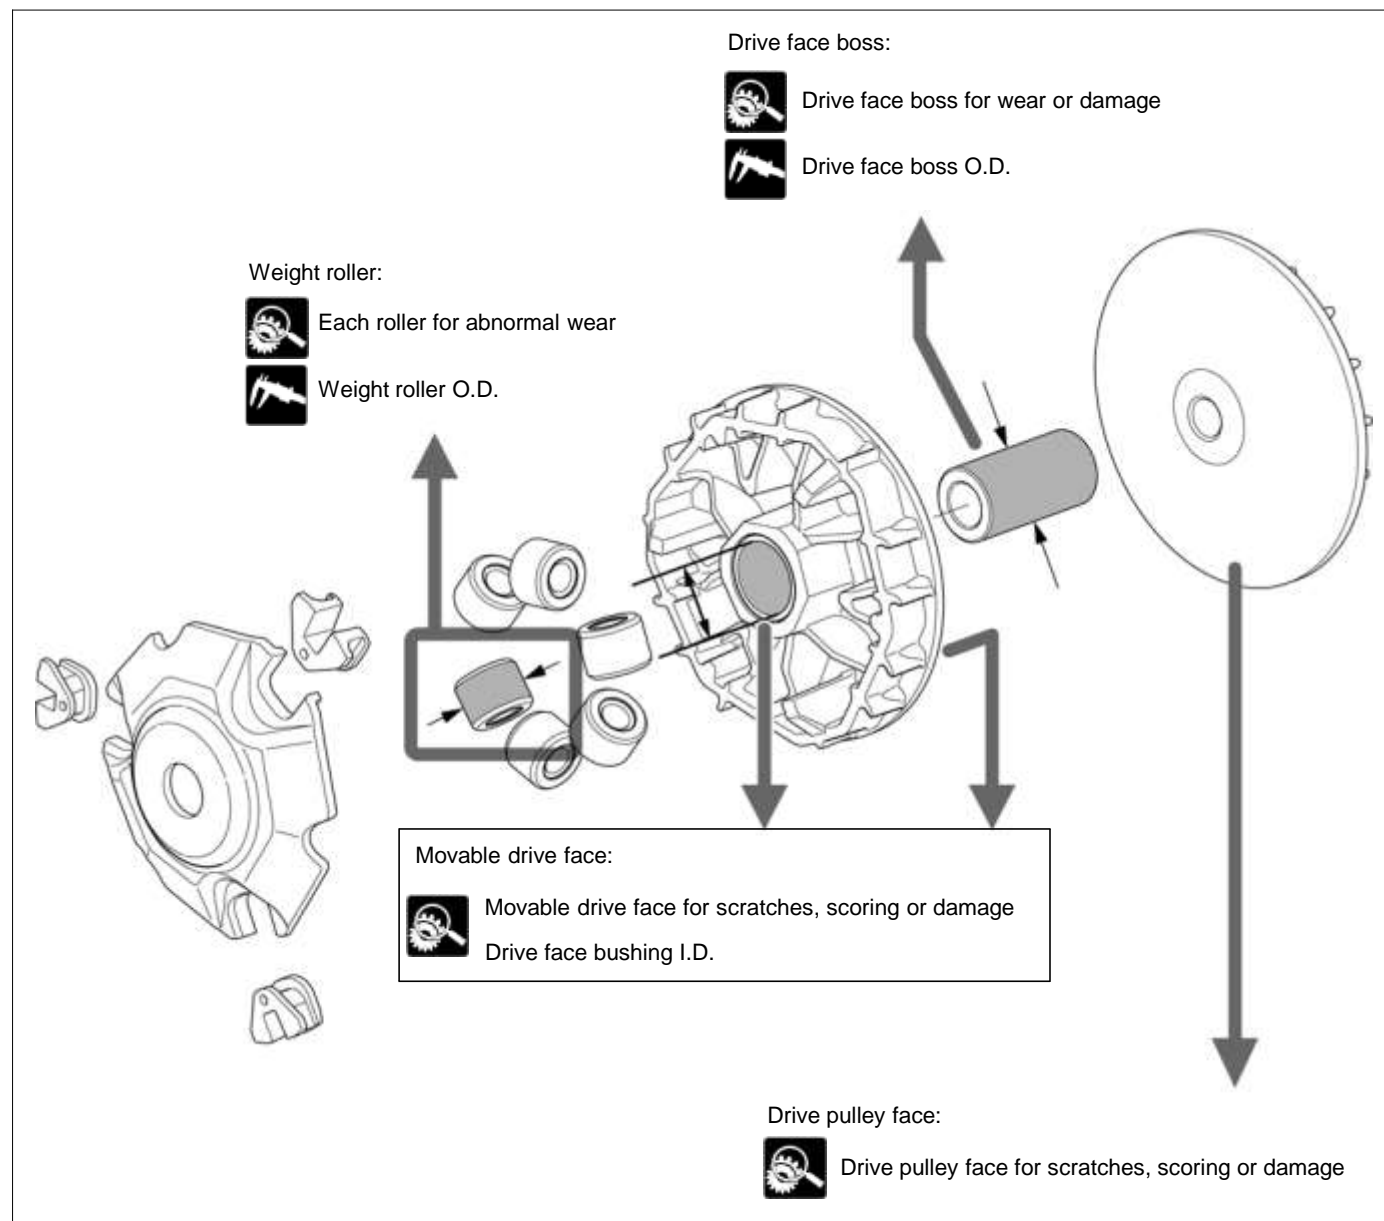



## CLUTCH/DRIVEN PULLEY

### REMOVAL/INSTALLATION

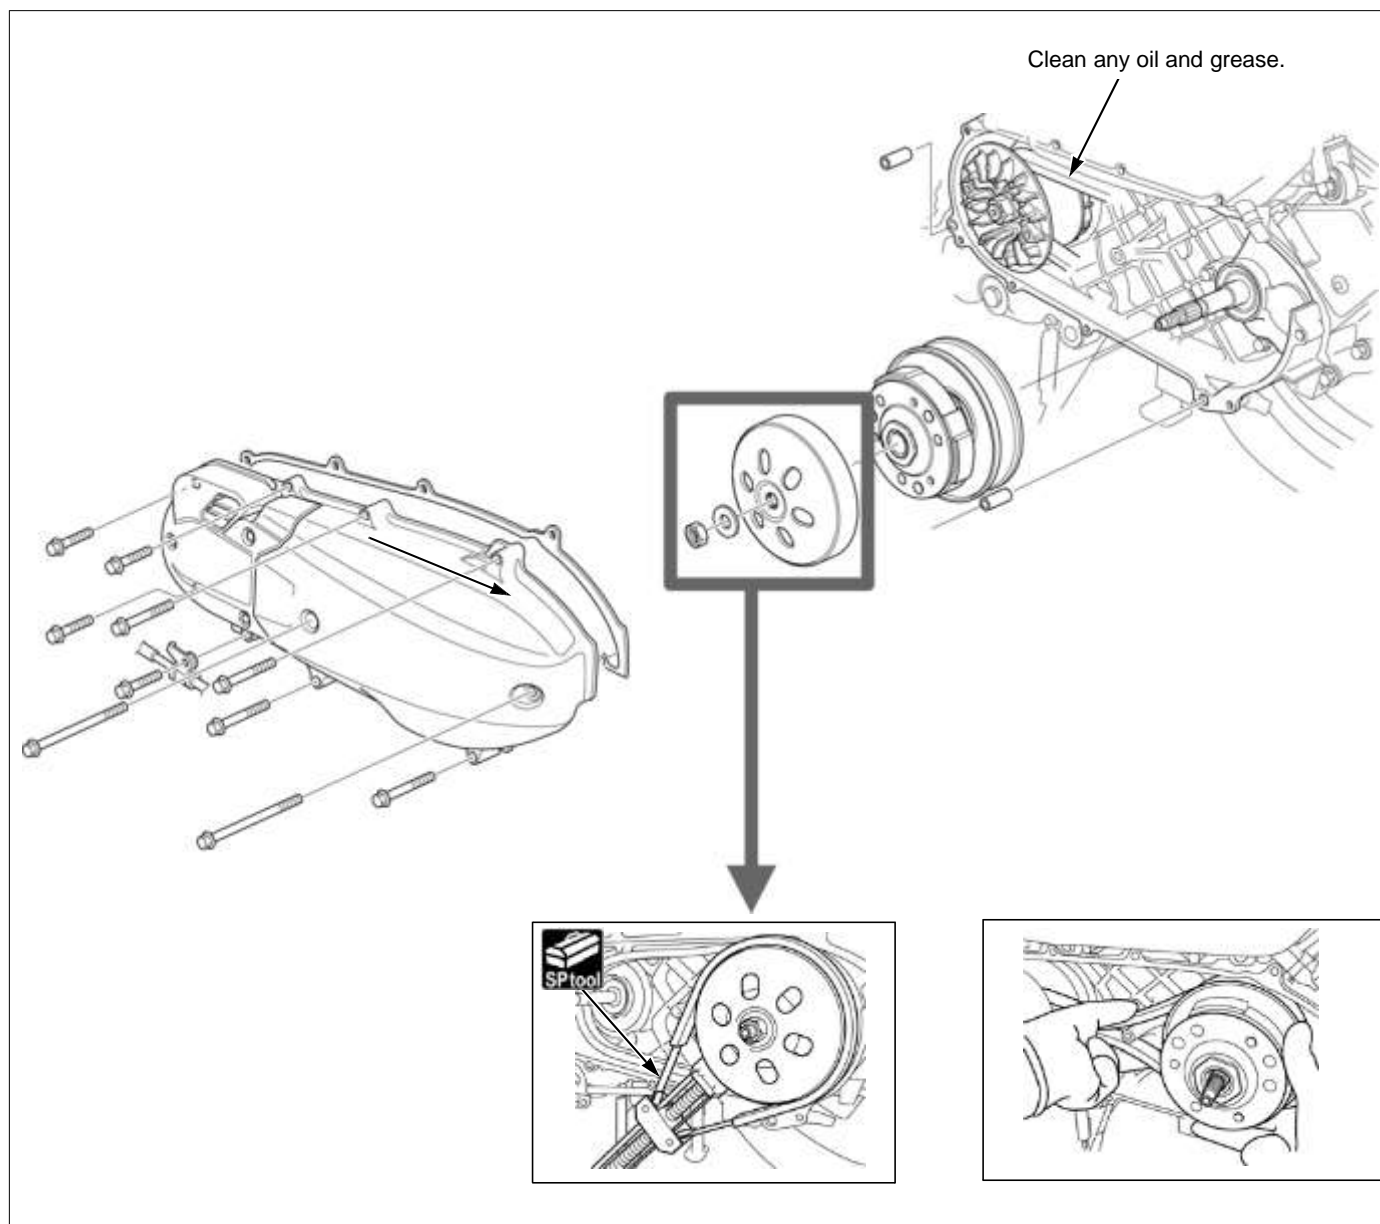



## INSPECTION

