




THROTTLE OPERATION

NOTE:


- Reusing a damaged or abnormally bent or kinked throttle cable can prevent proper throttle slide operation and may lead to a loss of throttle control while riding.

THROTTLE CABLE

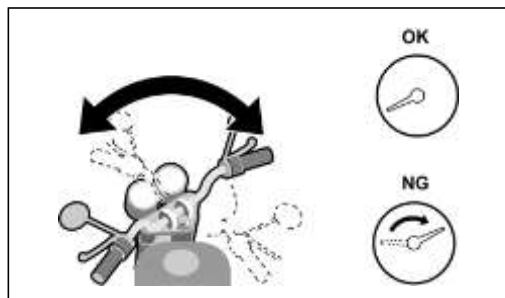


- Reusing a damaged or abnormally bent or kinked cable can prevent proper throttle operation and may lead to a loss of throttle control while riding.
- Check for any deterioration or damage to the throttle cable. Check the throttle grip for smooth operation. Check that the throttle opens and automatically closes in all steering positions.
 - If the throttle grip does not return properly, overhaul and lubricate the throttle grip housing.
 - If the throttle grip still does not return properly, replace the throttle cable.

FREEPLAY

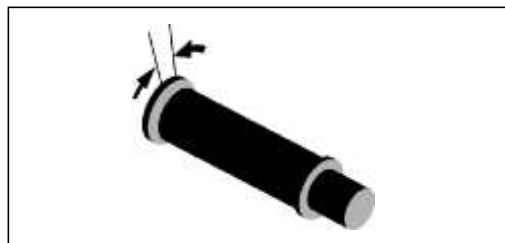


- After adjustment, verify correct throttle freeplay in all steering position.
- Throttle grip freeplay

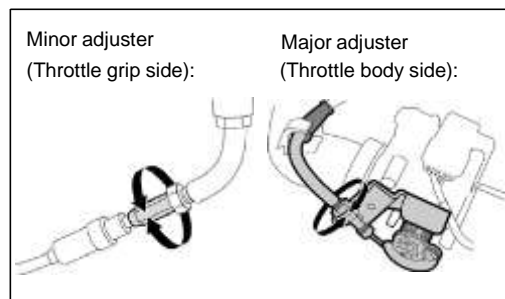

- Minor adjustment
(Throttle grip side: Loosen the lock nut and turn the adjuster as required. After adjustment, hold the adjuster and tighten the lock nut.)
- Major adjustment
(Throttle body side: Loosen the lock nut and turn the adjuster as required. After adjustment, hold the adjuster and tighten the lock nut.)

CHOKE OPERATION

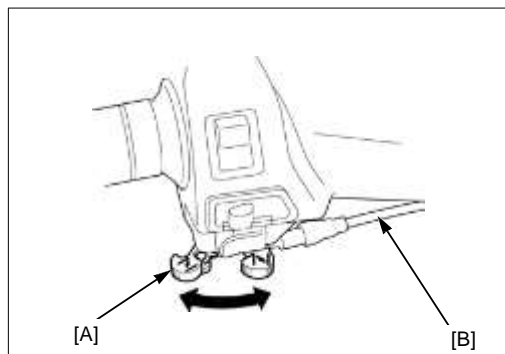


- Choke lever [A] for smooth operation
- Cable [B] for cracks



AIR CLEANER

Dry Paper Element Type:

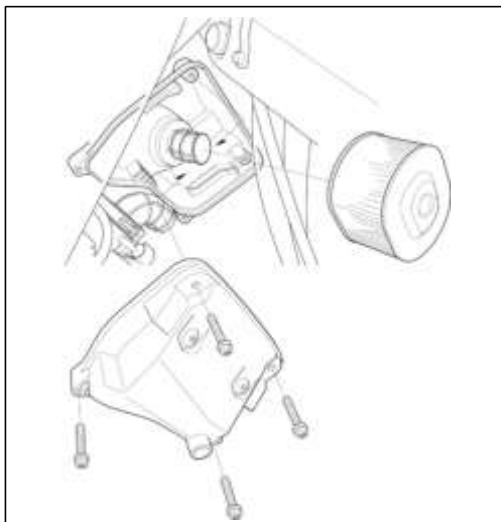

- If the vehicle is used in unusually wet or dusty areas, more frequent inspections are required.



- Screws
- Air cleaner cover
- Air cleaner element



- If the surface of the element is dirty, remove the dust first by tapping the element gently. Then, blow away any remaining dust on the surface of the filter with compressed air from the clean side (or carburetor/throttle body side) toward the dirty side.

Viscous Paper Element Type:




- The viscous paper element cannot be cleaned because it contains a dust adhesive.
- If the vehicle is used in unusually wet or dusty areas, more frequent inspections are required.




- Screws
- Air cleaner cover
- Air cleaner element
(Discard it in accordance with the maintenance schedule. Replace element any time if it is excessively dirty or damaged.)

CRANKCASE BREATHER

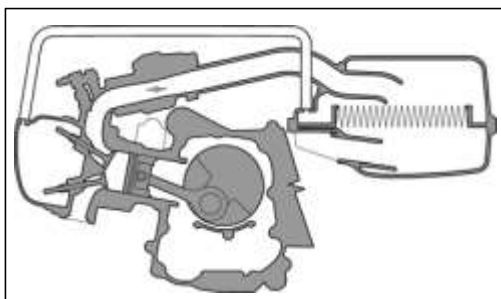

- Crankcase breather hose for deterioration, damage or leakage

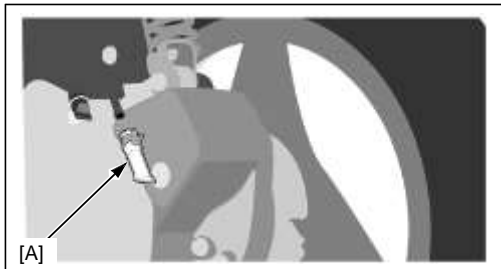

- Service more frequently when ridden in rain, at full throttle, or after the vehicle is washed or overturned. Service if the deposit level can be seen in the drain cap.
- Clean the crankcase breather drain cap [A]