


AIME – FLASHING TOOL

1. Download the archive and extract the folder. Start executable from inside the folder.

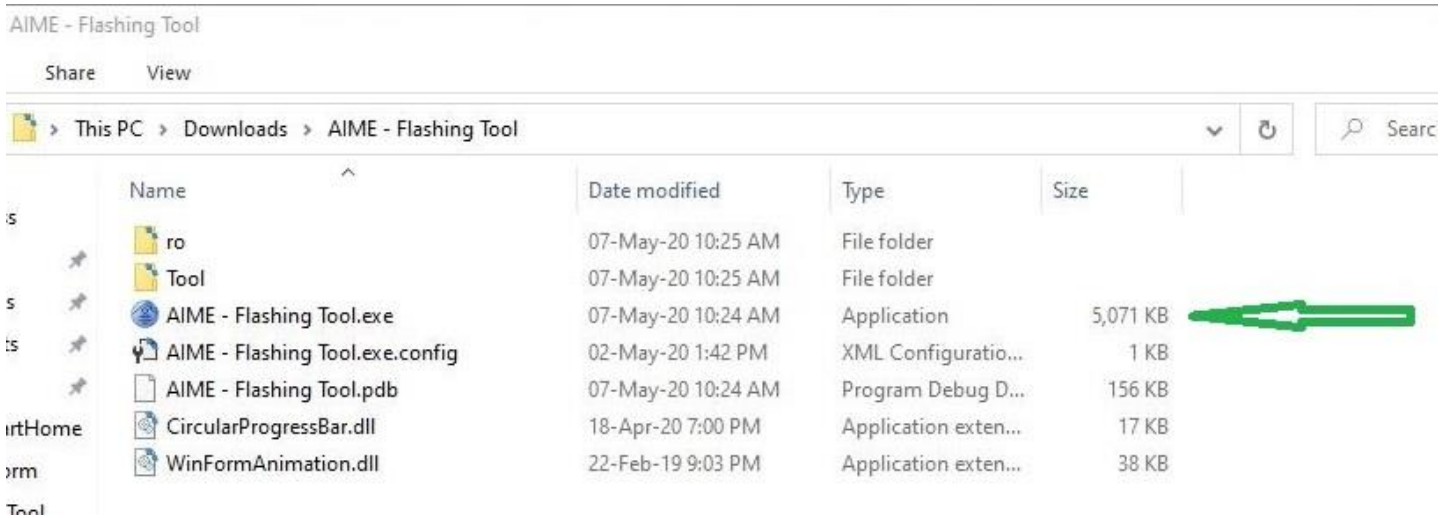

2. You can find the pin code on the site and it is automatically generated with validity for the entire current month.



The rest of the program is intuitive and structured step by step, following the instructions everything will be fine. But if there are problems do not hesitate to contact 😊