


USB – ADAPTER

1. The USB adapter has a switch with two-function, microcontroller writing mode and "communication".

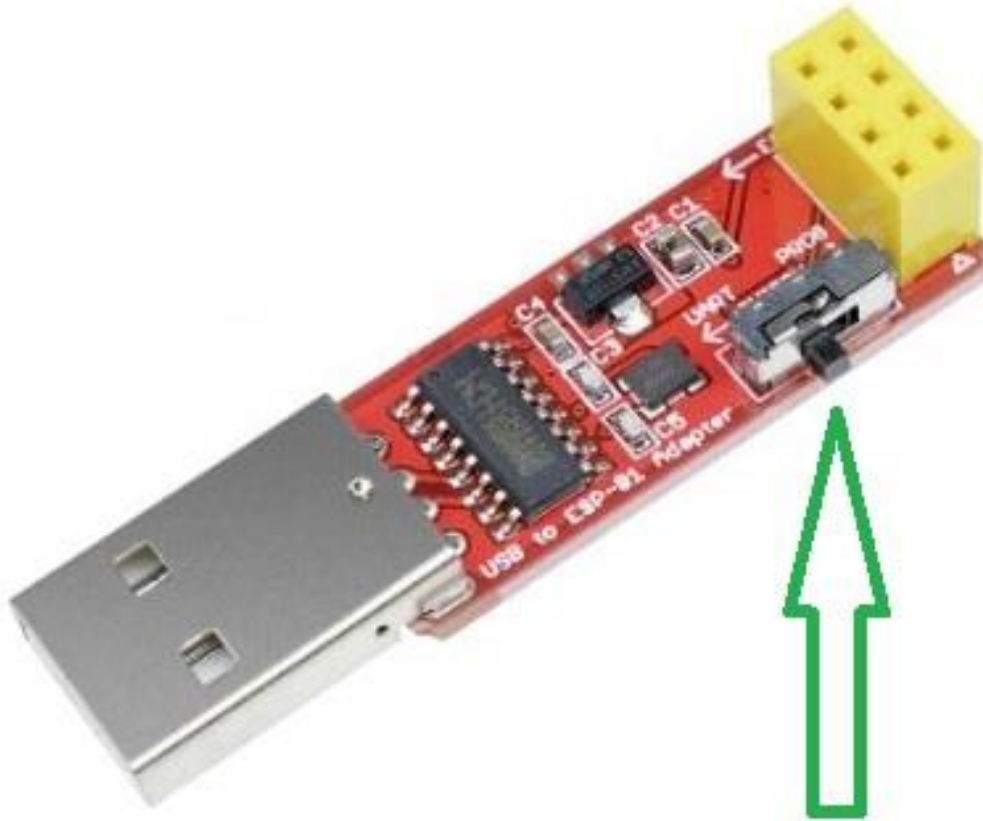

- Move the switch in PROG position to do FLASHING / WRITE
- Move the switch in UART position to communicate / configure in our case device name, WiFi name, WiFi password and MQTT server IP address if desired