

TECHNICAL & SERVICE MANUAL



SAP-K91A (× 2) + SAP-CM1821A

FILE NO.


Destination : Australia

MULTI-SPLIT SYSTEM AIR CONDITIONER

Indoor Model No	Product Code No.
SAP-K91A-S	1 852 063 35


Outdoor Model No.	Product Code No.
SAP-CM1821A-S	1 852 068 10

Indoor Unit

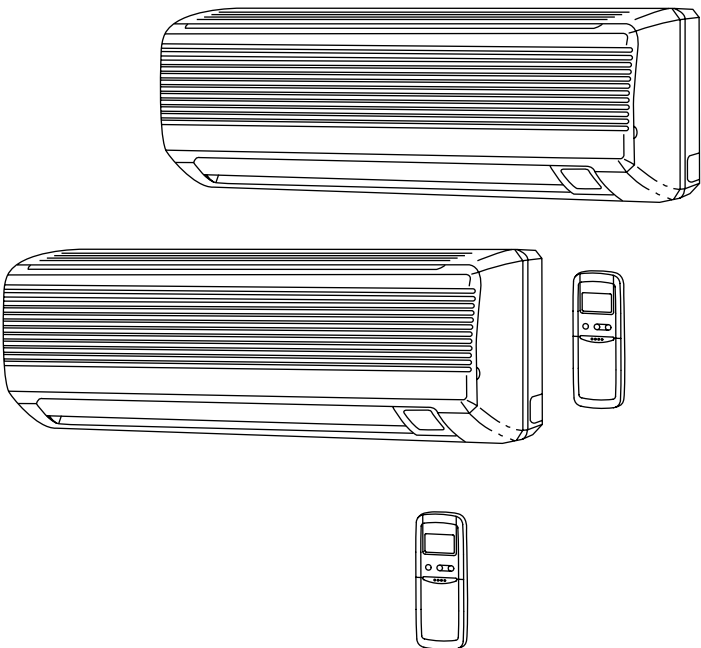

SAP-K91A (×2)

Outdoor Unit

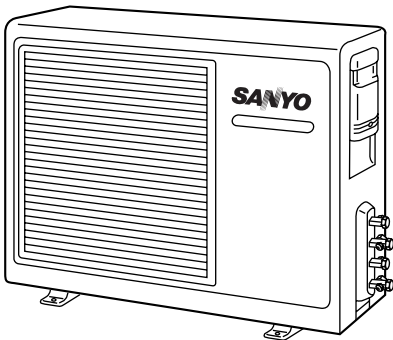

SAP-CM1821A



# IMPORTANT!

## Please Read Before Starting

This air conditioning system meets strict safety and operating standards. As the installer or service person, it is an important part of your job to install or service the system so it operates safely and efficiently.

### For safe installation and trouble-free operation, you must:

- Carefully read this instruction booklet before beginning.
- Follow each installation or repair step exactly as shown.
- Observe all local, state, and national electrical codes.
- Pay close attention to all warning and caution notices given in this manual.



**WARNING**

This symbol refers to a hazard or unsafe practice which can result in severe personal injury or death.



**CAUTION**

This symbol refers to a hazard or unsafe practice which can result in personal injury or product or property damage.

### If Necessary, Get Help

These instructions are all you need for most installation sites and maintenance conditions. If you require help for a special problem, contact our sales/service outlet or your certified dealer for additional instructions.

### In Case of Improper Installation

The manufacturer shall in no way be responsible for improper installation or maintenance service, including failure to follow the instructions in this document.

## SPECIAL PRECAUTIONS

### **WARNING** When Wiring



**ELECTRICAL SHOCK CAN CAUSE SEVERE PERSONAL INJURY OR DEATH. ONLY A QUALIFIED, EXPERIENCED ELECTRICIAN SHOULD ATTEMPT TO WIRE THIS SYSTEM.**

- Do not supply power to the unit until all wiring and tubing are completed or reconnected and checked.
- Highly dangerous electrical voltages are used in this system. Carefully refer to the wiring diagram and these instructions when wiring. Improper connections and inadequate grounding can cause **accidental injury or death**.
- **Ground the unit** following local electrical codes.
- Connect all wiring tightly. Loose wiring may cause overheating at connection points and a possible fire hazard.

### When Transporting

Be careful when picking up and moving the indoor and outdoor units. Get a partner to help, and bend your knees when lifting to reduce strain on your back. Sharp edges or thin aluminum fins on the air conditioner can cut your fingers.

### When Installing...

#### ...In a Ceiling or Wall

Make sure the ceiling/wall is strong enough to hold the unit's weight. It may be necessary to construct a strong wood or metal frame to provide added support.

#### ...In a Room

Properly insulate any tubing run inside a room to prevent "sweating" that can cause dripping and water damage to walls and floors.

#### ...In Moist or Uneven Locations

Use a raised concrete pad or concrete blocks to provide a solid, level foundation for the outdoor unit. This prevents water damage and abnormal vibration.

#### ...In an Area with High Winds

Securely anchor the outdoor unit down with bolts and a metal frame. Provide a suitable air baffle.

#### ...In a Snowy Area (for Heat Pump-type Systems)

Install the outdoor unit on a raised platform that is higher than drifting snow. Provide snow vents.

### When Connecting Refrigerant Tubing

- Use the flare method for connecting tubing.
- Apply refrigerant lubricant to the matching surfaces of the flare and union tubes before connecting them, then tighten the nut with a torque wrench for a leak-free connection.
- Check carefully for leaks before starting the test run.

### When Servicing

- Turn the power OFF at the main power box (mains) before opening the unit to check or repair electrical parts and wiring.
- Keep your fingers and clothing away from any moving parts.
- Clean up the site after you finish, remembering to check that no metal scraps or bits of wiring have been left inside the unit being serviced.

### Others



**CAUTION**

- Ventilate any enclosed areas when installing or testing the refrigeration system. Escaped refrigerant gas, on contact with fire or heat, can produce dangerously toxic gas.
- Confirm upon completing installation that no refrigerant gas is leaking. If escaped gas comes in contact with a stove, gas water heater, electric room heater or other heat source, it can produce dangerously toxic gas.

# Table of Contents

	Page
■ Unit Combination .....	iii
1. OPERATING RANGE .....	1
2. SPECIFICATIONS	
2-1. Unit Specifications .....	2
2-2. Major Component Specifications .....	3
2-3. Other Component Specifications .....	5
3. DIMENSIONAL DATA .....	6
4. COOLING CAPACITY .....	8
5. AIR THROW DISTANCE CHART .....	10
6. REFRIGERANT FLOW DIAGRAM .....	11
7. ELECTRICAL DATA	
7-1. Electrical Characteristics .....	12
7-2. Electric Wiring Diagrams .....	13
8. INSTALLATION INSTRUCTIONS	
8-1. Installation Site Selection .....	15
8-2. Remote Control Unit Installation Position .....	17
8-3. Recommended Wire Length and Diameter .....	18
9. FUNCTION	
9-1. Room Temperature Control .....	19
9-2. Dry Operation .....	20
9-3. Freeze Prevention .....	20
10. TROUBLESHOOTING	
10-1. Check before and after troubleshooting .....	21
10-2. Air conditioner does not operate .....	22
10-3. Some part of air conditioner does not operate .....	27
10-4. Air conditioner operates, but abnormalities are observed .....	29
10-5. If a sensor is defective .....	30
11. ARRANGEMENT OF ELECTRICAL COMPONENT .....	31
12. CHECKING ELECTRICAL COMPONENTS	
12-1. Measurement of Insulation Resistance .....	32
12-2. Checking Continuity of Fuse on PCB Ass'y .....	33
12-3. Checking Motor Capacitor .....	33
APPENDIX INSTRUCTION MANUAL .....	34

# ■ Unit Combination

Combine indoor and outdoor units only as listed below.

Outdoor Unit	Indoor Unit	Symbol of Indoor Unit	Refer to
SAP-CM1821A	K91A	A	Fig.1
	K91A	B	

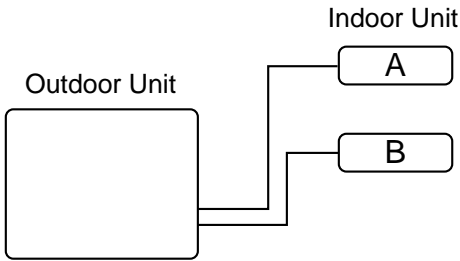


Fig.1

# 1. OPERATING RANGE

	Temperature	Indoor Air Intake Temp.	Outdoor Air Intake Temp.
Cooling	Maximum	32°C D.B. / 23°C W.B.	43°C D.B.
	Minimum	19°C D.B. / 14°C W.B.	19°C D.B.

## 2. SPECIFICATIONS

### 2-1. Unit Specifications

Indoor Unit      **SAP–K91A**  
Outdoor Unit    **SAP–CM1821A**

No. of indoor units.				1-unit		2-units		
Power Source				240V   Single phase   50 Hz				
Performance				Cooling				
	Capacity	kW		2.50		5.00		
		BTU/h		8,500		17,100		
	Air circulation (High)		m <sup>3</sup> /h	430		430X2		
	Moisture removal (High)		Liters/h	0.85		0.85X2		
Electrical Rating	Voltage rating		V	240				
	Available voltage range		V	216 to 264				
	Running amperes		A	5.0		9.3		
	Power input		W	1,110		2,120		
	Power factor		%	93		95		
	C.O.P.		W/W	2.30		2.41		
	Compressor locked rotor amperes		A	24		48		
Features	Controls / Temperature control			Microprocessor / I.C. thermostat				
	Control unit			Wireless remote control unit				
	Timer			1-hour OFF / 12-hour ON or OFF				
	Fan speeds		Indoor / Outdoor	3 and Auto / 1 (Hi)				
	Airflow direction (Indoor)	Horizontal		Manual				
		Vertical		Auto				
	Air filter			Washable, Anti–Mold				
	Compressor			Rotary (Hermetic)				
	Refrigerant / Amount charged at shipment			g   R22 / 1,260 (630X2)				
	Refrigerant control			Capillary tube				
	Operation sound	Indoor – Hi / Me / Lo	dB-A	39 / 37 / 33				
			Outdoor – Hi	dB-A	53			
	Refrigerant tubing connections			Flare type				
	Max. allowable tubing length at shipment			m   7.5				
	Refrigerant tube diameter	Narrow tube	mm (in.)	6.35 (1/4)				
		Wide tube	mm (in.)	9.52 (3/8)				
	Refrigerant tube kit / Accessories				Optional / Hanging wall bracket			
	Dimensions & Weight				Indoor Unit		Outdoor Unit	
Unit dimensions		Height	mm	250		630		
		Width	mm	790		810		
		Depth	mm	174		275		
Package dimensions		Height	mm	242		704		
		Width	mm	850		953		
		Depth	mm	312		369		
Weight		Net	kg	7.0		48.0		
		Shipping	kg	10.0		52.5		
Shipping volume			m <sup>3</sup>		0.06   0.25			

Remarks: Rating conditions are:  
Indoor air temperature 27°C D.B. / 19°C W.B.  
Outdoor air temperature 35°C D.B. / 24°C W.B.

DATA SUBJECT TO CHANGE WITHOUT NOTICE.

2-2. Major Component Specifications

Indoor Unit      SAP-K91A

Controller PCB	Part No.			POW-K91G
	Controls			Microprocessor
	Control circuit fuse			250 V – 3.15 A
Remote Control Unit				RCS-7S3E
Fan & Fan Motor	Type			Cross-flow
	Number ... Dia. and lengthmm			1 ... ø95 / L578
	Fan motor model ... Number			UF4Q-21H5P-S ... 1
	No. of poles ... rpm (240 V, High)			4 ... 1,290
	Nominal outputW			20
	Coil resistance (Ambient temp. 20°C)Ω			WHT – BRN : 449.4 WHT – VLT : 126.4 VLT – ORG : 92.4 ORG – YEL : 136.1 YEL – PNK : 92.5
	Safety devices	Type		Internal fuse
		Operating temp.	Open °C	145 ± 2
		Run capacitor	Close	—
				μF1.0
		VAC	440	
Flap Motor	Type			Stepping motor
	Model			MP24S2-12V
	Rating			DC 12 V
	Coil resistance (Ambient temp. 25°C)Ω			A pair of each terminal : 380 ± 7%
Heat Exch. Coil	Coil			Aluminum plate fin / Copper tube
	Rows			2
	Fin pitchmm			1.4
	Face aream²			0.110

DATA SUBJECT TO CHANGE WITHOUT NOTICE.



Outdoor Unit     **SAP–CM1821A**

Compressor	Type			Rotary (Hermetic)				
	Compressor model ... Number			C–1R80H5K ... 2 / 80603345–S ... 2				
	Nominal output			W	800			
	Compressor oil ... Amount			cc	SUNISO 4GSD–T ... 320 X2			
	Coil resistance (Ambient temp. 25°C)			Ω	C – R : 3.65 C – S : 5.38			
	Safety devices	Type		External protector (OLR 1, 3)		External protector (OLR 2, 4)		
		Overload relay ... Number		MRA99109-9201 ... 2		CS-7C115 ... 2		
		Operating temp.	Open	°C	150 ± 5		115 ± 3	
			Close	°C	69 ± 11		95 ± 5	
	Operating amp.(Ambient temp. 25°C)			Trip in 6 to 16 sec. at 16A		—		
Run capacitor ... Number		μF		30.0 ... 2				
		VAC		400 ... 2				
Fan & Fan Motor	Type			Propeller				
	Number ... Dia.			mm	1 ... ø420			
	Fan motor model ... Number			KFG6–51C5P–S ... 1				
	No. of poles ... rpm (240 V)			6 ... 870				
	Nominal output			W	50			
	Coil resistance (Ambient temp. 20°C)			Ω	WHT – BRN : 67.1 WHT – PNK : 83.8			
	Safety devices	Type		Internal protector				
		Operating temp.	Open	°C	130 ± 5			
	Close		Automatic reclosing					
	Run capacitor		μF		4.0			
VAC			440					
Heat Exch. Coil	Coil			Aluminum plate fin / Copper tube				
	Rows			1				
	Fin pitch			mm	1.3			
	Face area			m <sup>2</sup>	0.506			
External Finish				Acrylic baked-on enamel finish				

DATA SUBJECT TO CHANGE WITHOUT NOTICE.

2-3. Other Component Specifications

Indoor Unit      **SAP–K91A**

Transformer (TR)		ATR-J105	
Rating	Primary	AC 230V, 50/60Hz	
	Secondary	19V, 0.526A	
	Capacity	10VA	
Coil resistance	Ω (at 21°C)	Primary (WHT – WHT):	205 ± 10%
		Secondary (BRN – BRN):	2.0 ± 10%
Thermal cut-off temp.		150°C	

Thermistor (Coil sensor)		DTN-TKS131B	
Resistance	k $\Omega$	0°C	15.0 $\pm$ 2%


Thermistor (Room sensor)		DTN-TKS128B	
Resistance	k $\Omega$	25°C	5.0 $\pm$ 3%

Outdoor Unit      **SAP–CM1821A**

Power Relay (PR)		G7L-2A-TUB-55	
Coil rating		AC 200–240V, 50/60Hz	
Coil resistance	$\Omega$ (at 23°C)	21 $\pm$ 15%	
Contact rating		AC 220V, 25A	




### 3. DIMENSIONAL DATA

Indoor Unit      **SAP-K91A**

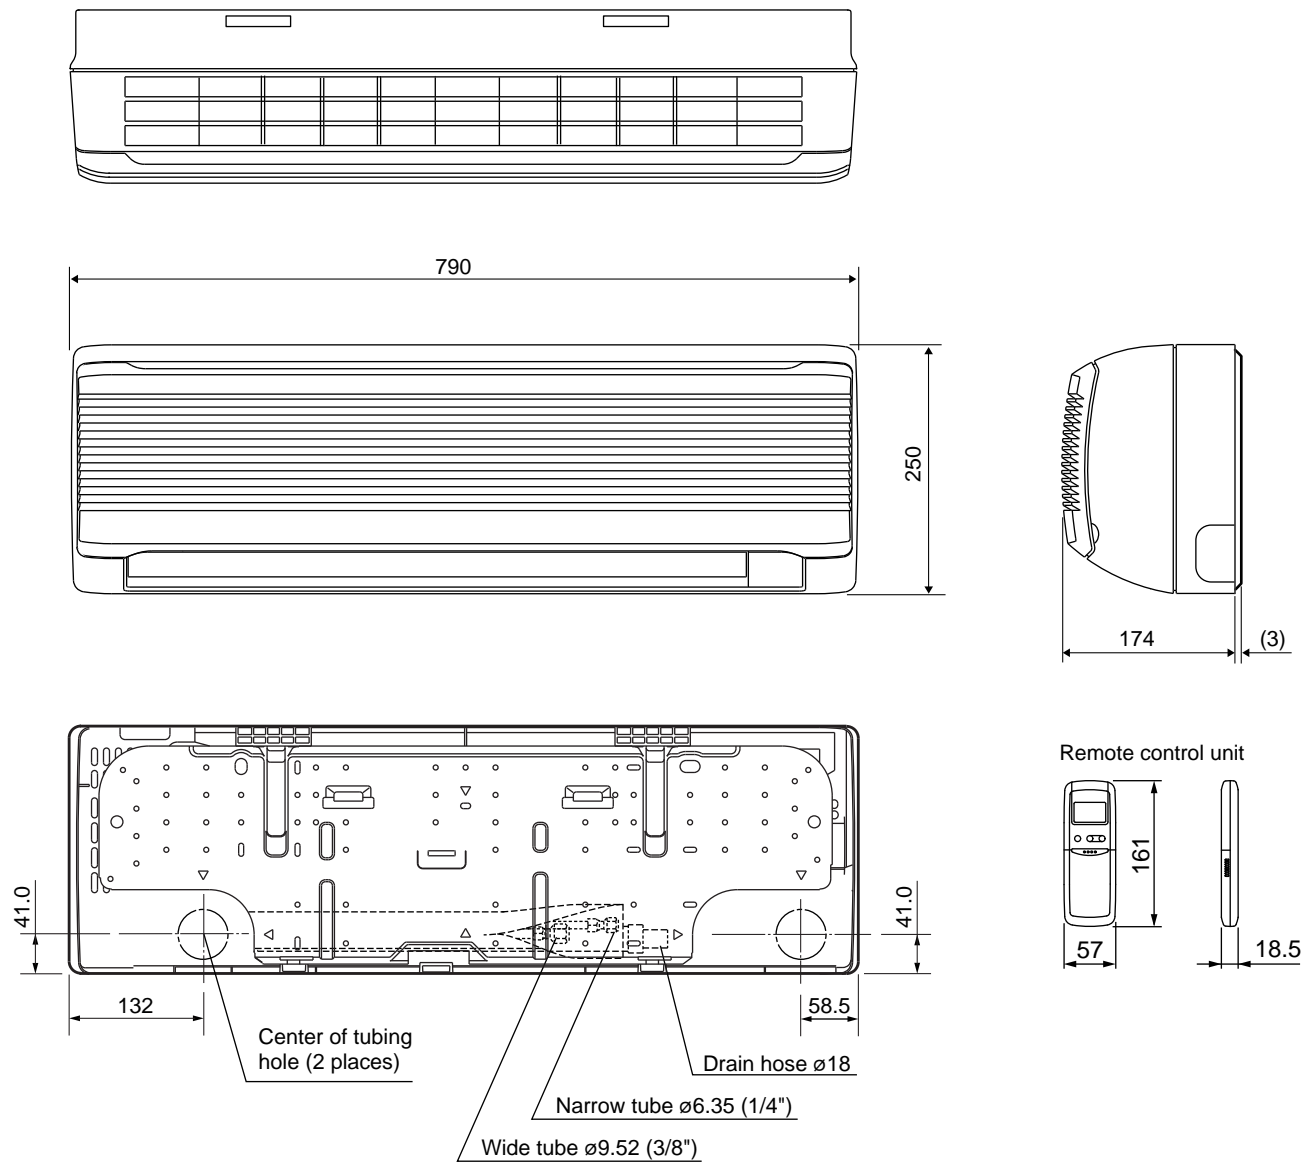

Unit : mm

Outdoor Unit    **SAP-CM1821A**

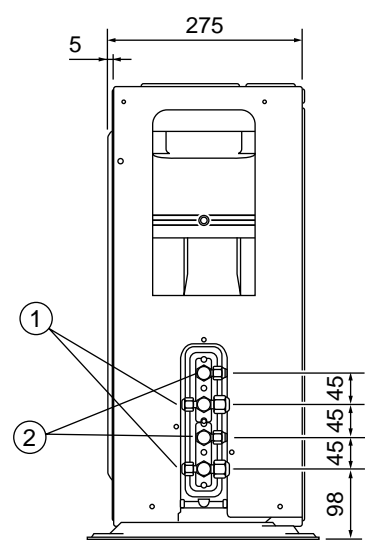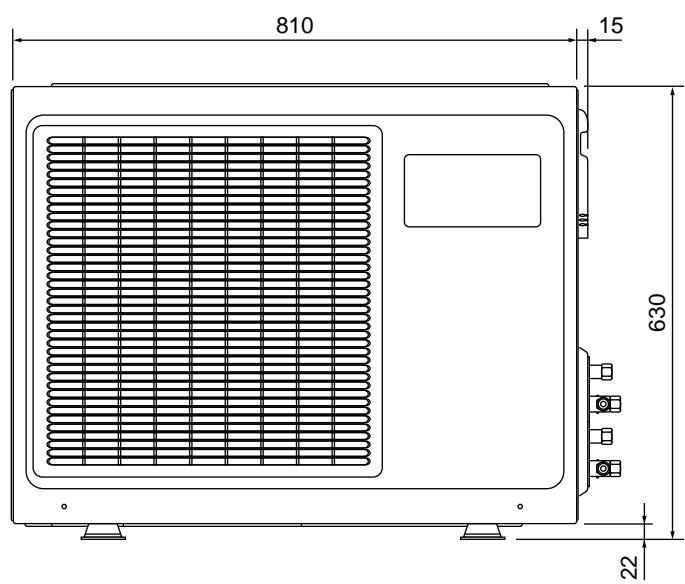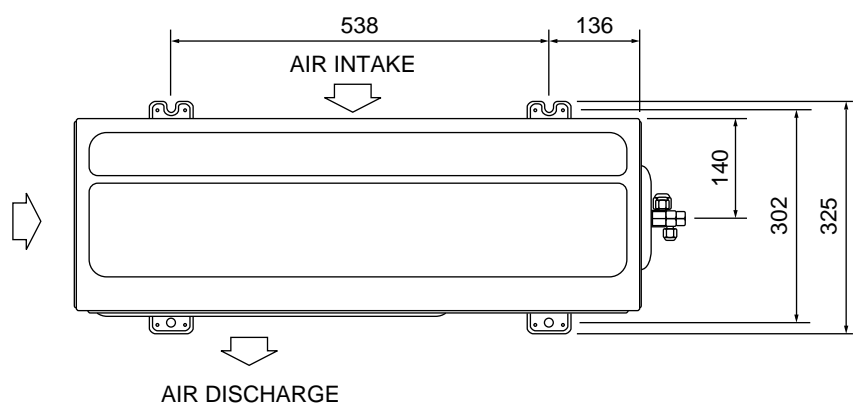

- ① Wide tube service valve  
ø9.52 (3/8")
- ② Narrow tube service valve  
ø6.35 (1/4")

Unit : mm

# 4. COOLING CAPACITY

## ■ 1 - indoor unit in operation

Indoor Unit        **SAP-K91A (X1)**  
 Outdoor Unit     **SAP-CM1821A**

240V Single phase 50Hz

RATING CAPACITY 2.50 kW								
EVAPORATOR			CONDENSER					
ENT. TEMP. °C			OUTDOOR AMBIENT TEMP. °C					
W.B.	D.B.		20	25	30	35	40	43
15		TC	2.52	2.41	2.30	2.19	2.06	1.89
		CM	0.72	0.78	0.84	0.90	0.95	1.00
	21	SHC	1.71	1.65	1.59	1.54	1.47	1.40
	23	SHC	1.92	1.86	1.80	1.75	1.68	1.61
	25	SHC	2.13	2.07	2.01	1.96	1.89	1.82
	27	SHC	2.34	2.28	2.22	2.17	2.06	1.89
	29	SHC	2.52	2.41	2.30	2.19	2.06	1.89
17		TC	2.70	2.59	2.47	2.35	2.21	2.03
		CM	0.74	0.80	0.86	0.92	0.98	1.03
	21	SHC	1.49	1.43	1.38	1.32	1.26	1.18
	23	SHC	1.70	1.64	1.59	1.53	1.47	1.39
	25	SHC	1.91	1.85	1.80	1.74	1.68	1.60
	27	SHC	2.12	2.06	2.01	1.95	1.89	1.81
	29	SHC	2.33	2.27	2.22	2.16	2.10	2.02
19		TC	2.88	2.75	2.63	# 2.50	2.35	2.16
		CM	0.77	0.83	0.89	0.95	1.01	1.06
	21	SHC	1.26	1.21	1.15	1.10	1.03	0.96
	23	SHC	1.47	1.42	1.36	1.31	1.24	1.17
	25	SHC	1.68	1.63	1.57	1.52	1.45	1.38
	27	SHC	1.89	1.84	1.78	1.73	1.66	1.59
	29	SHC	2.10	2.05	1.99	1.94	1.87	1.80
21		TC	3.05	2.92	2.78	2.65	2.49	2.29
		CM	0.79	0.85	0.91	0.98	1.04	1.09
	23	SHC	1.24	1.19	1.13	1.08	1.02	0.94
	25	SHC	1.45	1.40	1.34	1.29	1.23	1.15
	27	SHC	1.66	1.61	1.55	1.50	1.44	1.36
	29	SHC	1.87	1.82	1.76	1.71	1.65	1.57
	31	SHC	2.08	2.03	1.97	1.92	1.86	1.78
23		TC	3.23	3.09	2.95	2.78	2.60	2.42
		CM	0.80	0.87	0.93	1.00	1.06	1.12
	25	SHC	1.21	1.16	1.10	1.04	0.98	0.91
	27	SHC	1.42	1.37	1.31	1.25	1.19	1.12
	29	SHC	1.63	1.58	1.52	1.46	1.40	1.33
	31	SHC	1.84	1.79	1.73	1.67	1.61	1.54

TC : Total Cooling Capacity (kW)  
 SHC : Sensible Heat Capacity (kW)  
 CM : Compressor Input (kW)  
 Rating conditions (#Mark) are  
     Outdoor Ambient Temp. 35°C D.B.  
     Indoor Unit Entering Air Temp. 27°C D.B. / 19°C W.B.

## ■ 2 - indoor units in operation

Indoor Unit **SAP-K91A (X2)**

Outdoor Unit **SAP-CM1821A**

240V Single phase 50Hz

RATING CAPACITY		5.00 kW						
EVAPORATOR		CONDENSER						
ENT. TEMP. °C		OUTDOOR AMBIENT TEMP. °C						
W.B.	D.B.		20	25	30	35	40	43
15		TC	5.04	4.82	4.60	4.38	4.11	3.79
		CM	1.46	1.58	1.69	1.81	1.91	2.02
	21	SHC	3.41	3.30	3.19	3.08	2.95	2.79
	23	SHC	3.83	3.72	3.61	3.50	3.37	3.21
	25	SHC	4.25	4.14	4.03	3.92	3.79	3.63
	27	SHC	4.67	4.56	4.45	4.34	4.11	3.79
	29	SHC	5.04	4.82	4.60	4.38	4.11	3.79
17		TC	5.41	5.17	4.94	4.70	4.42	4.07
		CM	1.50	1.62	1.74	1.86	1.97	2.08
	21	SHC	2.98	2.87	2.76	2.65	2.52	2.36
	23	SHC	3.40	3.29	3.18	3.07	2.94	2.78
	25	SHC	3.82	3.71	3.60	3.49	3.36	3.20
	27	SHC	4.24	4.13	4.02	3.91	3.78	3.62
	29	SHC	4.66	4.55	4.44	4.33	4.20	4.04
19		TC	5.75	5.50	5.25	# 5.00	4.70	4.33
		CM	1.55	1.67	1.79	1.92	2.03	2.14
	21	SHC	2.53	2.42	2.31	2.20	2.07	1.91
	23	SHC	2.95	2.84	2.73	2.62	2.49	2.33
	25	SHC	3.37	3.26	3.14	3.04	2.91	2.75
	27	SHC	3.79	3.67	3.56	3.46	3.33	3.17
	29	SHC	4.21	4.09	3.98	3.88	3.75	3.59
21		TC	6.10	5.83	5.57	5.30	4.98	4.58
		CM	1.59	1.72	1.84	1.97	2.09	2.20
	23	SHC	2.49	2.38	2.27	2.16	2.04	1.88
	25	SHC	2.91	2.80	2.69	2.58	2.46	2.30
	27	SHC	3.33	3.22	3.11	3.00	2.88	2.72
	29	SHC	3.75	3.64	3.53	3.42	3.29	3.14
	31	SHC	4.17	4.06	3.95	3.84	3.71	3.56
23		TC	6.47	6.19	5.90	5.57	5.21	4.85
		CM	1.62	1.76	1.89	2.03	2.14	2.26
	25	SHC	2.42	2.31	2.20	2.08	1.95	1.82
	27	SHC	2.84	2.73	2.62	2.50	2.37	2.24
	29	SHC	3.26	3.15	3.04	2.92	2.79	2.66
	31	SHC	3.68	3.57	3.46	3.34	3.21	3.08

TC : Total Cooling Capacity (kW)

SHC : Sensible Heat Capacity (kW)

CM : Compressor Input (kW)

Rating conditions (#Mark) are


Outdoor Ambient Temp. 35°C D.B.

Indoor Unit Entering Air Temp. 27°C D.B. / 19°C W.B.

# 5. AIR THROW DISTANCE CHART


Indoor Unit      SAP-K91A

Room air temp. : 27°C  
Fan speed : High

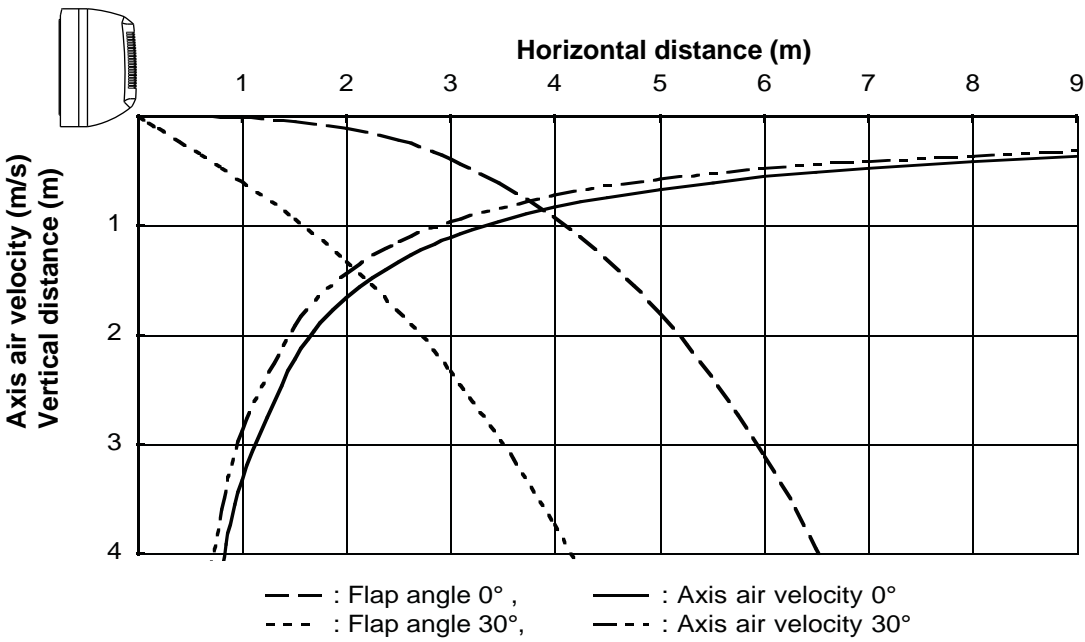

# 6. REFRIGERANT FLOW DIAGRAM


Indoor Unit      **SAP-K91A**  
Outdoor Unit    **SAP-CM1821A**

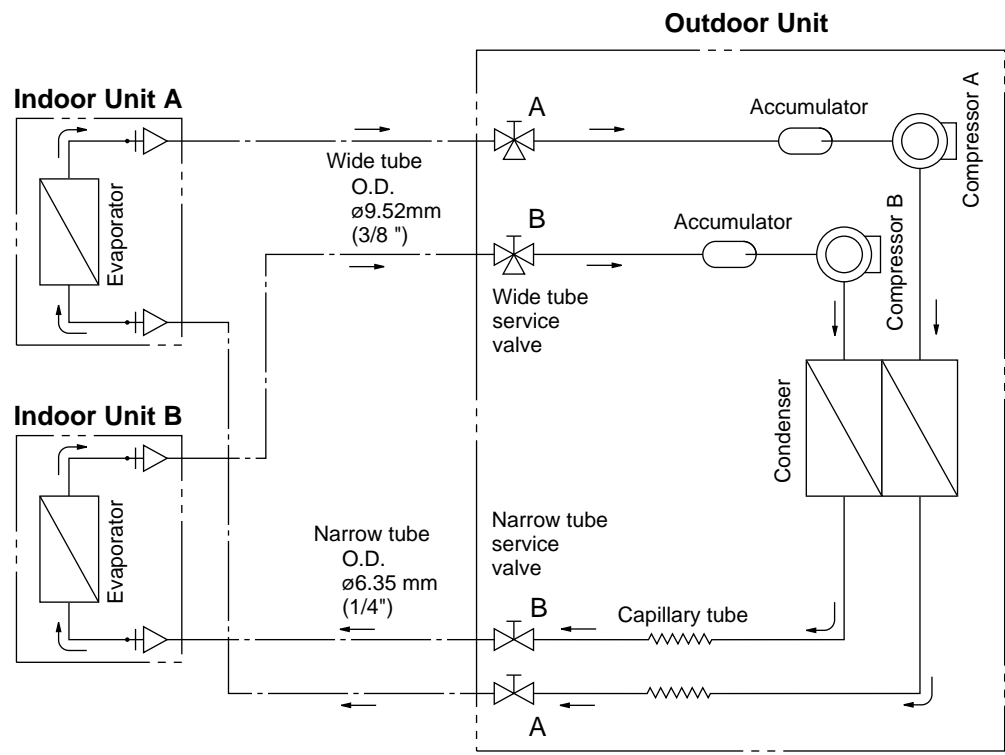

## Insulation of Refrigerant Tubing

### IMPORTANT

Because capillary tubing is used in the outdoor unit, both the wide and narrow tubes of this air conditioner become cold. To prevent heat loss and wet floors due to dripping of condensation, **both tubes must be well insulated** with a proper insulation material. The thickness of the insulation should be a min. 8 mm.

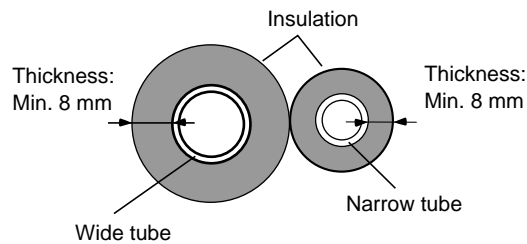

### CAUTION

After a tube has been insulated, never try to bend it into a narrow curve because it can cause the tube to break or crack.



# 7. ELECTRICAL DATA

## 7-1. Electrical Characteristics

■ 1 - indoor unit in operation

Indoor Unit      **SAP-K91A (X1)**  
Outdoor Unit    **SAP-CM1821A**

			Indoor Unit	Outdoor Unit		Complete Unit
			Fan Motor	Fan Motor	Compressor	
Performance at			240V Single phase 50Hz			
Rating Conditions	Running Amps.	A	0.18	0.50	4.32	5.0
	Power Input	kW	0.040	0.119	0.951	1.11
Full Load Conditions	Running Amps.	A	0.18	0.50	5.12	5.8
	Power Input	kW	0.040	0.119	1.121	1.28

Rating Conditions    : Indoor Air Temperature 27°C D.B. / 19°C W.B.  
                                 Outdoor Air Temperature 35°C D.B.  
Full Load Conditions : Indoor Air Temperature 32°C D.B. / 23°C W.B.  
                                 Outdoor Air Temperature 43°C D.B.

■ 2 - indoor units in operation

Indoor Unit      **SAP-K91A (X2)**  
Outdoor Unit    **SAP-CM1821A**

			Indoor Unit	Outdoor Unit		Complete Unit
			Fan Motor	Fan Motor	Compressor	
Performance at			240V Single phase 50Hz			
Rating Conditions	Running Amps.	A	0.36	0.50	8.44	9.3
	Power Input	kW	0.080	0.119	1.921	2.12
Full Load Conditions	Running Amps.	A	0.36	0.50	10.04	10.9
	Power Input	kW	0.080	0.119	2.261	2.46

Rating Conditions    : Indoor Air Temperature 27°C D.B. / 19°C W.B.  
                                 Outdoor Air Temperature 35°C D.B.  
Full Load Conditions : Indoor Air Temperature 32°C D.B. / 23°C W.B.  
                                 Outdoor Air Temperature 43°C D.B.


7-2. Electric Wiring Diagram

Indoor Unit      SAP-K91A



**WARNING**


To avoid electrical shock hazard, be sure to disconnect power before checking, servicing and/or cleaning any electrical parts.

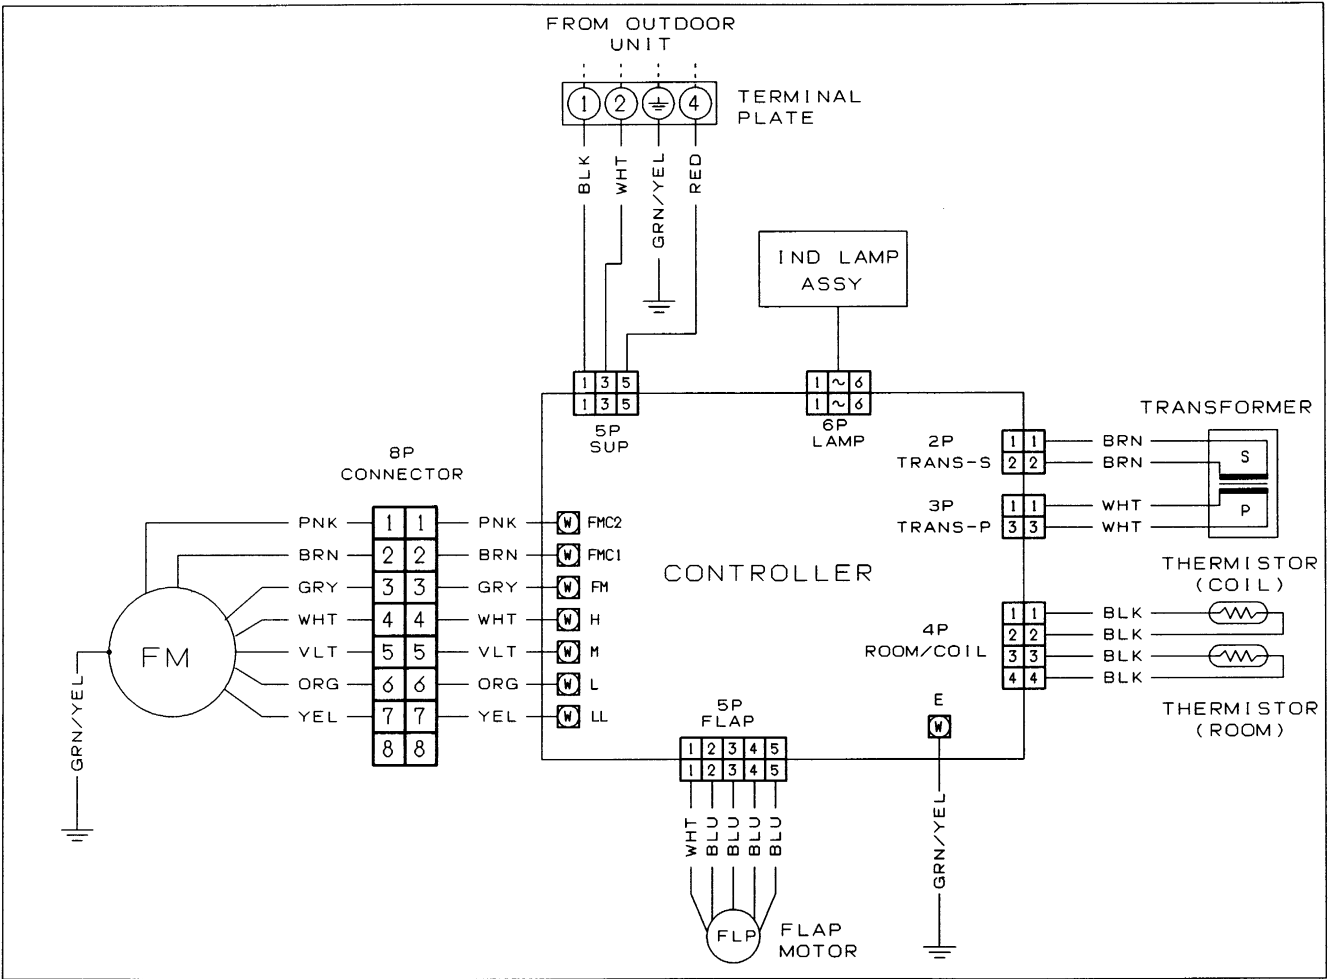

8512-5253-421XX-1



**WARNING**      *To avoid electrical shock hazard, be sure to disconnect power before checking, servicing and/or cleaning any electrical parts.*

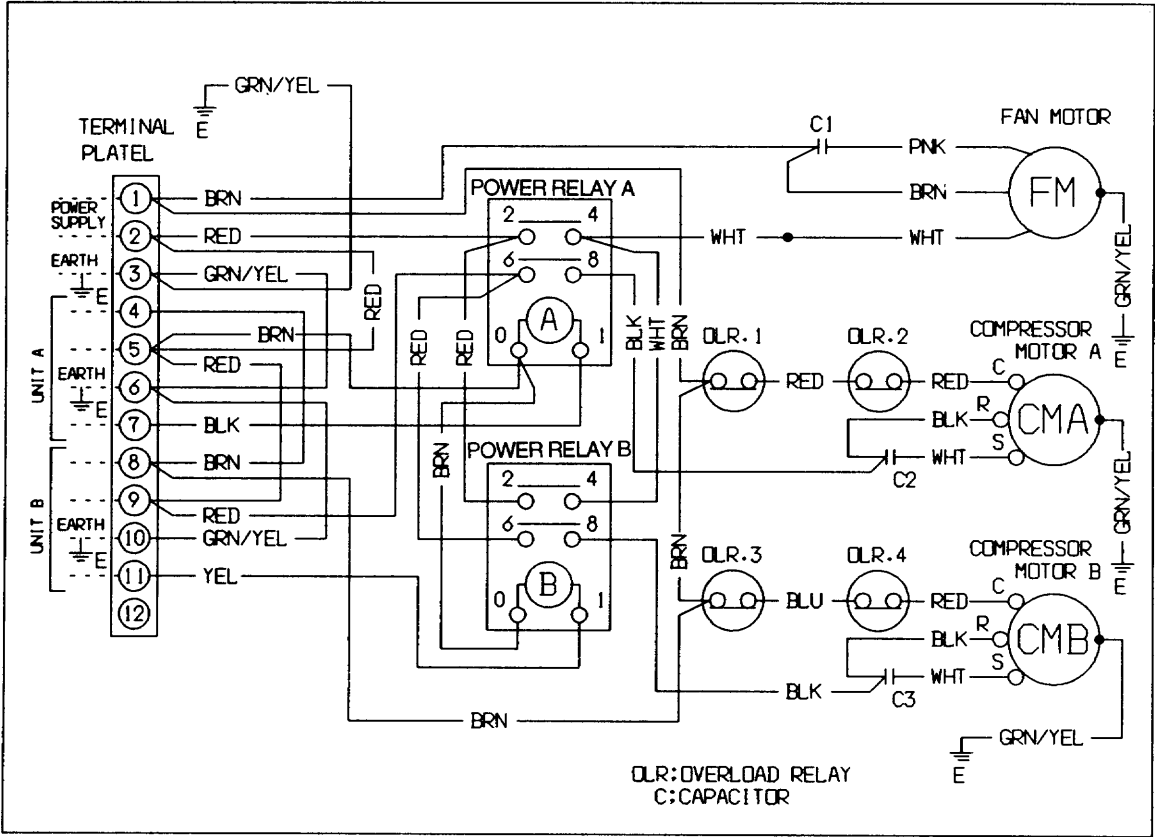

8512-5253-129xx-1

# 8. INSTALLATION INSTRUCTIONS

## 8-1. Installation Site Selection

### Maximum Allowable Tubing Length(L)and Elevation Difference(H).

The Multi-Split System outdoor unit should be installed as close to the indoor units as possible. Maximum allowable length of the refrigerant tubing and elevation difference between outdoor and indoor units are shown in Table 1.

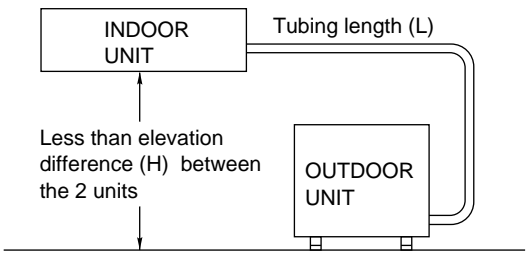


Fig. 1

Table 1

Max allowable tubing length at shipment.(m)	Limit tubing length (L). (m)	Limit of elevation difference (H). (m)	Required amount of additional refrigerant*(g/m)
7.5	15	7	15

\* If total tubing length becomes 7.5 to 15 m (max.),charge additional refrigerant (R22) by 15 g/m. No additional charge of compressor oil is necessary.


Indoor Unit



### WARNING

To prevent abnormal heat generation and the possibility of fire, don't place obstacles, enclosures and grills in front of or surrounding the air conditioner in a way that may block air flow.

### ● Wall-Mounted Type

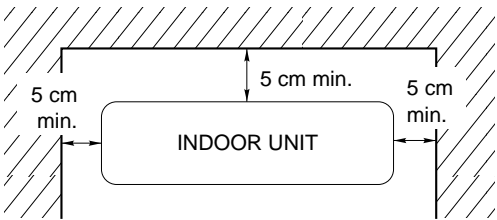

Front View  
Fig.2a

### AVOID:

- direct sunlight.
- nearby heat sources that may affect performance of the unit.
- areas where leakage of flammable gas may be expected.
- places where large amounts of oil mist exist.

### DO:

- select an appropriate position from which every corner of the room can be uniformly air-conditioned. (High on a wall is best)
- select a location that will hold the weight of the unit.
- select a location where tubing and drain pipe have the shortest run to the outside.
- allow room for operation and maintenance as well as unrestricted air flow around the unit. (Fig. 2a)



### CAUTION

For stable operation of the air conditioner, do not install wall-mounted type indoor units under 1.5m from floor level.

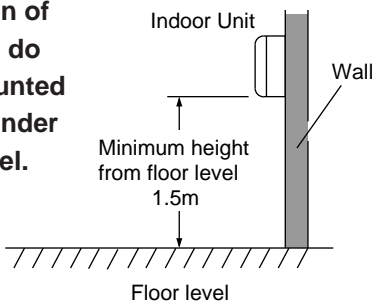


Fig. 2b

Outdoor Unit

AVOID:

- heat sources, exhaust fans, etc. (Fig. 3)
- damp, humid or uneven locations.

DO:

- choose a place as cool as possible.
- choose a place that is well ventilated.
- allow enough room around the unit for air intake/exhaust and possible maintenance.

(Figs. 4a and 4c)

- provide a solid base (concrete block, 10 × 40 cm beams or equal), a minimum of 10 cm above ground level to reduce humidity and protect the unit against possible water damage and decreased service life. (Fig. 5a)
- use lug bolts or equal to bolt down unit, reducing vibration and noise.



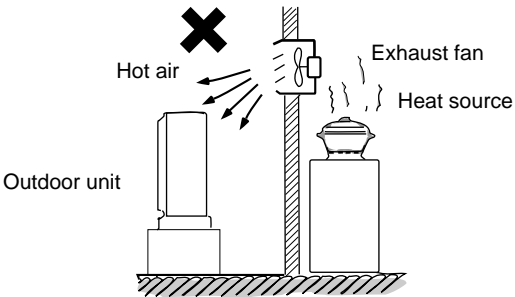


Fig. 3

Required space around the unit.

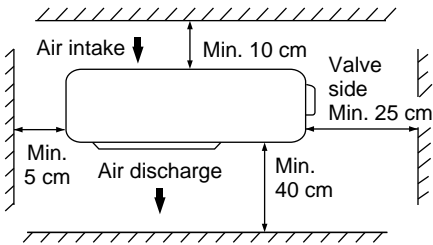

Top View  
Fig. 4a

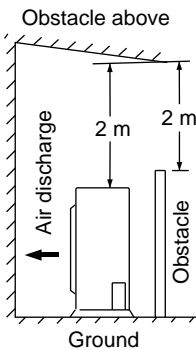

Side View  
Fig. 4c

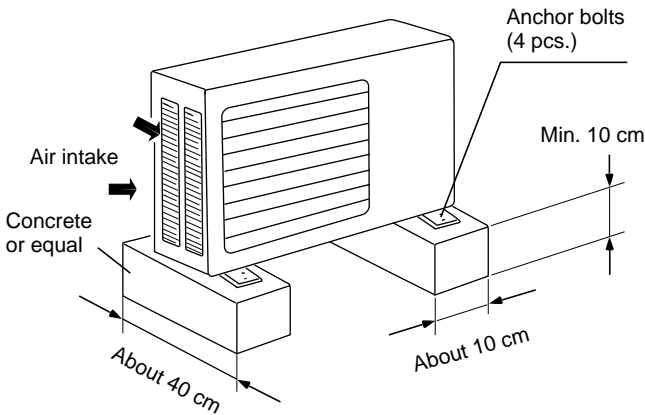


Fig. 5a

## 8-2. Remote Control Unit Installation Position

The remote control unit can be operated from either a non-fixed position or a wall-mounted position.

To ensure that the air conditioner operates correctly, do not install the remote control unit in the following places:

- In direct sunlight
- Behind a curtain or other place where it is covered
- More than 8 m away from the air conditioner
- In the path of the air conditioner's airstream
- Where it may become extremely hot or cold
- Where it may be subject to electrical or magnetic interference

### Mounting on a Wall

#### a) Removable mounting

- 1) Momentarily hold the remote control unit at the desired mounting position.
- 2) Confirm that the air conditioner responds correctly when you press keys on the remote control from that position.
- 3) After confirming correct operation, use a screwdriver to screw the supplied special mounting screw into the wall. (Fig.6a)
- 4) Hang the remote control unit from the mounting screw.

#### b) Non-removable mounting

- 1) Momentarily hold the remote control unit at the desired mounting position.
- 2) Confirm that the air conditioner responds correctly when you press keys on the remote control from that position.
- 3) After confirming correct operation, use a screwdriver to screw the supplied special mounting screw into the wall. (Fig.6a)
- 4) Remove the remote control cover by sliding it downward.
- 5) Remove the batteries of the remote control unit.
- 6) Use a screwdriver to screw the remote control unit securing screw into the wall through the hole in the battery compartment. (Fig.6b)
- 7) Replace the batteries.
- 8) Again confirm that the remote control unit operates correctly.

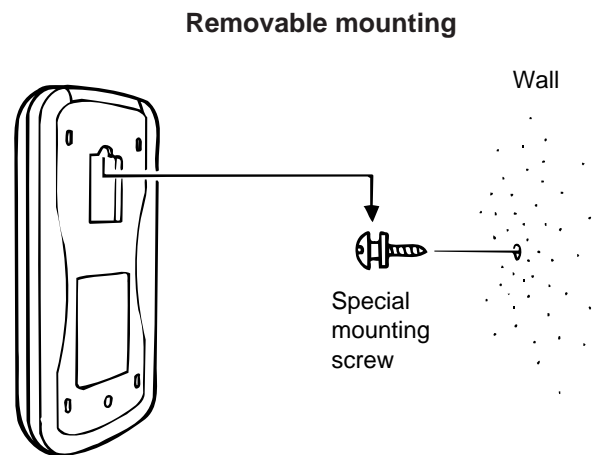


Fig.6a

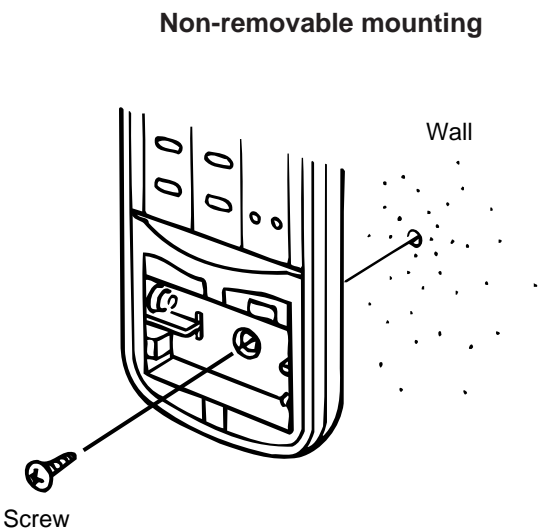


Fig.6b

### 8-3. Recommended Wire Length and Diameter

Regulations on wiring diameter differ from locality to locality. For field wiring requirements, please refer to your local electrical codes. Carefully observe these regulations when carrying out the installation. Table 2 lists recommended wire lengths and size for power supply systems.

NOTE

Refer to the WIRING SYSTEM DIAGRAM for the meaning of "A" and "B" in Table 2.

Table 2

Model	Cross Sectional Area (mm <sup>2</sup> )	(A) Power Supply Wiring Length (m)		(B) Power Line Length (m)	Fuse or Circuit Breaker Capacity
		2mm <sup>2</sup> (#14)	3.5mm <sup>2</sup> (#12)	2mm <sup>2</sup> (#14)	
CM1821A		18	29	20	15A

# ..... AWG (American Wire Gauge)



WARNING

- Be sure to comply with local codes on running the wire from the indoor unit to the outdoor unit (size of wire and wiring method, etc.).
- Each wire must be firmly connected.
- No wire should be allowed to touch refrigerant tubing, the compressor, or any moving part.



WARNING


- To avoid the risk of electric shock, each air conditioner unit must be grounded.



CAUTION

- Be sure to connect the power supply line to the outdoor unit as shown in the wiring diagram. The indoor unit draws its power from the outdoor unit.


WIRING SYSTEM DIAGRAM

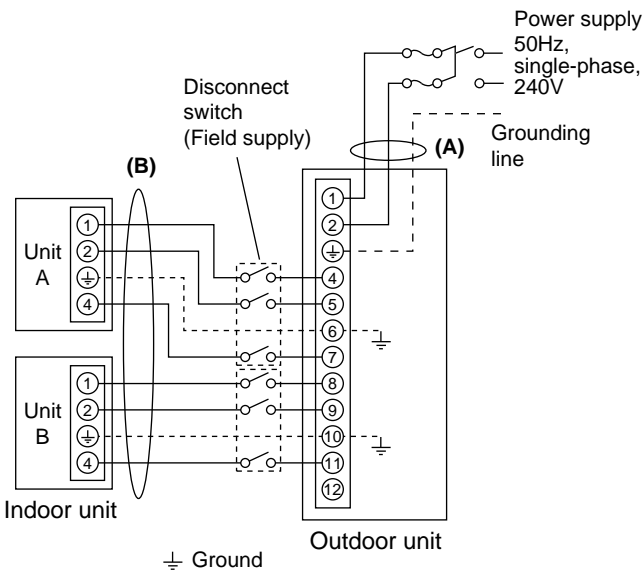

# 9. FUNCTION

## 9-1. Room Temperature Control

- Room temperature control is obtained by cycling the compressor ON and OFF under control of the room temperature sensor in the remote control unit.
- The room temperature (and other information) is transmitted every 3 minutes by the remote control unit to the controller in the indoor unit.

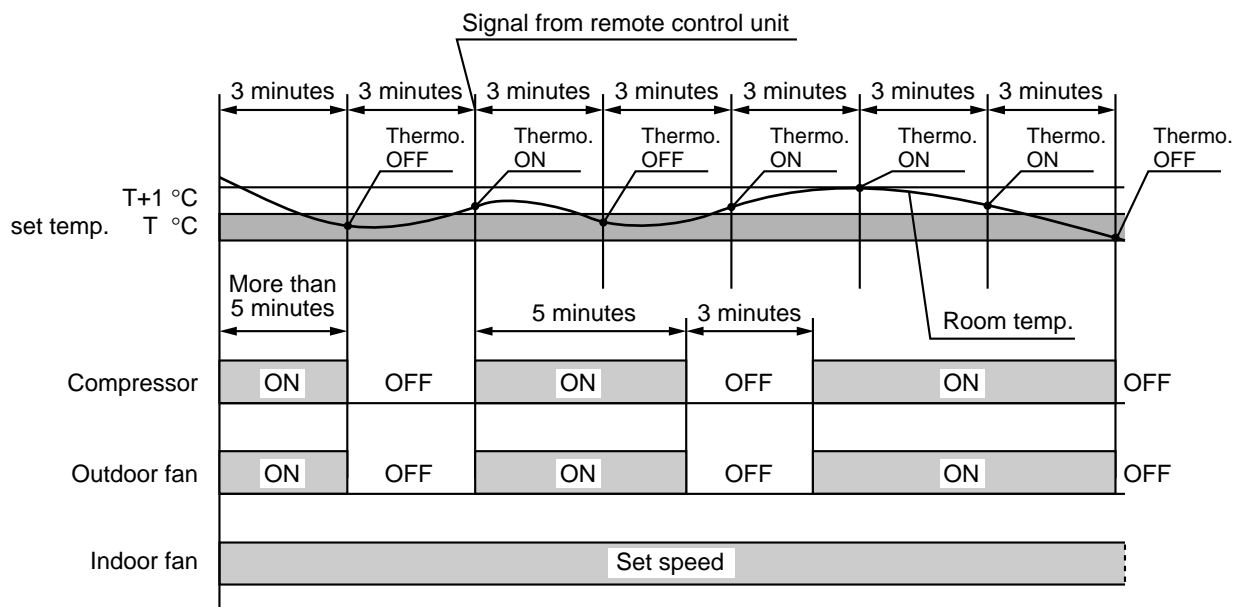


- The control circuit will not attempt to turn the compressor ON until the compressor has been OFF for at least 3 minutes. To protect the compressor from stalling out when trying to start against the high side refrigerant pressure, the control circuit has a built-in automatic time delay to allow the internal pressure to equalize.
- As a protective measure, the control circuit switches the compressor OFF after 5 minutes or more of compressor operation.
- Thermo. ON : When the room temperature is above  $T + 1^{\circ}\text{C}$  ( $T^{\circ}\text{C}$  is set temperature).  
Compressor  $\rightarrow$  ON
- Thermo. OFF : When the room temperature is equal to or below set temperature  $T^{\circ}\text{C}$ .  
Compressor  $\rightarrow$  OFF



## 9-2. Dry Operation (Dehumidification)

- Dry operation uses the ability of the cooling cycle to remove moisture from the air, but by running at low level to dehumidify without greatly reducing the room temperature. The air conditioner repeats the cycle of turning ON and OFF automatically as shown in the chart below according to the room temperature.

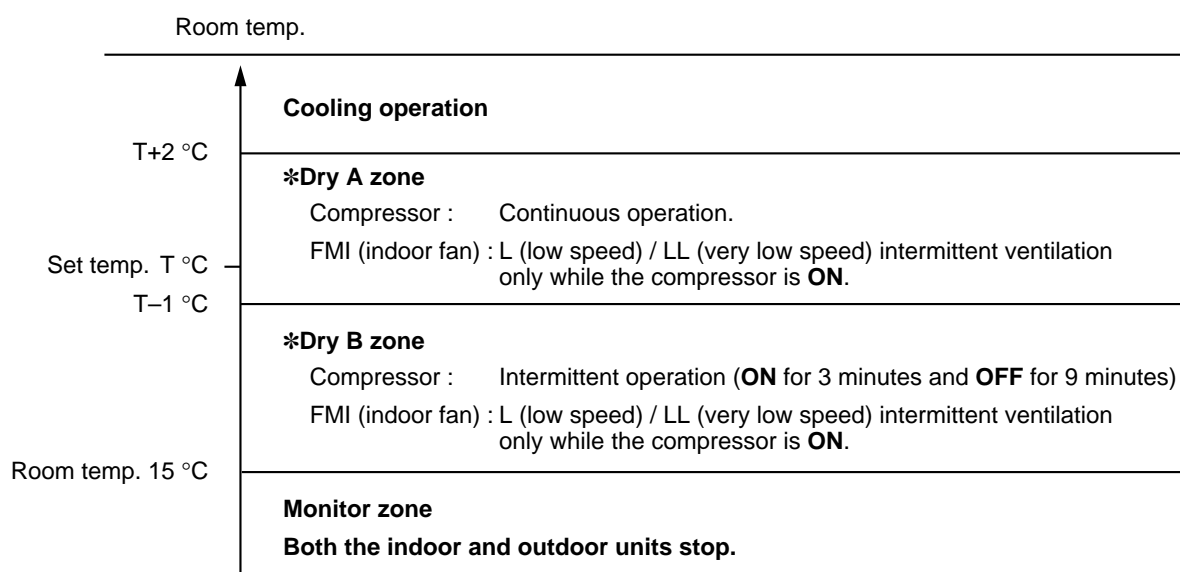


## NOTE

- Intermittent ventilation occurs by switching the indoor fan speed between L ↔ LL.
- Dry operation does not occur when the room temperature is under 15°C, which is the monitor zone.
- When the compressor stops, the indoor fan stops as well.


### 9-3. Freeze Prevention

- This function prevents freezing of the indoor heat exchange coil.
- When the compressor has been running for 10 minutes or more and the temperature of the indoor heat exchange coil falls below  $-1^{\circ}\text{C}$ , the control circuit stops the compressor for at least 6 minutes. The compressor does not start again until the temperature rises above  $8^{\circ}\text{C}$  or 6 minutes has elapsed.

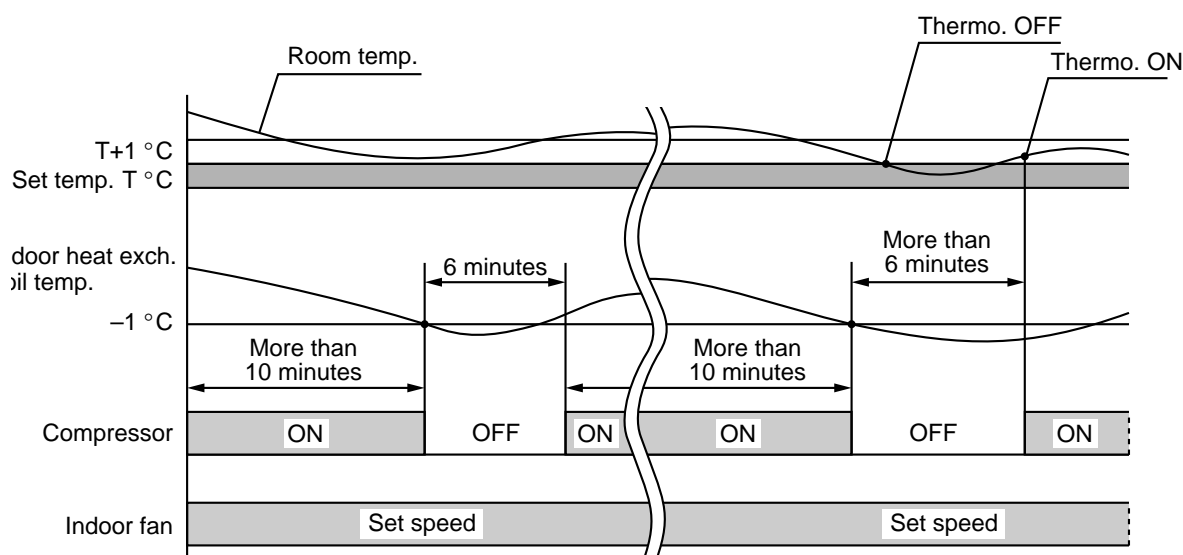

# 10. TROUBLESHOOTING

## 10-1. Check before and after troubleshooting



WARNING

Hazardous voltage can cause **ELECTRIC SHOCK** or **DEATH**. Disconnect power or turn off circuit breaker before you start checking or servicing.

### 10-1-1. Check power supply wiring.

- Check that power supply wires are correctly connected to terminals **No.1** and **No.2** on the terminal plate in the outdoor unit.

### 10-1-2. Check inter-unit wiring.


- Check that inter-unit wiring is correctly connected to the indoor unit from the outdoor unit.

### 10-1-3. Check power supply.

- Check that voltage is in specified range ( $\pm 10\%$  of the rating).
- Check that power is being supplied.

### 10-1-4. Check lead wires and connectors in indoor and outdoor units.

- Check that coating of lead wires is not damaged.
- Check that lead wires and connectors are firmly connected.
- Check that wiring is correct.

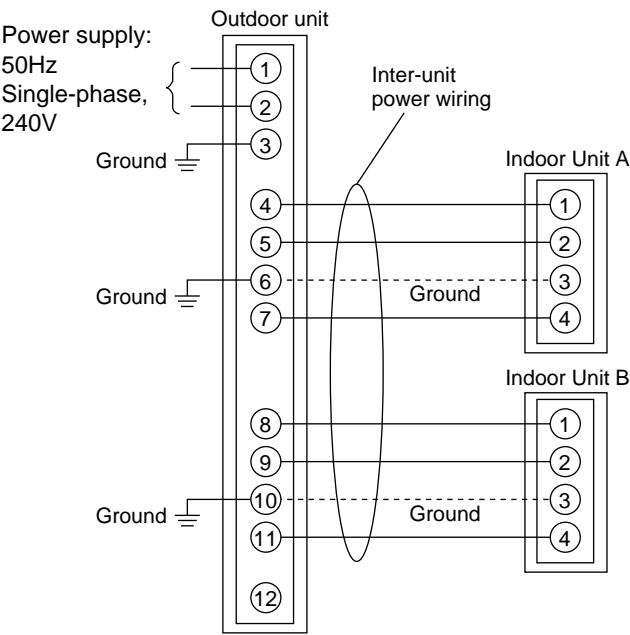


## 10-2. Air conditioner does not operate.

### 10-2-1. Circuit breaker trips (or fuse blows).

A. When the circuit breaker is set to ON, it is tripped soon. (Resetting is not possible.)


- There is a possibility of ground fault.
- Check insulation resistance.

If resistance value is 2MΩ or less, insulation is defective (“NO”).

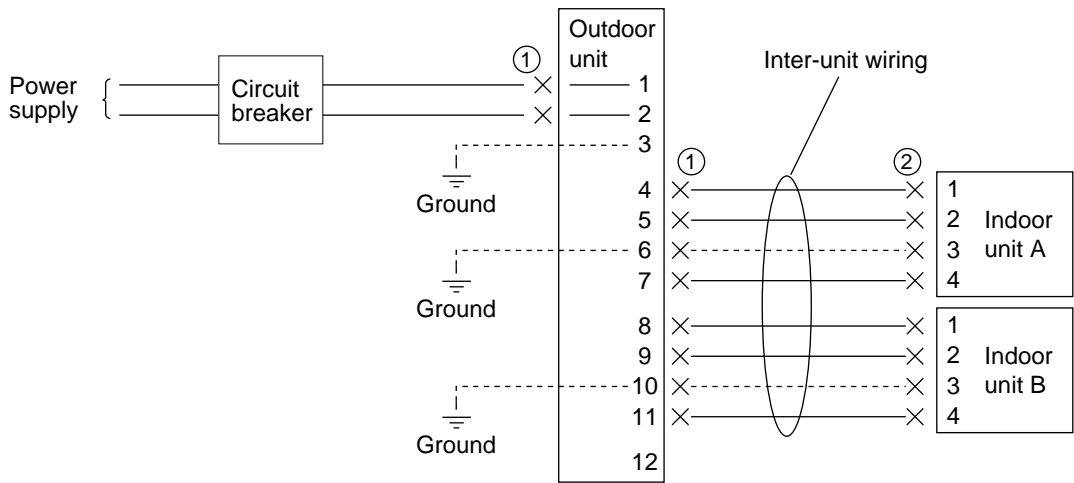




#### WARNING

\* Set circuit breaker to OFF.

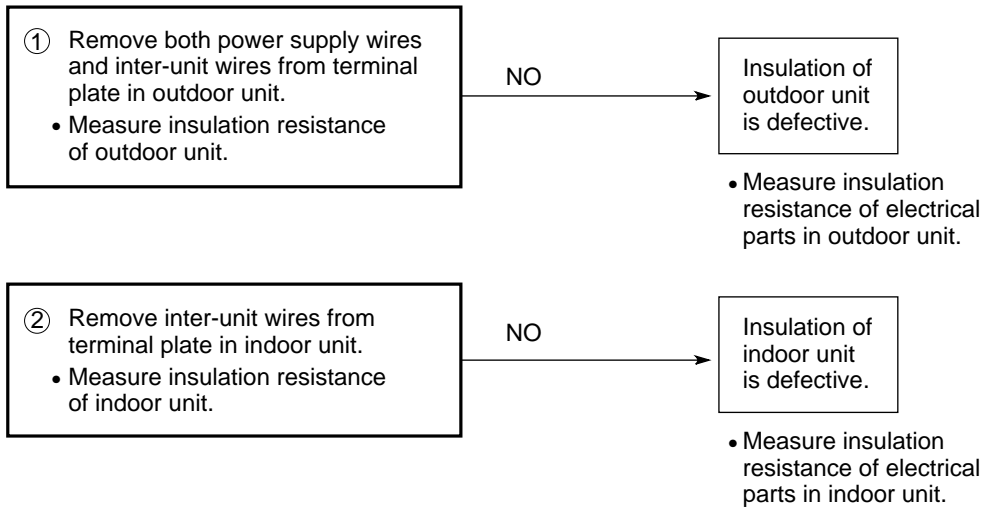


**B.Circuit breaker trips in several minutes after turning the air conditioner on.**

- There is a possibility of short circuit.

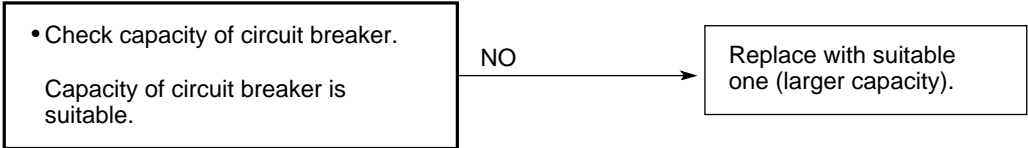


10-2-2. Neither indoor nor outdoor unit runs.


A. Power is not supplied.

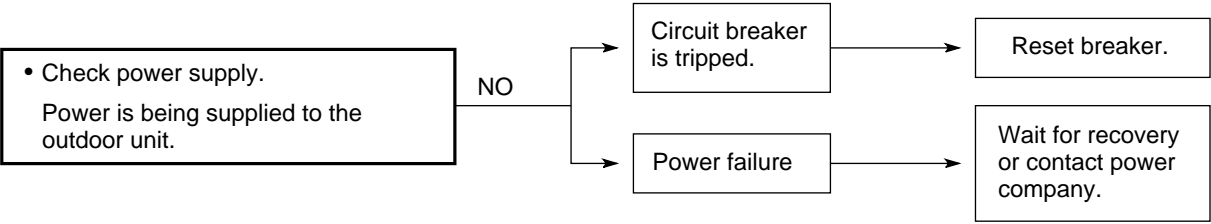


B. Check remote control unit.

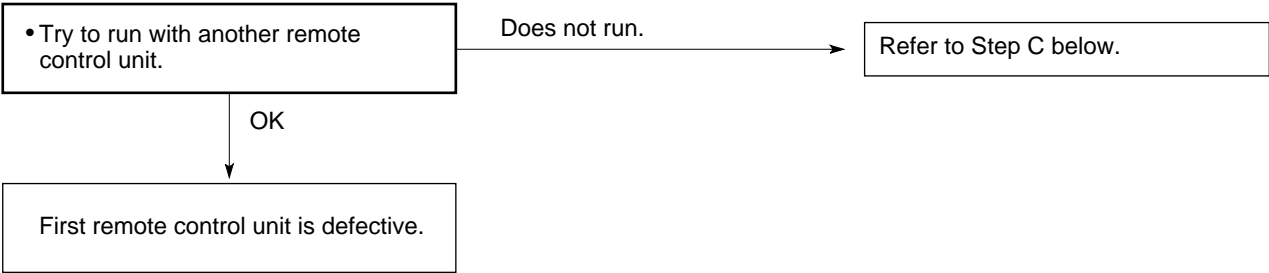


C. Check "OPERATION selector" switch in the indoor unit.

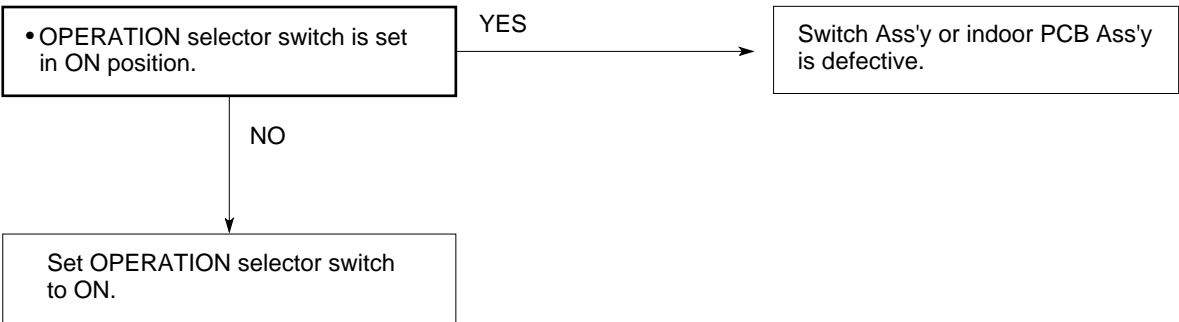

D. Check transformer in indoor unit.



E. Check fuse on the indoor PCB Ass'y.

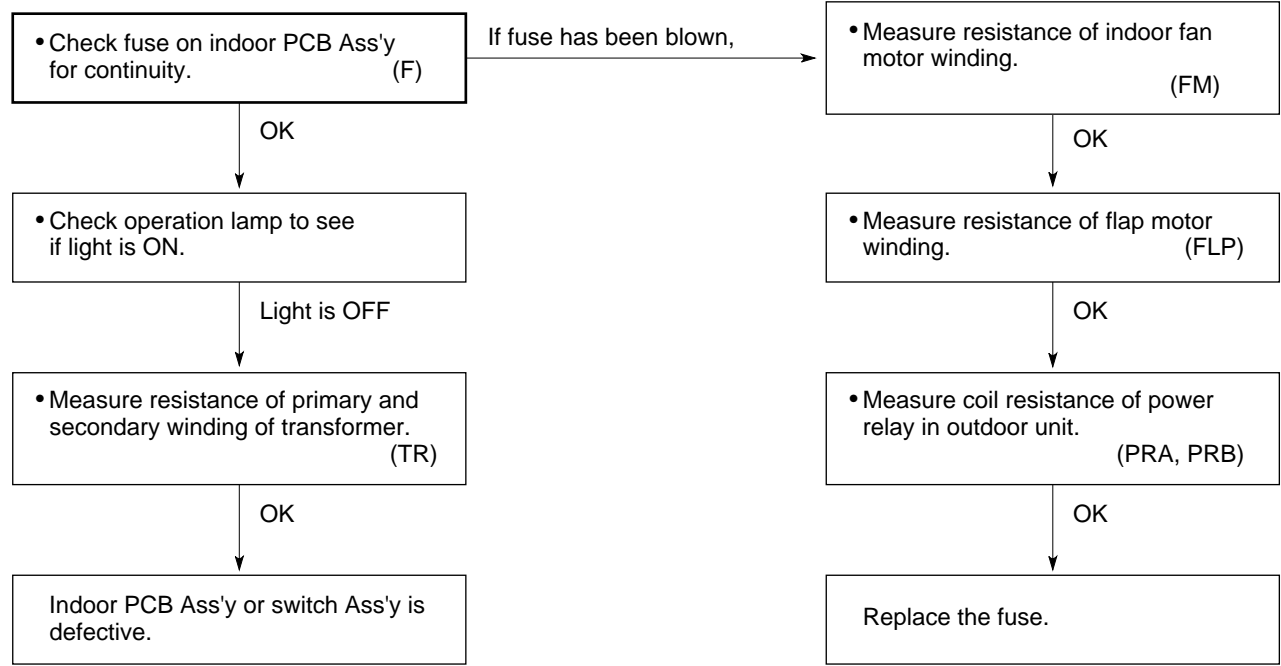


F. Check TIMER on the remote control unit.




10-2-3. Only outdoor unit does not run.

A. Check setting temperature.

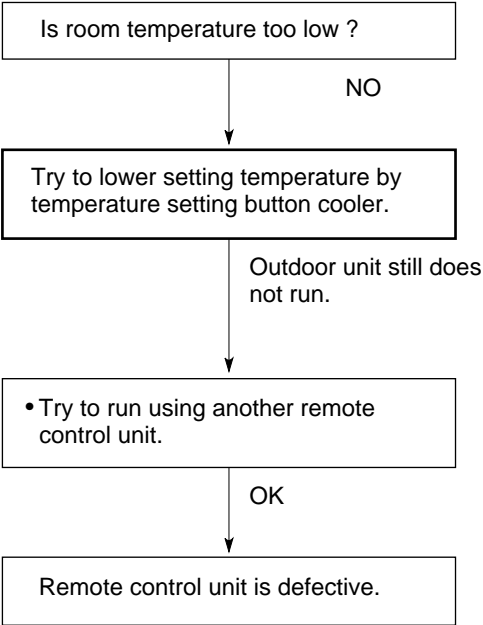


B. Check power relay in outdoor unit.

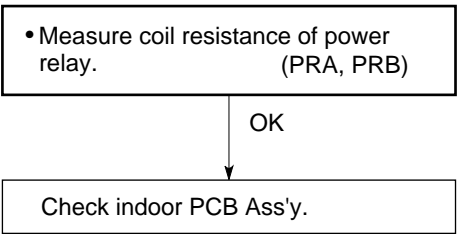


10-3. Some part of air conditioner does not operate.

10-3-1. Only indoor fan does not run.

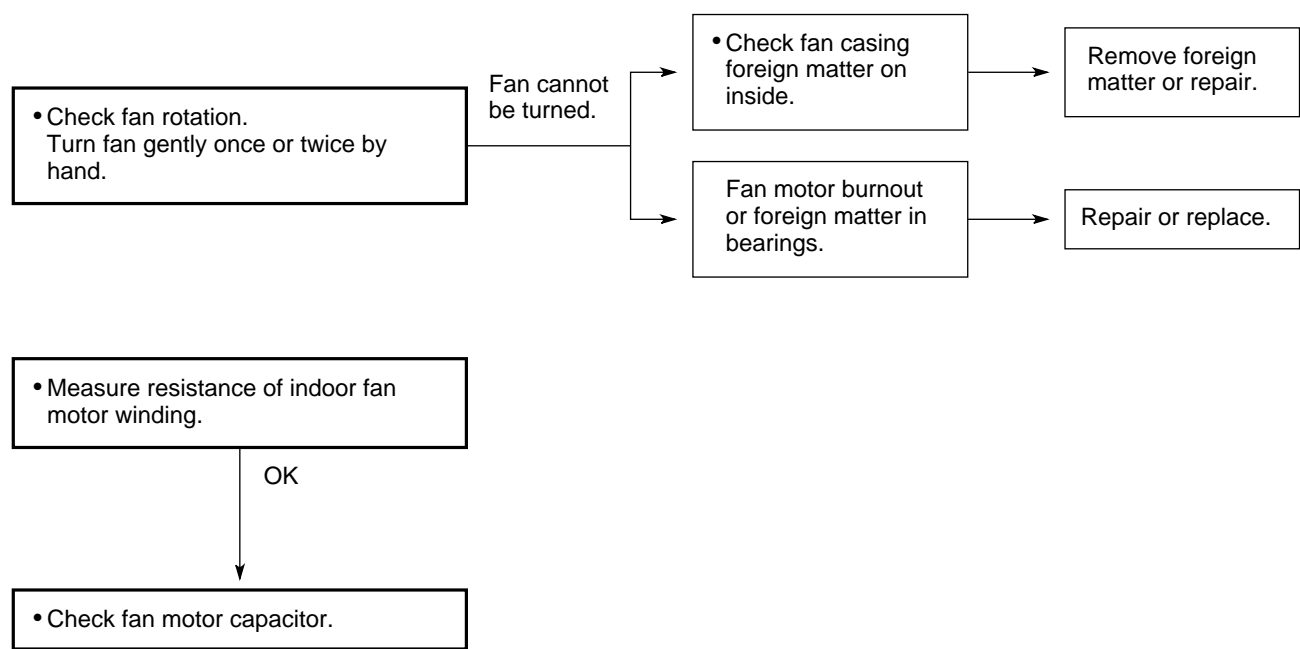


10-3-2. Only outdoor fan does not run.

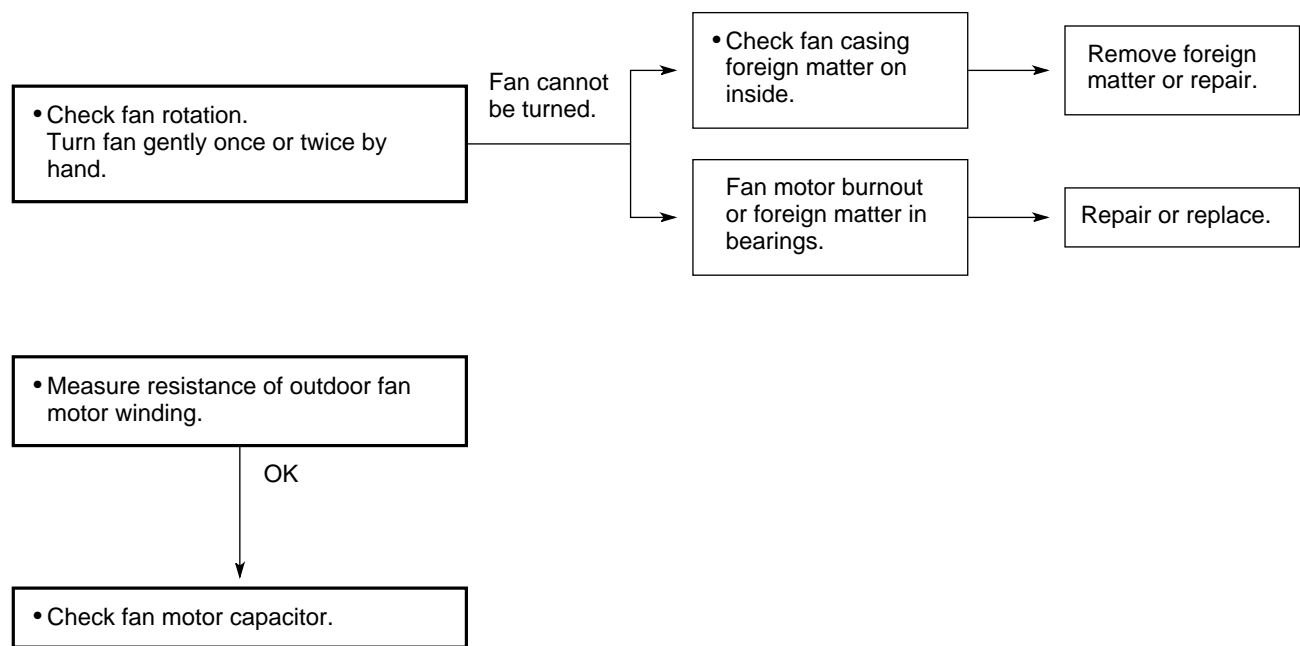




10-3-3. Only compressor does not run.

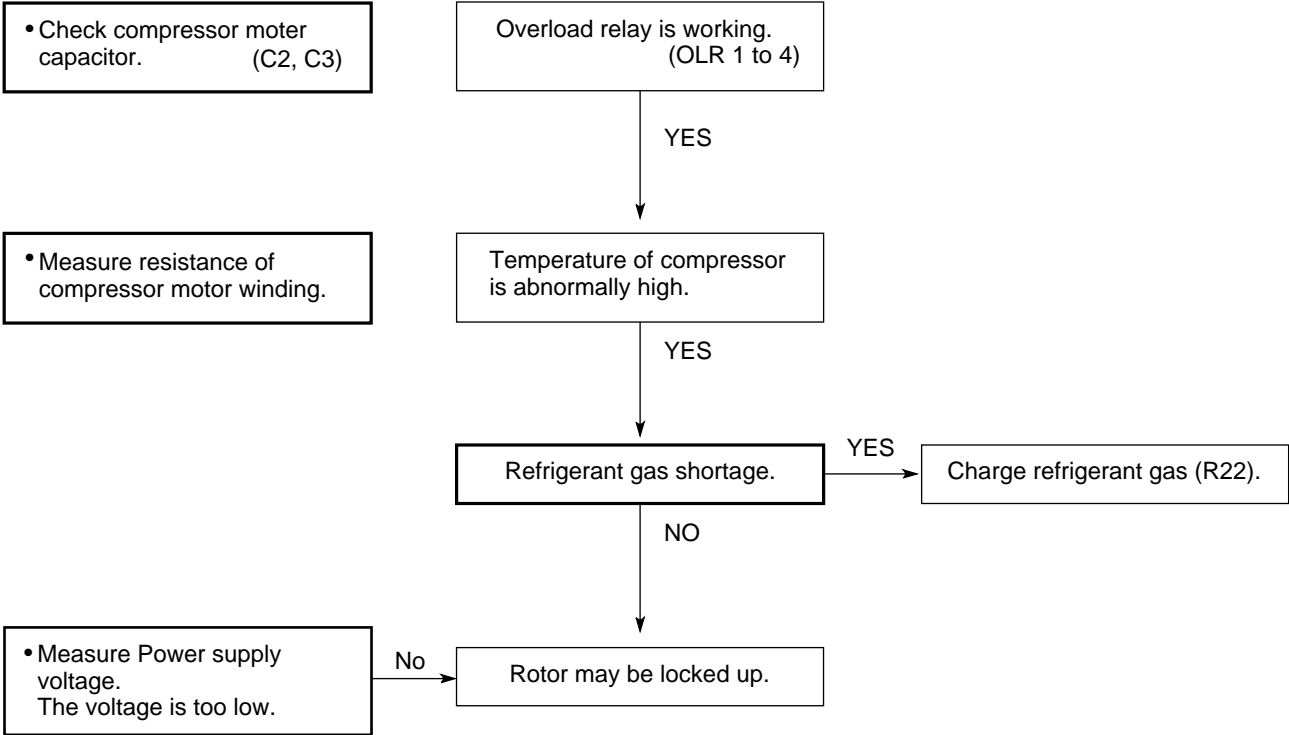


10-3-4. Only flap motor does not run.




10-4. Air conditioner operates, but abnormalities are observed.

10-4-1. Poor cooling.

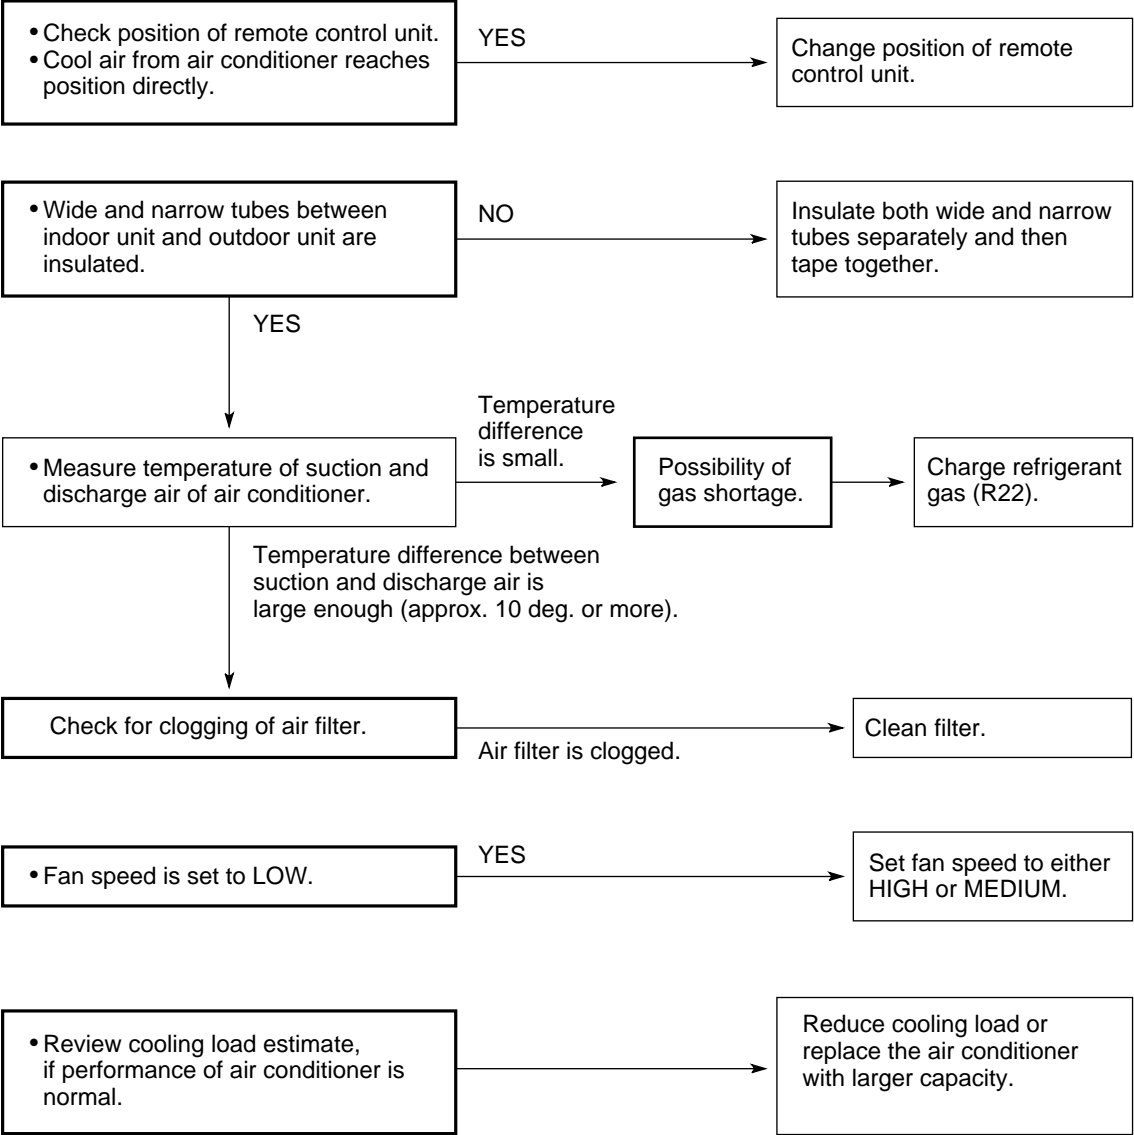


10-4-2. Excessive cooling.

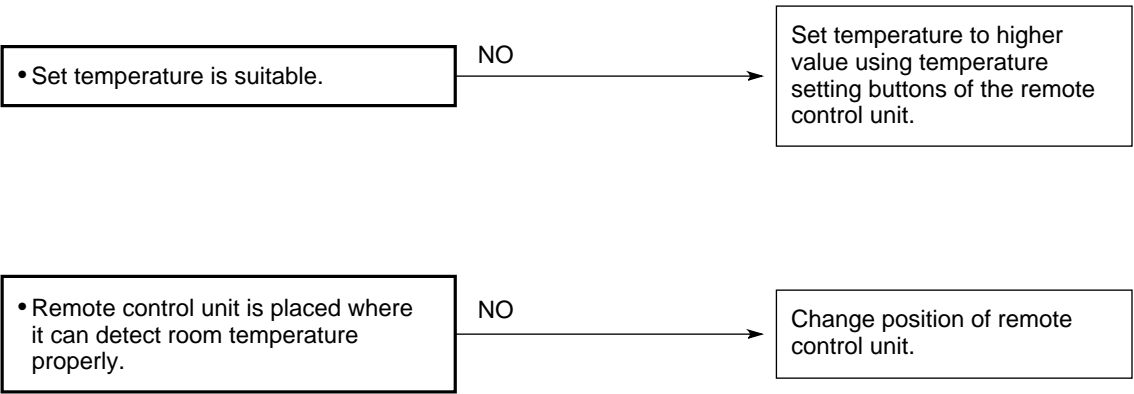

10-5. If a sensor is defective.

10-5-1. Indoor coil temp. thermistor (TH1) is defective.

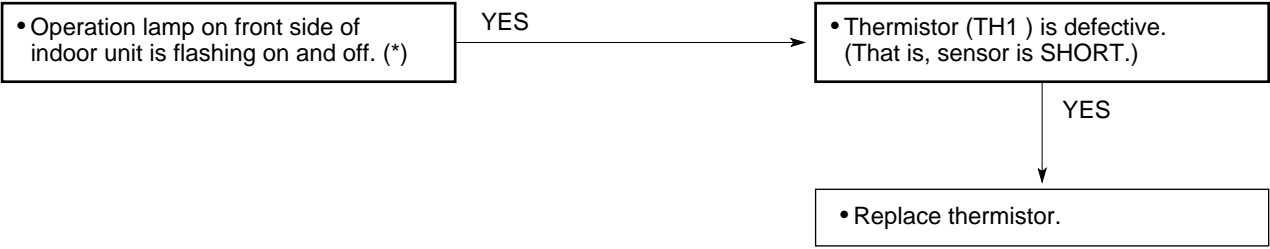

**NOTE** Alarm Signal (\*)

Operation lamp on the front side of the indoor unit will flash on and off when the indoor coil thermistor is defective. At the same time the outdoor unit will stop. Indoor unit will operate only for ventilation.

10-5-2. Room temp. thermistor (TH2) is defective.

A. Open

When thermistor opens, the air conditioner will be in the following conditions as the controller tries to detect extremely low room temperature.

In Cooling mode : The air conditioner soon stops and will not start again. (Thermo.OFF)  
Neither outdoor fan nor compressor runs.

B. Short


When thermistor is short, the air conditioner will be in the following conditions as the controller tries to detect extremely high room temperature.

In Cooling mode : The air conditioner continues to operate. (Thermo.ON) Both the outdoor fan and compressor do not stop.  
As a result, the room becomes too cold.

**NOTE** Definition of Open or Short Circuit of Sensor (Thermistor)

Open... A lead wire is broken or disconnected or the circuit inside the temperature sensor is open .


Short... The protective cover of a lead wire has been damaged, and the exposed wire is touching another metal part, or both lead wires have become exposed and are touching each other. Alternatively, the circuit inside the temperature sensor is closed.

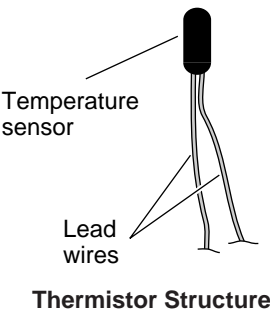


# 11. ARRANGEMENT OF ELECTRICAL COMPONENT

Outdoor Unit    **SAP-CM1821A**

● **Electric Parts**

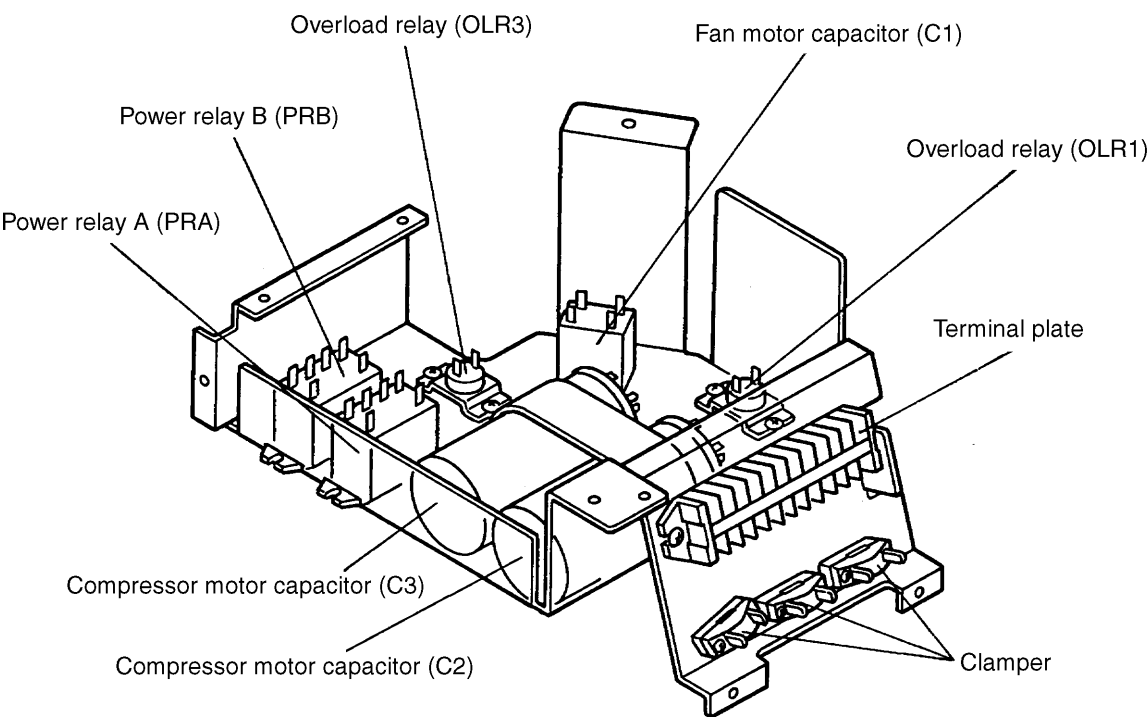

● **Parts Layout in Unit**

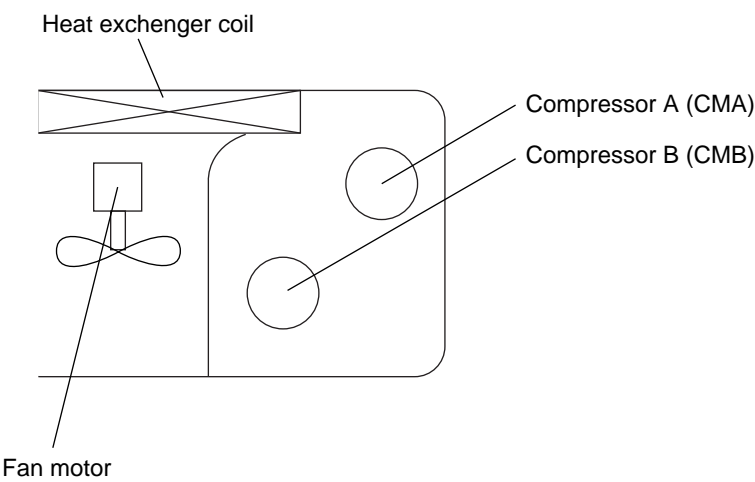

# 12. CHECKING ELECTRICAL COMPONENTS

## 12-1. Measurement of Insulation Resistance

- The insulation is in good condition if the resistance exceeds 2MΩ.

### 12-1-1. Power Supply Wires

Clamp the ground wire of the power supply wires with the lead clip of the insulation resistance tester and measure the resistance by placing a probe on either of the power wires. (Fig. 1)

Then measure the resistance between the ground wire and the other power wire. (Fig. 1)

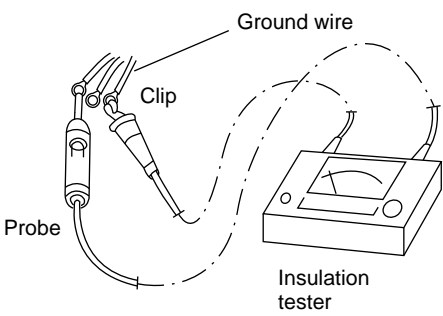


Fig. 1

### 12-1-2. Indoor Unit

Clamp an aluminum plate fin or copper tube with the lead clip of the insulation resistance tester and measure the resistance by placing a probe on each terminal screw on the terminal plate. (Fig. 2)

Note that the ground line terminal should be skipped for the check.

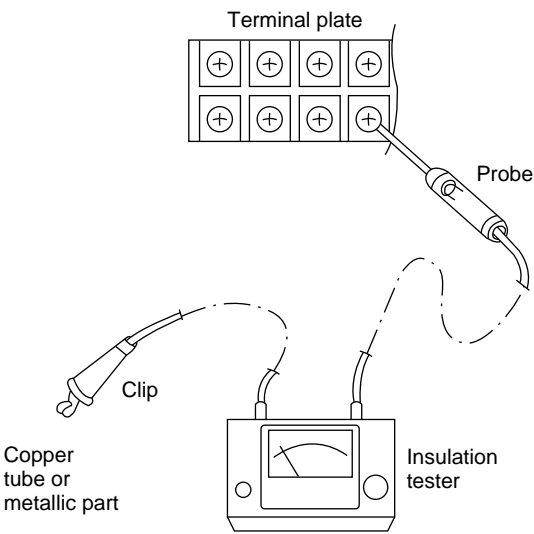


Fig. 2

### 12-1-3. Outdoor Unit

Clamp a metallic part of the unit with the lead clip of the insulation resistance tester and measure the resistance by placing a probe on each terminal screw where power supply lines are connected on the terminal plate. (Fig. 2)

### 12-1-4. Measurement of Insulation Resistance for Electrical Parts

Disconnect the lead wires of the desired electric part from terminal plate, capacitor, etc. Similarly disconnect the connector. Then measure the insulation resistance. (Figs. 3 and 4)

Refer to Electric Wiring Diagram.

#### NOTE

If the probe cannot enter the poles because the hole is too narrow then use a probe with a thinner pin.

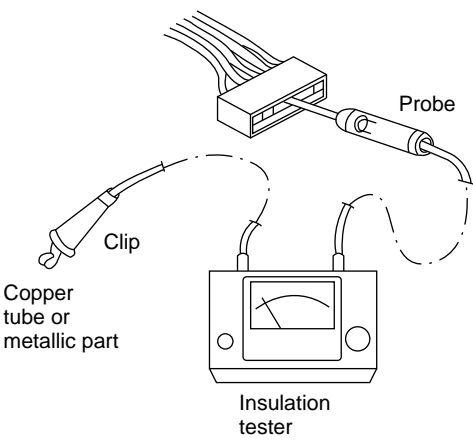


Fig. 3

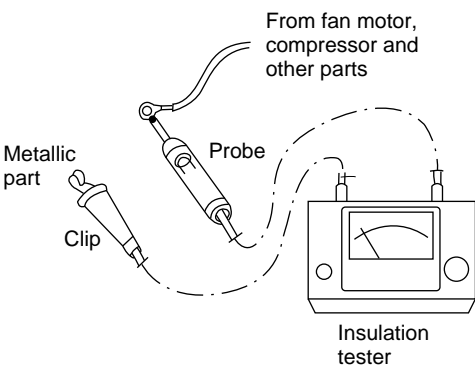


Fig. 4

## 12-2. Checking Continuity of Fuse on PCB Ass'y

- Remove the PCB Ass'y from the electrical component box. Then pull out the fuse from the PCB Ass'y.
- Check for continuity using a multimeter as shown in Fig. 6.

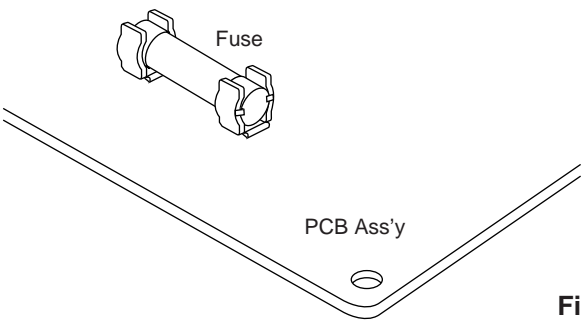


Fig. 5

## 12-3. Checking Motor Capacitor

Remove the lead wires from the capacitor terminals, and then place a probe on the capacitor terminals as shown in Fig. 7. Observe the deflection of the pointer, setting the resistance measuring range of the multimeter to the maximum value.

The capacitor is “good” if the pointer bounces to a great extent and then gradually returns to its original position.

The range of deflection and deflection time differ according to the capacity of the capacitor.

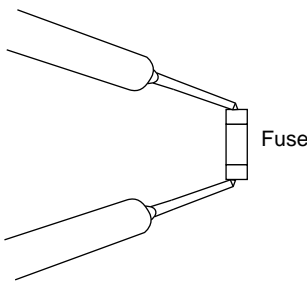


Fig. 6

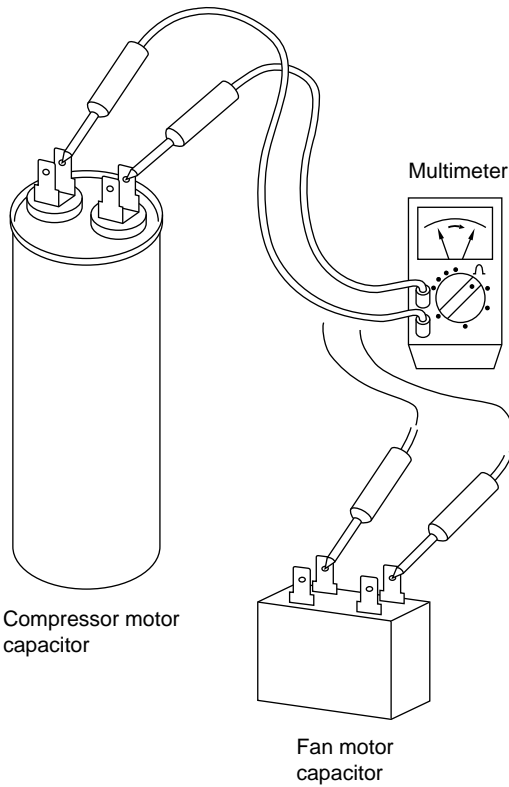


Fig. 7

# **APPENDIX INSTRUCTION MANUAL**

## **SAP–K91A (X 2) + SAP–CM1821A**

(852-6-4180-226-00-0)

---

# Features

This air conditioner is equipped with cooling and drying functions. Details on these functions are provided below; refer to these descriptions when using the air conditioner.

- **Compact Size**  
This model is smaller than its predecessors and yet offers the same capabilities.
  - **Microprocessor Controlled Operation**  
The interior compartment of the remote control unit contains several features to facilitate automatic operation, easy logically displayed for easy use.
  - **Simple One-touch Wireless Remote Control**  
The remote control unit has several features to facilitate automatic operation.
  - **12-Hour ON or OFF Timer**  
This timer can be set to automatically turn the unit on or off at any time within a 12 hour period.
  - **1-Hour OFF Timer**  
This timer can be set to automatically turn off the unit at any time after one hour.
  - **Night Setback**  
Pressing this button changes the setting of the room temperature thermostat, allowing you to set the temperature at whatever level that you find comfortable.
  - **Automatic and 3-step Fan Speed**  
Auto/High/Medium/Low
  - **Air Sweep Control**  
This function moves a flap up and down in the air outlet, directing air in a sweeping motion around the room and providing comfort in every corner.
  - **Automatic Restart Function for Power Failure**  
Even when power failure occurs, preset programmed operation can be reactivated once power resumes.
  - **Anti-Mold Filter**  
This unit is equipped with an anti-mold filter that inhibits the growth of mold and bacteria.
- 

- **Optional Air Clean Filter**  
An air filter that uses activated charcoal to eliminate unpleasant odors and clean the air is available (sold separately).



---

# Contents

	Page
Features.....	2
Product Information.....	3
Alert Symbols.....	3
Installation Location.....	4
Electrical Requirements.....	4
Safety Instructions .....	4
Names of Parts.....	5
Using the Remote Control Unit.....	10
Operation with the Remote Control Unit .....	12
1. Operation.....	12
2. Adjusting the Fan Speed.....	13
3. Night Setback Mode .....	14
Special Remarks .....	15
Using the 12-Hour ON and OFF Timer.....	16
Using the 1-Hour OFF Timer.....	18
Adjusting the Airflow Direction .....	19
Operation without the Remote Control Unit.....	20
Care and Cleaning.....	20
Troubleshooting .....	23
Tips for Energy Saving .....	23

---

## Product Information

If you have problems or questions concerning your Air Conditioner, you will need the following information. Model and serial numbers are on the nameplate on the bottom of the cabinet.

Model No. \_\_\_\_\_ Serial No. \_\_\_\_\_

Date of purchase \_\_\_\_\_

Dealer's address \_\_\_\_\_

Phone number \_\_\_\_\_

---

## Alert Symbols

The following symbols used in this manual, alert you to potentially dangerous conditions to users, service personnel or the appliance:



**WARNING**

This symbol refers to a hazard or unsafe practice which can result in severe personal injury or death.



**CAUTION**

This symbol refers to a hazard or unsafe practice which can result in personal injury or product or property damage.

---

# Installation Location

- **We recommend that this air conditioner be installed properly by qualified installation technicians in accordance with the Installation Instructions provided with the unit.**
- Before installation, check that the voltage of the electric supply in your home or office is the same as the voltage shown on the nameplate.



## **WARNING**

- **Do not install this air conditioner where there are fumes or flammable gases, or in an extremely humid space such as a greenhouse.**
- **Do not install the air conditioner where excessively high heat-generating objects are placed.**

### **Avoid:**

To protect the air conditioner from heavy corrosion, avoid installing the outdoor unit where salty sea water can splash directly onto it or in sulphurous air near a spa.

---

# Electrical Requirements

1. All wiring must conform to the local electrical codes. Consult your dealer or a qualified electrician for details.
2. Each unit must be properly grounded with a ground (or earth) wire or through the supply wiring.
3. Wiring must be done by a qualified electrician.

---

# Safety Instructions

- **Read this Instruction Manual carefully before using this air conditioner. If you still have any difficulties or problems, consult your dealer for help.**
- **This air conditioner is designed to give you comfortable room conditions. Use this only for its intended purpose as described in this Instruction Manual.**



## **WARNING**


- **Never use or store gasoline or other flammable vapor or liquid near the air conditioner — it is very dangerous.**
- **This air conditioner has no ventilator for intaking fresh air from outdoors. You must open doors or windows frequently when you use gas or oil heating appliances in the same room, which consume a lot of oxygen from the air. Otherwise there is a risk of suffocation in an extreme case.**



## **CAUTION**

- **Do not turn the air conditioner on and off from the power mains switch. Use the ON/OFF operation button.**
- **Do not stick anything into the air outlet of the outdoor unit. This is dangerous because the fan is rotating at high speed.**
- **Do not let children play with the air conditioner.**
- **Do not cool the room too much if babies or invalids are present.**

# Names of Parts

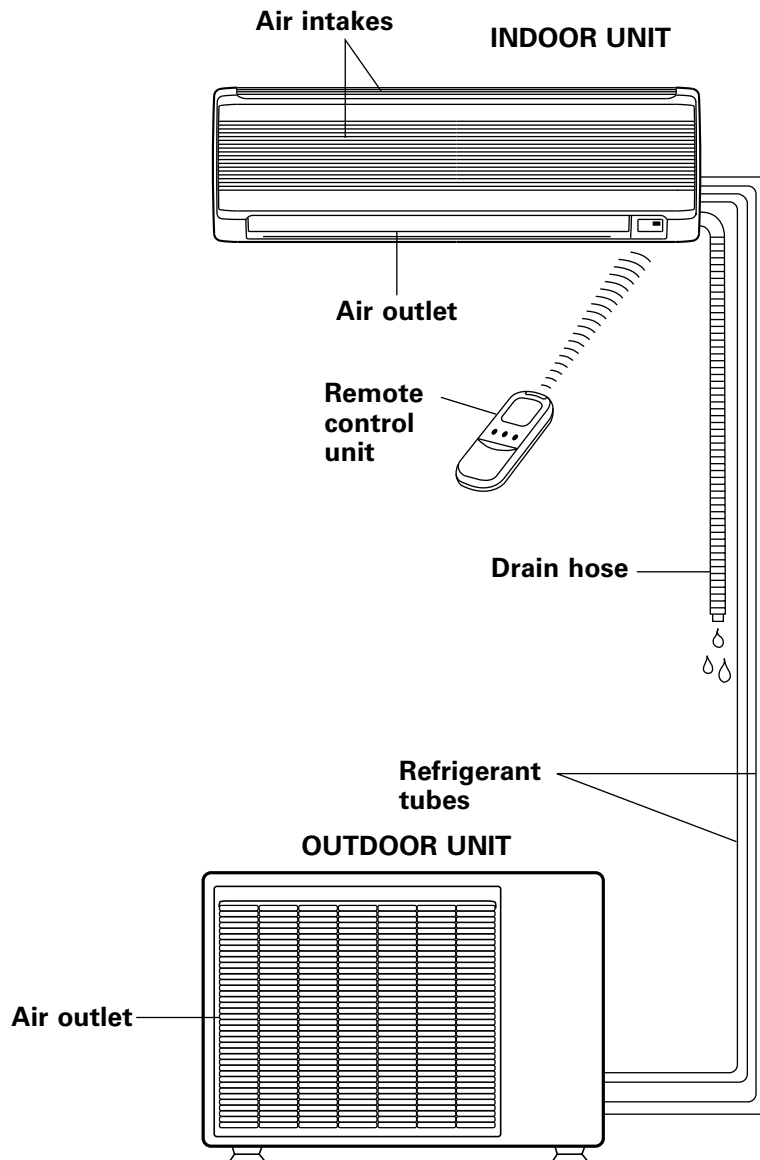

## NOTE

This illustration is based on the external appearance of a standard model. Consequently, the shape may differ from that of the air conditioner you have selected.

This air conditioner consists of an indoor unit and an outdoor unit. You can control the air conditioner with the remote control unit.

<b>Air Intake</b>	Air from the room is drawn into these sections and passes through air filters which remove dust.
<b>Air Outlet</b>	Air is blown out of the air conditioner through the air outlet.
<b>Remote Control Unit</b>	The wireless remote control unit controls power on/off, operation mode selection, temperature, fan speed, timer setting, and air sweeping.
<b>Refrigerant Tubes</b>	The indoor and outdoor units are connected by copper tubes through which refrigerant gas flows.
<b>Drain Hose</b>	Moisture in the room condenses and drains off through this hose.
<b>Outdoor (Condensing) Unit</b>	The outdoor unit contains the compressor, fan motor, heat exchanger coil, and other electrical components.


# Unit Display and Operation Selector





## IMPORTANT

Avoid using radio equipment such as mobile phone near (within 1 m of) the indoor unit. Some radio equipment may cause the unit to malfunction.

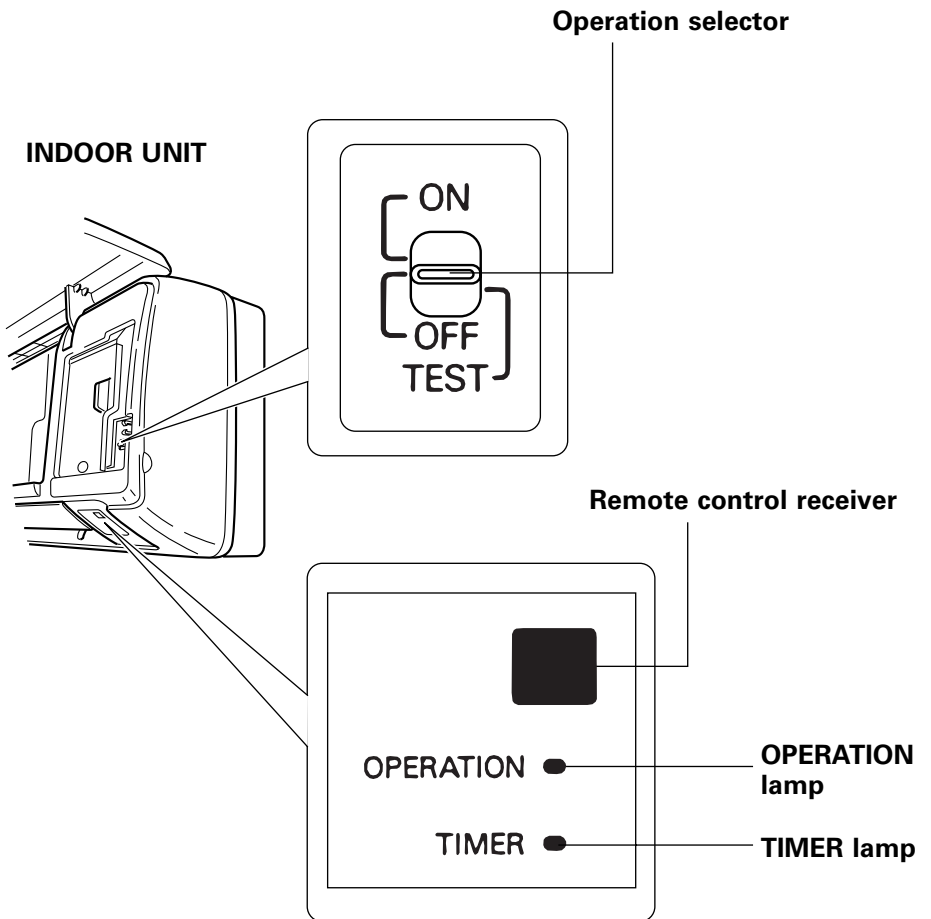If the trouble occurs, disconnect power and restart the air conditioner after a few minutes.




<b>Remote control receiver</b>	This section picks up infrared signals from the remote control unit (transmitter).
<b>Operation selector ON position</b>	This position is for operating the air conditioner with the wireless remote control unit. Set the selector to this position for normal operation.
<b>OFF position</b>  <b>WARNING</b>	Switch the selector to the OFF position if you are not going to use the air conditioner for a few days or longer.  <b>The OFF position does not disconnect the power. Use the main power switch to turn off power completely.</b>
<b>TEST position</b>  <b>CAUTION</b>	This position is used only when servicing the air conditioner.  <b>Do not set at the TEST position for normal operation.</b>
<b>OPERATION lamp</b>	This lamp lights when the system is in the continuous DRY or COOL mode.
<b>TIMER lamp</b>	This lamp lights when the system is being controlled by the timer.

# Remote Control Unit (Display)

Displayed when main unit sensor is in use

Displayed when setting temperature

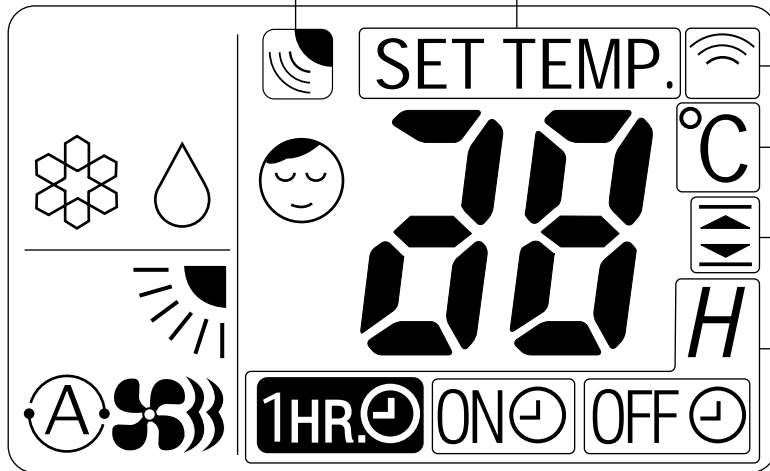

Displayed when transmitting data

Displayed when temperature is shown


Displayed when the temperature setting is at the upper or lower allowable limit

Displayed when setting timer

## Symbols

### (1) Operation mode

COOL .....



MILD DRY .....



### (2) Fan speed

Automatic operation .....




HIGH .....



MEDIUM .....




LOW .....



### (3) Set temperature

16-30 °C

When set to 28 °C .....

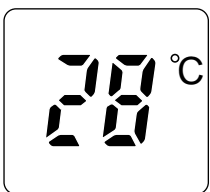

### (4) Timer

12-hour ON Timer .....



12-hour OFF Timer .....



1-hour OFF Timer .....



### (5) NIGHT SETBACK .....



### (6) Confirmation of transmission .....




### (7) Flap angle indication .....



### (8) Sweep indication .....





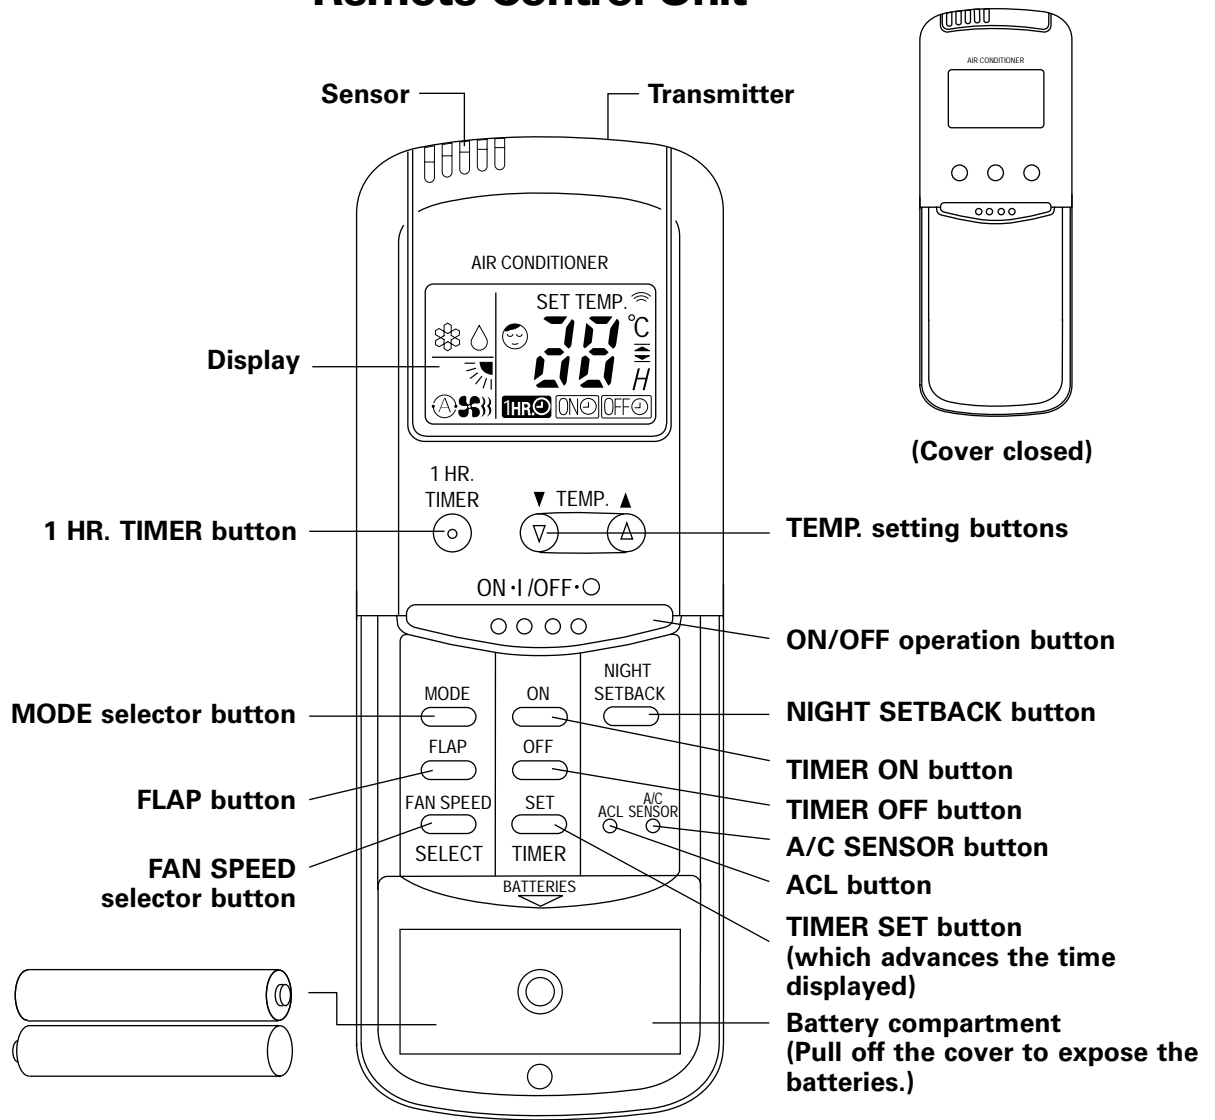

# Remote Control Unit

















## NOTE

The illustration above pictures the remote control unit after the cover has been lowered and removed.

<b>Transmitter</b>	When you press the buttons on the remote control unit, the  mark appears in the display to transmit the setting changes to the receiver in the air conditioner.
<b>Sensor</b>	A temperature sensor inside the remote control unit senses the room temperature.
<b>Display</b>	Information on the operating conditions is displayed while the remote control unit is switched on. If the unit is turned off, only the mode that was set previously is still displayed.
<b>NIGHT SETBACK button</b>	For details, see "Night Setback Mode". When you press this button in the DRY or COOL mode, the  mark appears in the display, and the remote control unit will automatically adjust the set temperature to save energy.
<b>TEMP. setting buttons</b>	Press the  button to increase the set temperature. Press the  button to reduce the set temperature.
<b>ON/OFF operation button</b>	This button is for turning the air conditioner on and off.

## Remote Control Unit (continued)


<b>TIMER ON button</b>	 : The air conditioner starts at the set time.
<b>TIMER OFF button</b>	 : The air conditioner stops at the set time.
<b>TIMER SET button</b>	This button is used to set the time at which you wish the air conditioner to go on or off.
<b>MODE selector button</b> (DRY) (COOL)	Use this button to select DRY or COOL mode.  : The air conditioner reduces the humidity in the room.  : The air conditioner makes the room cooler.
<b>FLAP button</b>  <b>NOTE</b>	Press this button either to select to set the airflow direction to one of the six possible positions manually, or to select the sweep function, which moves the flap up and down automatically.  : The airflow direction can be set manually. (six positions)  : The flap moves up and down automatically. To switch to the sweep function (  ) when in the manual (  ) mode, hold down the FLAP button.
<b>FAN SPEED selector button</b>	 : The air conditioner automatically decides the fan speeds.  : High fan speed  : Medium fan speed  : Low fan speed
<b>1 HR. TIMER button</b> (1-HOUR OFF TIMER)	 : When you press this button, regardless of whether the unit is operating or stopping, the unit operates for one hour and then shuts down.
<b>ACL button</b> (ALL CLEAR)	Puts the remote control unit into pre-operation status. Always press this button after replacing the batteries.
<b>A/C SENSOR button</b>  <b>NOTE</b>	When you press this button (use a small-tipped object such as a ballpoint pen), the  mark will appear at the display. And the room temperature is detected by the sensor which is built into the indoor unit and the air conditioner is controlled accordingly. If the remote control is located near a heat source, such as a space heater or in direct sunlight, press the A/C SENSOR button to switch to the sensor on the indoor unit.

### NOTE

The remote control unit sends the temperature signal to the air conditioner regularly at three minute intervals. If the signal from the remote control unit stops for more than ten minutes due to the loss of the remote control unit or other trouble, the air conditioner will switch to the temperature sensor which is built into the indoor unit and control the room temperature. In these cases, the temperature around the remote control unit may differ from the temperature detected at the air conditioner's position.

# Using the Remote Control Unit

## How to Install Batteries

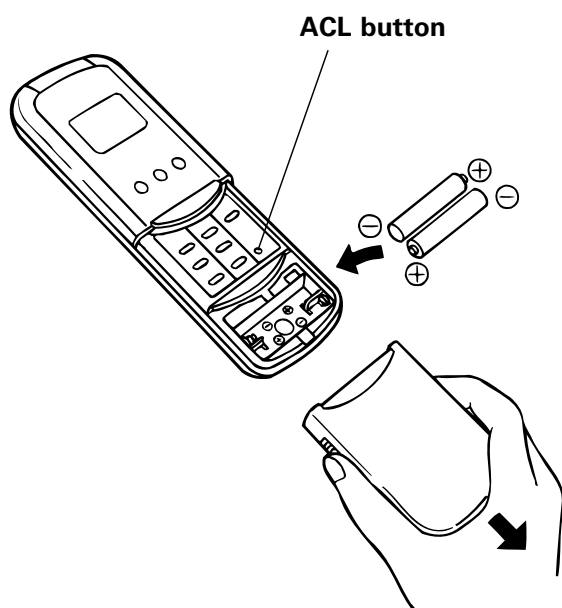


1. Slide the cover in the direction indicated by the arrow and remove it.
2. Install two AAA alkaline batteries. Make sure the batteries point in the direction marked in the battery compartment.
3. Use a thin object such as the tip of a pen to press the ACL button.

### NOTE

- The batteries last about six months, depending on how much you use the remote control unit. Replace the batteries when the remote control unit's display fails to light, or when the remote control cannot be used to change the air conditioner's settings.
- Use two fresh leak-proof type-AAA alkaline batteries.
- In replacing batteries, follow the instructions as mentioned in the sub-section "How to Install Batteries".
- If you do not use the remote control unit more than 1 month, take out the batteries.

## How to Use the Remote Control Unit

When using the remote control unit, always point the unit's transmitter head directly at the air conditioner's receiver.

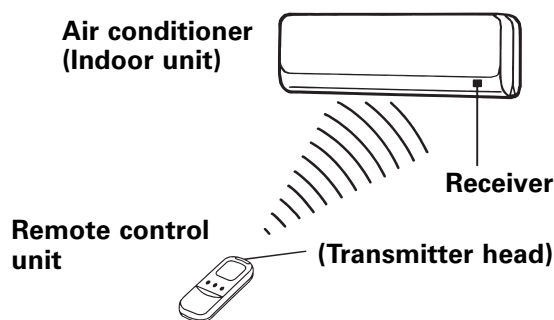

## Remote Control Unit Installation Position

The remote control unit may be operated either from a non-fixed position or from a wall-mounted position. To ensure that the air conditioner operates correctly, DO NOT install the remote control unit in the following places:

### DO NOT


- In direct sunlight
- Behind a curtain or other places where it is covered
- More than 8 m away from the air conditioner
- In the path of the air conditioner's airstream
- Where it may become extremely hot or cold
- Where it may be subject to electrical or magnetic noise
- Where there is an obstacle between the remote control unit and air conditioner (since a check signal is sent from the remote control unit every 3 minutes)




## Using the Remote Control Unit (continued)

### Mounting the Remote Control Unit

#### Removable mounting

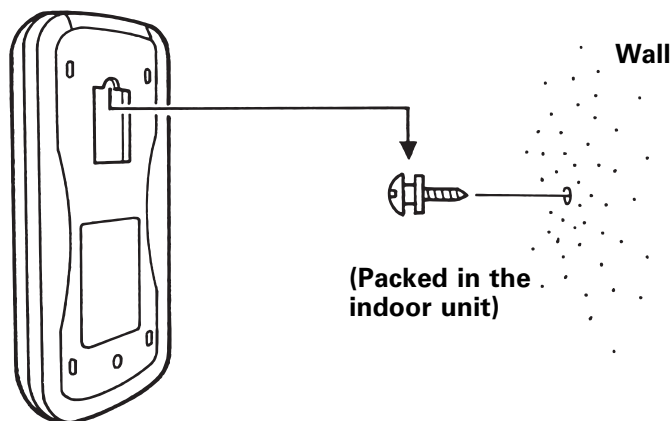

#### Non-removable mounting

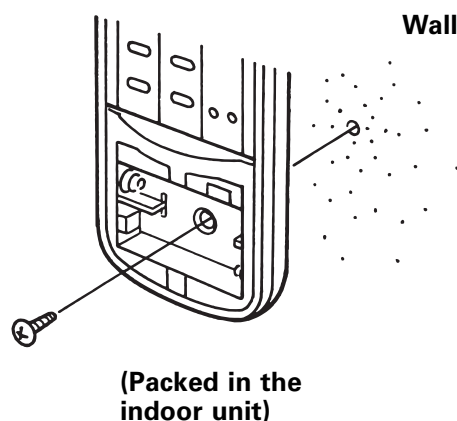

#### Mounting on a wall

##### A. Removable mounting


- 1) Momentarily hold the remote control unit at the desired mounting position.
- 2) Confirm that the air conditioner responds correctly when you press keys on the remote control from that position.
- 3) After confirming correct operation, use a screwdriver to screw the mounting screw into the wall.
- 4) Hang the remote control unit from the mounting screw.

##### B. Non-removable mounting

- 1) Momentarily hold the remote control unit at the desired mounting position.
- 2) Confirm that the air conditioner responds correctly when you press keys on the remote control from that position.
- 3) After confirming correct operation, use a screwdriver to screw the mounting screw into the wall.
- 4) Remove the batteries of the remote control unit.
- 5) Use a screwdriver to screw the remote control unit securing screw into the wall through the hole in the battery compartment.
- 6) Replace the batteries.
- 7) Again confirm that the remote control unit operates correctly.

# Operation with the Remote Control Unit

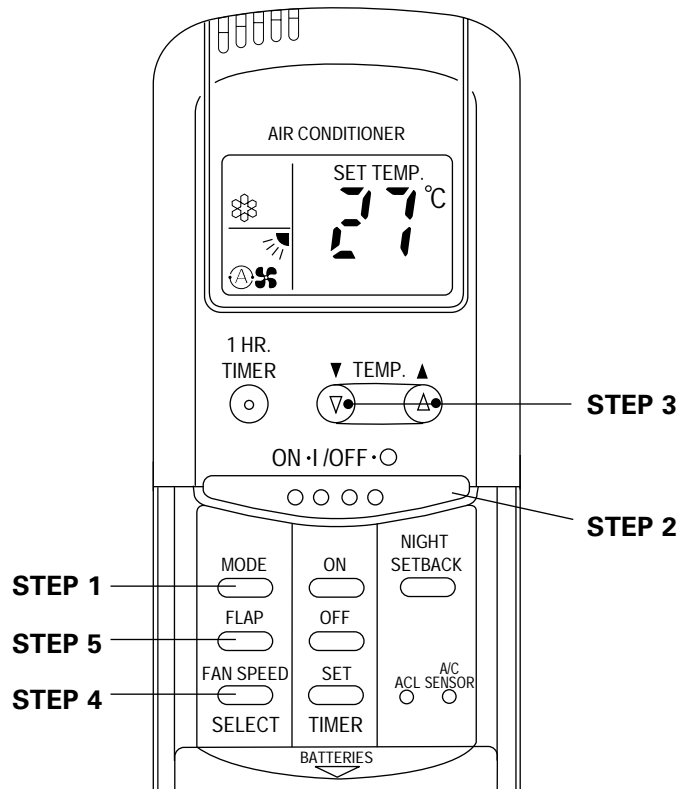


## 1. Operation



### NOTE

Check that the circuit breaker on the power panel is turned on and that the operation selector of the indoor unit is in the ON position.

Press the setting buttons as described below and change the settings as desired.

<b>STEP 1</b>	Press the MODE selector button and select the desired mode. For dehumidifying operation →  For cooling operation → 
<b>STEP 2</b>	To start the air conditioner, press the ON/OFF operation button.
<b>STEP 3</b>	Press the TEMP. setting buttons to change the temperature setting to the desired temperature. Adjustable temperature range: 30 °C max.—16 °C min.
<b>STEP 4</b>	Set the FAN SPEED selector button to the setting you want.
<b>NOTE</b>	If the fan speed is set to  (Automatic), the fan speed switches automatically, according to the difference between the actual room temperature and the temperature setting.
<b>STEP 5</b>	Press the FLAP button and set the airflow direction as desired. (Refer to “Adjusting the Airflow Direction” on page 19.)

To stop the air conditioner, press the ON/OFF operation button again.

## Operation with the Remote Control Unit (continued)


### NOTE

- Choose the best position in the room for the remote control unit, which also acts as the sensor for room comfort and transmits the operating instructions. Once you've found this best position, always keep the remote control unit there.
- This appliance has a built-in 3-minute time delay circuit to ensure reliable operation. When the operation button is pressed, the compressor will start running within three minutes. In the event of power failure, the unit will stop. When the power is restored, the unit will restart automatically after three minutes.

## 2. Adjusting the Fan Speed

### A. Automatic


Simply set the FAN SPEED selector button to the  position.

A microcomputer in the air conditioner automatically controls the fan speed when the  mode is selected. When the air conditioner starts operating, the difference between the room temperature and the set temperature is detected by the microcomputer which then automatically switches the fan speed to the most suitable level.




### Cooling and DRY mode:

When difference between room temperature and set temperature is	FAN SPEED
2 °C and over	High
Between 2 °C and 1 °C	Medium
Below 1 °C	Low

### NOTE


The above table assumes that the sensor on the remote control is being used. If the sensor on the indoor unit is being used (the  indicator is on), actual operation may differ slightly from the operation described in the table.  
(Refer to "A/C SENSOR button" on page 9.)

### B. Manual

If you want to adjust fan speed manually during operation, just set the FAN SPEED selector button as desired. [  ,  , or  ]

## Operation with the Remote Control Unit (continued)

### 3. Night Setback Mode

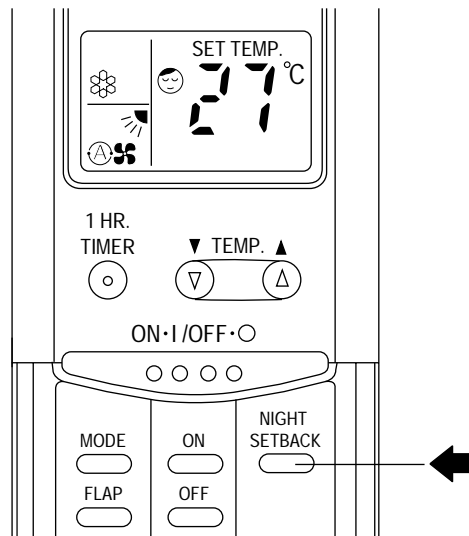


**Night Setback Mode is used for saving energy.**

Press the NIGHT SETBACK button while operation.  
The ☺ mark appears in the display.

To release the night setback function, press the NIGHT SETBACK button again.

**In Cooling and DRY Mode:**  
(❄ and 💧)

When the night setback mode is selected, the air conditioner automatically raises the temperature setting 1 °C when 30 minutes have passed after the selection was made, and then another 1 °C after another 30 minutes have passed, regardless of the indoor temperature when night setback was selected. This enables you to save energy without sacrificing comfort. This function is convenient when gentle cooling is needed.

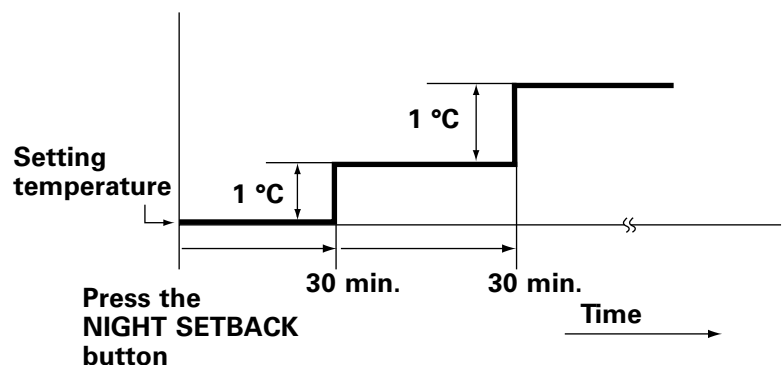

---

# Special Remarks

## **"DRY" (💧) Operation**

### **How it works?**

- Once the room temperature reaches the level that was set, the unit repeats the cycle of turning on and off automatically.
- During DRY operation, the fan speed is automatically set to LOW or VERY LOW; the fan speed then switches back and forth between LOW (for 20 seconds) and VERY LOW (for 10 seconds).
- "DRY" operation is not possible if the indoor temperature is 15 °C or less.

## **Power failure during operation**

- In the event of power failure, the unit will stop. When the power is resumed, the unit will restart automatically after three minutes.

## **Clicking Sound**

### **Clicking sound is heard from the air conditioner**


- In cooling operation, any plastic parts may expand or shrink due to a sudden temperature change. In this event, a clicking sound may occur. This is normal, and the sound will soon disappear.

## **Remote Control Unit**

- The remote control unit sends the setting condition to the air conditioner regularly at three minute intervals.

# Using the 12-Hour ON and OFF Timer

## 1. TIMER ON mode (Example)

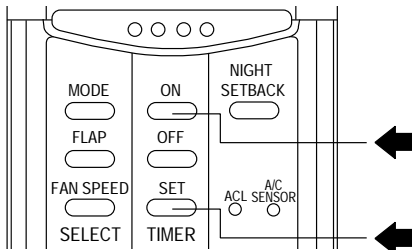

After the length of time set for **TIMER ON** elapses, the unit begins operating.

The display depicted at left indicates that the air conditioner will begin operating in three hours.


**Setting procedure:**

<b>STEP 1</b>	Press the <b>MODE</b> button and set the desired operation mode and press the <b>ON/OFF</b> operation button. (See "Operation with the Remote Control Unit," page 12.)
<b>STEP 2</b>	Press the <b>TIMER ON</b> button.
<b>STEP 3</b>	Press the <b>TIMER SET</b> button (which advances the time displayed) to set the time at which you want operation to begin. The time can be set for one to twelve hours, in one hour steps. <div style="text-align: center;"> <span>→</span> 1 <span>→</span> 2 <span>→</span> 3.....12 <span>→</span> </div>

- The display changes immediately to its status previous to timer setting, but the **ON** indication remains.
- To check the status of the timer while it is counting down, press the **TIMER SET** button.

**Cancellation procedure:** Press the **TIMER ON** button once again.

## 2. TIMER OFF mode (Example)

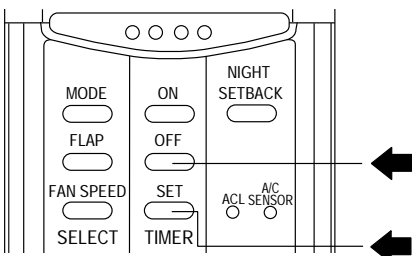

After the length of time set for **TIMER OFF** elapses, the unit stops operating.

The display depicted at left indicates that the air conditioner will stop operating in five hours.

**Setting procedure:**

<b>STEP 1</b>	Press the <b>TIMER OFF</b> button.
<b>STEP 2</b>	Press the <b>TIMER SET</b> button (which advances the time displayed) to set the time at which you want operation to stop. The time can be set for one to twelve hours, in one hour steps. <div style="text-align: center;"> <span>→</span> 1 <span>→</span> 2 <span>→</span> 3.....12 <span>→</span> </div>

- The display changes immediately to its status previous to timer setting, but the **OFF** indication remains.
- To check the status of the timer while it is counting down, press the **TIMER SET** button.

**Cancellation procedure:** Press the **TIMER OFF** button once again.

## Using the 12-Hour ON and OFF Timer (continued)


### 3. ON/OFF Program Timer

A combination of the TIMER ON and TIMER OFF modes, this function allows you to specify the time that the unit turns on and the time when it turns off.

(Example) The unit will turn on three hours from now, and turn off five hours from now.



**TIMER ON display during counting**

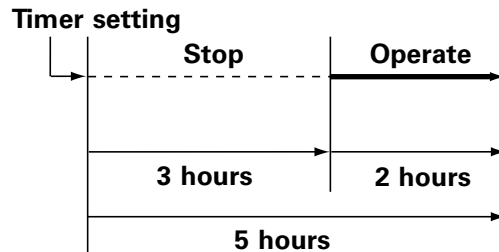

**TIMER OFF display during counting after 3 hours has elapsed.**

#### Setting procedure:

<b>STEP 1</b>	Use the procedure described in the "1. TIMER ON mode" section on the preceding page to set the timer to turn the unit on three hours from now.
<b>STEP 2</b>	Use the procedure described in the "2. TIMER OFF mode" section on the preceding page to set the timer to turn the unit off five hours from now.

- The display changes immediately to its status previous to timer setting, but the **ON** or **OFF** indication remains.
- Press the TIMER SET button to display the time remaining on the timer in seconds.
- Note that it is not possible to check both the ON and OFF timer settings. The timer setting that will occur first is given preference and displayed.  
The timer setting that will occur first is the one with the shorter time setting.


**Cancellation procedure:** Press the TIMER ON button and TIMER OFF button once again.

#### NOTE

- **Set the ON and OFF Timers simultaneously.**  
Unless you set the 12-Hour ON and OFF Timers at the same time, they may not operate at the specified time.

# Using the 1-Hour OFF Timer

## 1. 1-Hour OFF Timer

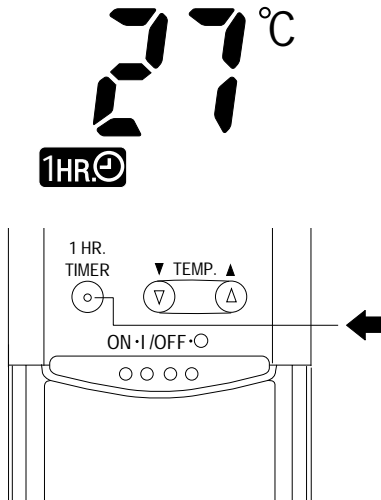

This function causes the unit to operate for one hour and then stop, regardless of whether the unit is on or off when this button is pressed. The **1HR.** icon in the display indicates that this function is operating.

### Setting procedure:

Regardless of whether the unit is operating or stopped, press the 1 HR. TIMER button.

**1HR.** appears in the display.

### Cancellation procedure:

Press the ON/OFF operation button to turn the unit off, wait for the unit to stop operating, and then press the ON/OFF operation button again.

The 1-Hour Timer function is now cancelled and the unit operates normally.

### NOTE


- If, while the 1-Hour Timer function is operating, the 1HR. TIMER button is pressed once to cancel the function and then again, the unit continues to operate for one hour from that point in time and then stops.
- If the 1 HR. TIMER button is pressed while the TIMER OFF function operates, the OFF Timer is cancelled and the unit will stop operating one hour later.

## 2. Combining the 1-Hour OFF Timer and 12-Hour ON Timer

By combining the 1-Hour OFF Timer and 12-Hour ON Timer, it is possible to have the unit operate for just one hour from the present time, and then have it switch on again later at a time specified by you.

(Example) Having the unit operate for just one hour from the present time, and then switch on again three hours from the present time.

### Timer setting

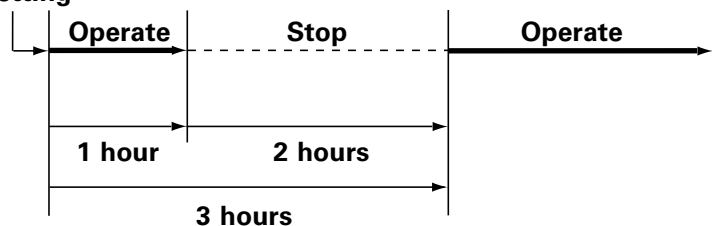

### Setting procedure:

<b>STEP 1</b>	Press the 1 HR. TIMER button.
<b>STEP 2</b>	Press the TIMER ON button and use the TIMER SET button to set the unit to turn on three hours later.

### NOTE


- **Set the 1-Hour OFF Timer and the 12-Hour ON Timer simultaneously.**  
Unless you set the 1-Hour OFF Timer and the 12-Hour ON Timer at the same time, the 1-Hour OFF Timer may operate for one hour or more.



# Adjusting the Airflow Direction

## 1. Horizontal

The horizontal airflow can be adjusted by moving the vertical vanes with your hands to the left or right.



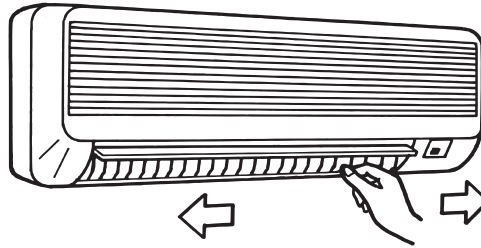


### CAUTION

When the humidity is high, the vertical vanes should be in the front position during the cooling or dehumidifying operation. If the vertical vanes are positioned all of the way to the right or left, condensation may begin to form around the air vent and drip down.

## 2. Vertical

The vertical airflow can be adjusted by moving the flap with the remote control unit. Do not move the flap with your hands. Confirm that the remote control unit has been turned on. Use the FLAP button to set either the sweep function or one of the six airflow direction settings.

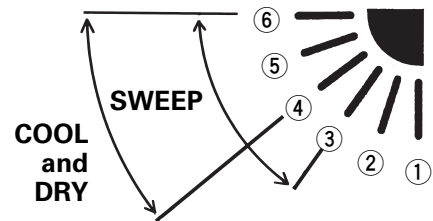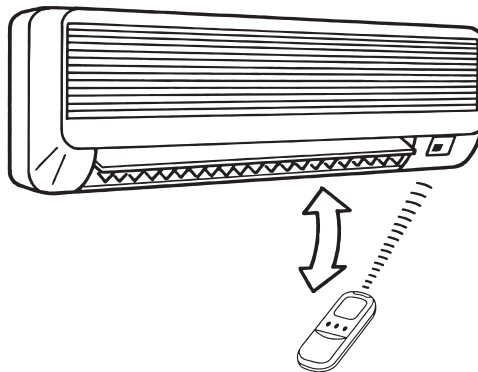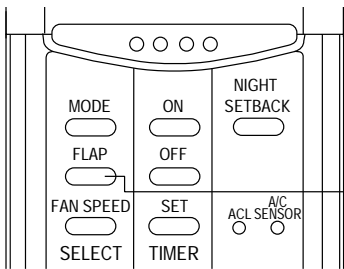

### A. Sweep function



The flap starts moving up and down to deliver air over the sweep range.

### B. Setting the Airflow Manually



Referring to the above illustration, use the FLAP button to set the airflow direction within the range used during the cooling or dehumidifying operation.

### NOTE




### CAUTION

- The flap automatically closes when the unit is off.
- Use the FLAP button on the remote control to adjust the position of the flap. If you move the flap by hand, the flap position according to the remote control and the actual flap position may no longer match. If this should happen, shut off the unit, wait for the flap to close, and then turn on the unit again; the flap position will now be normal again.
- Do not have the flap pointed down during cooling operation. Condensation may begin to form around the air vent and drip down.

# Operation without the Remote Control Unit

## INDOOR UNIT

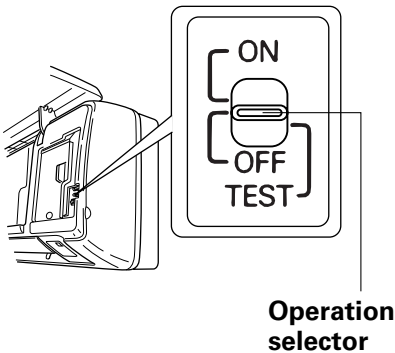

If you have lost the remote control unit or it is not working properly, follow the steps below.

1. When the air conditioner is not running  
If you want to turn on the air conditioner, switch the operation selector to the OFF position, and then to the ON position.

### NOTE

The temperature setting and fan speed are automatically set to match the settings before operation last stopped, provided that operation last stopped less than four hours previously. However, if operation last stopped more than four hours previously, the unit switches to the auto operation mode.

2. When the air conditioner is running  
If you want to turn off the air conditioner, switch the operation selector to the OFF position.

## Care and Cleaning



### WARNING

1. For safety, be sure to turn the air conditioner off and also to disconnect the power before cleaning.
2. Do not pour water on the indoor unit to clean it. This will damage the internal components and cause an electric shock hazard.

### Casing and Grille (Indoor Unit)

Clean the casing and grille of the indoor unit with a vacuum cleaner brush, or wipe them with a clean, soft cloth.

If these parts are stained, use a clean cloth moistened with a mild liquid detergent. When cleaning the grille, be careful not to force the vanes out of place.



### CAUTION

1. Never use solvents, or harsh chemicals when cleaning the indoor unit. Do not wipe the plastic casing using very hot water.
2. Some metal edges and the fins are sharp and may cause injury if handled improperly; be especially careful when you clean these parts.
3. The internal coil and other components of the outdoor unit must be cleaned every year. Consult your dealer or service center.


## Care and Cleaning (continued)

### Anti-Mold Filter

The anti-mold filter behind the air intake grille should be checked and cleaned at least once every two weeks.

#### How to remove the anti-mold filter

1. Grasp both ends of the air intake grille and pull it out and up.
2. Push the anti-mold filter up slightly, and then pull it down.

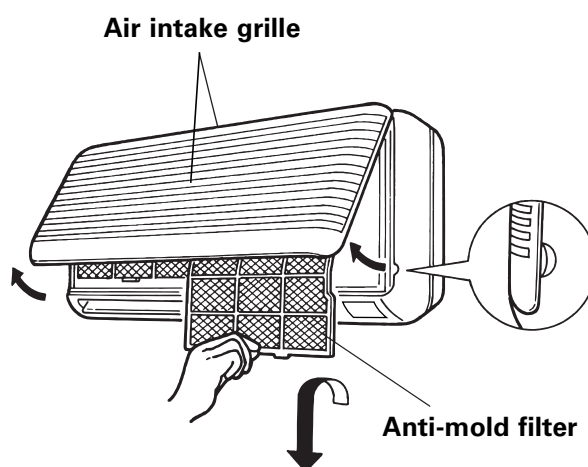


### Cleaning

Use a vacuum cleaner to remove light dust. If there is sticky dust on the filter, wash the filter in lukewarm, soapy water, rinse it in clean water, and dry it.

#### How to replace the anti-mold filter

1. With the "FRONT" mark facing you, slide the anti-mold filter up into the unit and then lower the handle into the groove on the unit.
2. After installing the anti-mold filter, press the locations marked by the arrows (⇓) and close the air intake grille.

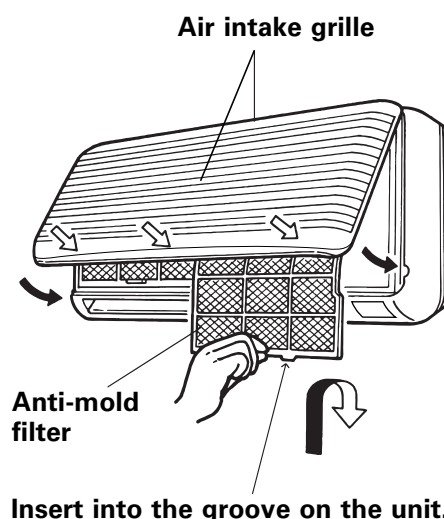

## Care and Cleaning (continued)

### Air Cleaning Filter (not provided)

The air cleaning filter removes dust and dirt from the air, and reduces odors and smoke from tobacco.

#### NOTE

The air cleaning filter is not provided with the air conditioner and must be purchased separately. The first time that you buy the air clean filter, it is necessary to get the **STK-ARF4B-50** model with frame. When changing the filter subsequently, it is only necessary to replace the filter itself (model **STK-F4B-50**).



#### WARNING


**This air cleaning filter cannot remove harmful gases or vapors nor ventilate air in the room. You must open doors or windows frequently when you use gas or oil heating appliances. Otherwise there is a risk of suffocation in extreme cases.**

### How to install the air cleaning filter

The air cleaning filter needs to be installed behind the anti-mold filter.

1. Remove the anti-mold filter.
2. Install the air cleaning filter in the position shown in the diagram, with the “前面” symbols (meaning “FRONT”) facing the front.
3. Reinstall the anti-mold filter.

Air  
clean  
filter

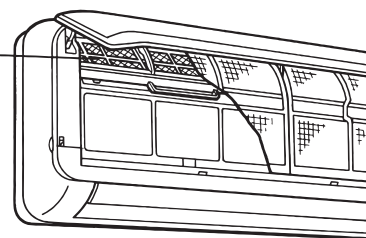

### Cleaning the main unit and remote control unit


- Wipe clean using a soft, dry cloth.
- To remove stubborn dirt, moisten a cloth in warm water no hotter than 40 °C, wring thoroughly, and then wipe.
- The air intake grille can be removed in order to wash it with water.

### Removing and remounting the air intake grille

- With the air intake grille open all the way, grip both arms with your hands and pull toward you to remove.  
To remount, hold the air intake grille roughly horizontal and push it in until the arm shafts fit into the indentations in the main unit, then fit the grille into place.

Air intake grille

Arm

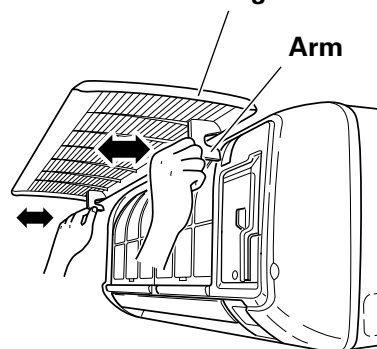

#### CAUTION

**When using a footstool or the like, be careful not to let it tip over.**

### Washing the grille with water

- Clean the grille gently using a soft sponge, or the like. Then wipe away any remaining moisture.
- Neutral detergent may be used to remove stubborn dirt. Then rinse thoroughly with water and wipe away any remaining moisture.

---

# Troubleshooting

If your air conditioner does not work properly, first check the following points before requesting service. If it still does not work properly, contact your dealer or service center.

Trouble	Possible Cause	Remedy
Air conditioner does not run at all.	1. Power failure. 2. Leakage circuit breaker tripped. 3. Line voltage is too low. 4. Operation button is OFF. 5. Batteries in remote control unit have run down.	1. Restore power. 2. Contact service center. 3. Consult your electrician or dealer. 4. Press the button again. 5. Replace batteries.
OPERATION lamp flashes and air conditioner does not operate.	Trouble in wiring system.	Contact service center.
Compressor runs but soon stops.	Obstruction in front of condenser coil.	Remove obstruction.
Poor cooling performance.	1. Dirty or clogged air filter. 2. Heat source or many people in room. 3. Doors and/or windows are open. 4. Obstacle near air intake or air discharge port. 5. Thermostat is set too high for cooling.	1. Clean air filter to improve airflow. 2. Eliminate heat source if possible. 3. Shut them to keep the heat out. 4. Remove it to ensure good airflow. 5. Set the temperature lower.
Clicking sound is heard from the air conditioner.	During cooling operation, plastic parts may shrink due to sudden temperature change. In this event, a clicking sound may occur.	This is normal, and the sound will soon disappear.
OPERATION lamp lights but outdoor unit will not run.	1. The use of portable telephones near the air conditioner may cause disturbance to its normal operation.	1. Turn off the power then restart the air conditioner after 1 minute.  2. Consult your dealer.

---

## Tips for Energy Saving

- Do not**
- **Block the air intake and outlet of the unit. If they are obstructed, the unit will not work well, and may be damaged.**
  - Let direct sunlight into the room. Use sunshades, blinds or curtains. If the walls and ceiling of the room are warmed by the sun, it will take longer to cool the room.
- Do**
- Always try to keep the air filter clean. (Refer to “Care and Cleaning”.) A clogged filter will impair the performance of the unit.
  - To prevent conditioned air from escaping, keep windows, doors and any other openings closed.



---

SANYO Electric Co.,Ltd  
Osaka, Japan

**SM700428** 12/99/200  
Printed in Japan