

SCB SPI: Low Level Driver Master

› **Description:**

- This example demonstrates SCB-SPI in Master Mode (Low level), MCU is set as master and PC/Aardvark set in slave Mode.

› **Target Device:**

- Traveo-II CYT2B6x devices

› **Hardware:**

- CYTVII-B-E-1M-100-CPU REV 1.0
- TVII Base Board (BB)

SCB SPI: Low Level Driver Master


› **Dependency:**

- Any example could be copied to the main “src” based on the interested core
- Aardvark to be configured as a slave
- Aardvark MOSI/8 – JP2/10 on BB
- Aardvark MISO/5 – JP2/9 on BB
- Aardvark SCLK/7 – JP2/12 on BB
- Aardvark SS/9 – JP2/13 on BB
- Aardvark GND/1 to any GND on the CPU/BB board

› **Expectation:**

- MCU is set in Master Mode, Aardvark shall be set in slave mode and click start.
- MCU prepares data and sends it to the PC. The screen of Aardvark will show the data from MCU.

SCB SPI: Low Level Driver Master

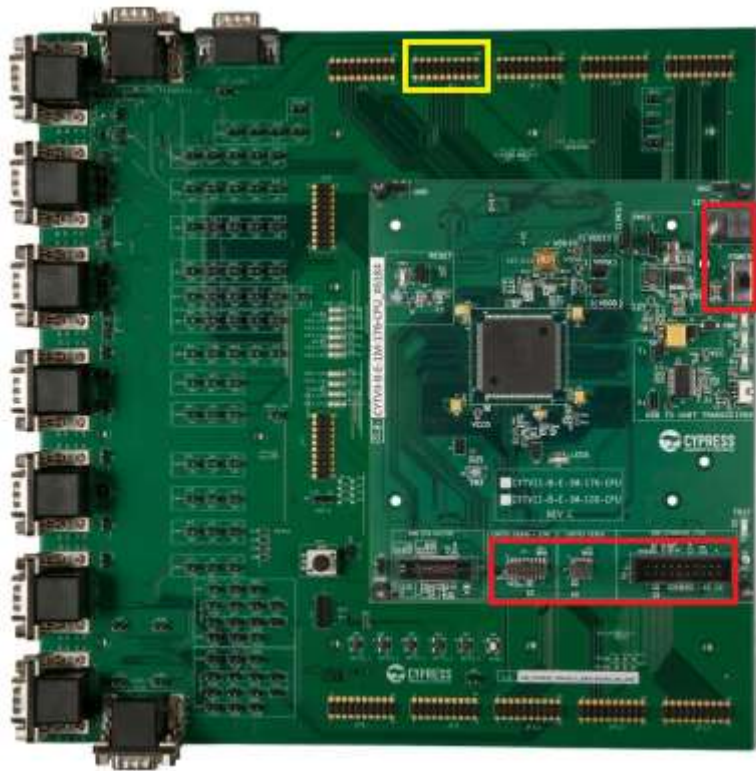

- › **Legend:**
- **Red block** for power, debug and USB (Mandatory)
 - **Yellow block** for the example specific connections