

# SCB SPI: High Level Driver Slave

---

## › **Description:**

- This example demonstrates SCB-SPI in Slave Mode (High level), MCU is set as slave and PC/Aardvark set in master Mode.

## › **Target Device:**

- Traveo-II CYT2B9x devices

## › **Hardware:**

- CYTVII-B-E-176-CPU BOARD REV.C (REV\_C)
- TVII Base Board (BB)

## SCB SPI: High Level Driver Slave


### › **Dependency:**

- Any example could be copied to the main “src” based on the interested core
- Aardvark to be configured as a master
- Aardvark MOSI/8 - JP6/14 on BB
- Aardvark MISO/5 - JP6/15 on BB
- Aardvark SCLK/7 - JP6/9 on BB
- Aardvark SS/9 - JP6/8 on BB
- Aardvark GND/1 to any GND on the CPU/BB board

### › **Expectation:**

- MCU is set in Slave Mode, Aardvark shall be set in master mode and click start.
- PC/Aardvark sends data to MCU and receive data back from the MCU.  
Aardvark will show the sent and the received data.

# SCB SPI: High Level Driver Slave

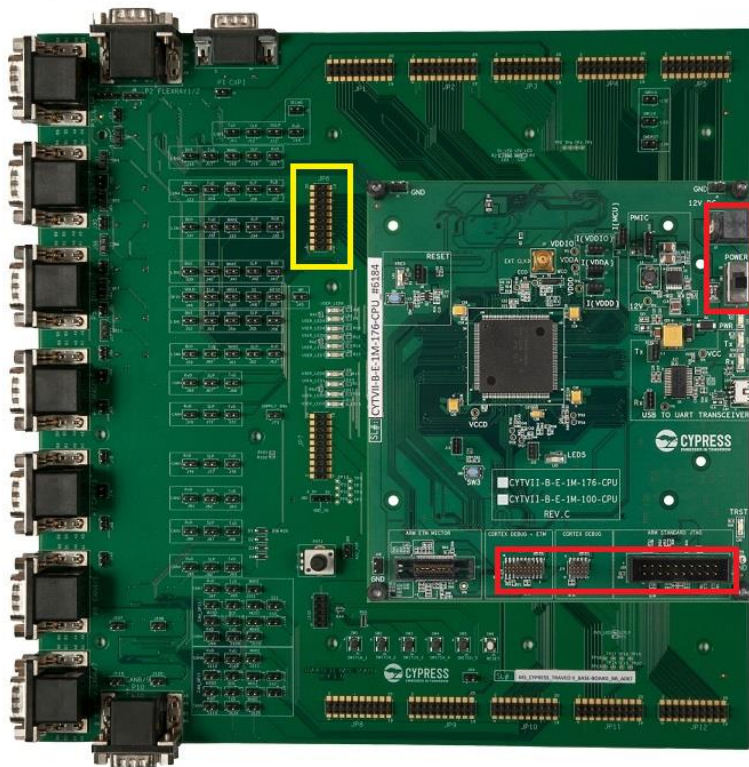

## › Legend:

- Red block for power, debug and USB (Mandatory)
- Yellow block for the example specific connections