

SCB I2C: Master Mode

› **Description:**

- This example demonstrates SCB-I2C in Master Mode, MCU is set as master and PC/Aardvark in slave Mode.

› **Target Device:**

- Traveo-II CYT2BLx devices

› **Hardware:**

- CYTVII-B-E-176-CPU BOARD REV.C (REV_C)
- TVII Base Board (BB)

SCB I2C: Master Mode


› **Dependency:**

- Any example could be copied to the main “src” based on the interested core
- Aardvark to be configured for a slave address “0x08”
- Aardvark SCL/0 - P1_0_SCB0_I2C_SCL (JP8/4 on BB)
- Aardvark SDA/2 - P1_1_SCB0_I2C_SDA (JP8/3 on BB)
- Aardvark GND/1 to any GND on the CPU/BB

› **Expectation:**

- MCU is set in Master Mode, Aardvark shall be set in slave mode and click start.
- MCU prepares data and sends it to the PC. The screen of Aardvark will show the data from MCU.

SCB I2C: Master Mode

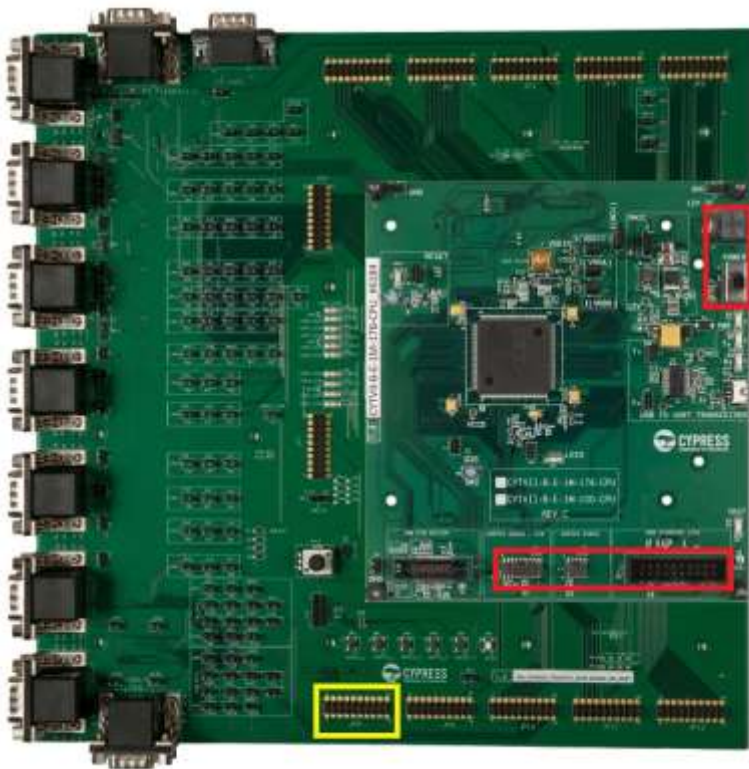

> Legend:

- Red block for power, debug and USB (Mandatory)
- Yellow block for the example specific connections