

## AMS Net ID Setting


Michael Balsfulland  
CNC Applikation  
[m.balsfulland@beckhoff.com](mailto:m.balsfulland@beckhoff.com)

26.8.2015 V 1.0

The name (here **Win7-32**) of the actual connected System is displayed in the header line of the HMI, if it is connected to a remote system and not connected locally.



If the actual user has the security level “administrator” a double click on the label (Win7-32) will open a dialog:

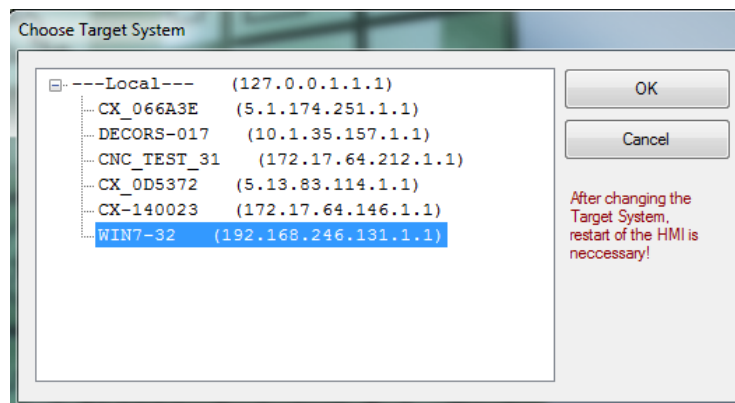

After choosing a target system and acknowledging this with pressing OK, the setting for the target system is changed and will be active after the next start of the HMI.